

Quick Start Guide



Login from Web Browser

or see the reverse of this page to login with Install Wizard

Connect Switch to PC

Power up the switch and connect it via Ethernet LAN cable to the Ethernet RJ45 connector on PC.



2 Check the LED Status

Step 1: Power up the switch and connect it to the PC using an Ethernet cable.

Step 2: If the port LED is blinking, the switch is ready.

0	
0	Emmany Emmany Emmany Emmany
0	

Set Up IP Address of PC

Step 1: Press WinKey+R and type "ncpa.cpl" command.

Step 2: Right-click on your local adapter and select **Properties**

Step 3: In the Local Area Connection Properties window highlight Internet Protocol Version 4 (TCP/IPv4) then click the Properties button.

Step 4: Select the radio button Use the following IP address and enter in the IP for the PC (in between 192.168.1.2 and 192.168.1.254), Subnet Mask (e.g. 255.255.255.0), and Default Gateway that corresponds with your network setup. Then enter your Preferred and Alternate DNS server addresses.

Step5: Click OK to change the PC's IP address.

4 Enter the Factory Default IP

Run your Web browser on the PC, enter the factory default IP address, so as to access the switch's Web interface.

Default IP 192.168.1.1 Subnet Mask 255.255.255.0

6 Login Page

If your PC is configured correctly, you will see the login page of the switch below.

Username		
Password		
	Login	

6 Login to the Switch

Enter the factory default username and password in login page. Click "Login" to log into the switch.

Default Username admin
No Factory Default Password





SOUNDTUBE

Login with Install Wizard

or see the reverse of this page to login from Web Browser

Download Install Wizard

Download the Install Wizard via either of the three following ways:

- http://www.channel-platform.com/INSTALL-WIZ ARD/
- goo.gl/od0ZKr
- QR code below



Connect Switch to PC

 
Power up the switch and connect it via Ethernet LAN cable to the Ethernet RJ45 connector on PC.



3 Check the LED Status

Step 1: Power up the switch and connect it to the PC using an Ethernet cable.

Step 2: Check if the port LED is blinking which means the switch is ready.



Execute Install Wizard

Run the Install Wizard on your PC.

The Install Wizard will auto scan the switches on the local network once it is executed.

Click **Scan Icon** to discover other switches which are just being added to the network

6 Configuration

Step 1: Select a switch you want to configure.

Step 2: Click the **Configure Icon** and login.

Step 3: Mark the "Management" as "Enable".

Step 4: Configure basic features thru Install Wizard (e.g. IP, NTP, Password, etc).

Default Username admin
No Factory Default Password
Step 3 is for Unmanaged + Switch only.

6 Login to Web UI

Step 1: Select a switch you want to configure.

Step 2: Click the **Configure Icon** and login.

Step 3: Mark the "Management" as "Enable".

Step 4: Click the **Web GUI Icon** and login.

Default Username admin
No Factory Default Password
Step 3 is for Unmanaged + Switch only.