

Pioneer Dj

DJ SYSTEM

XDJ-RX2

[pioneerdj.com/support/
rekordbox.com](http://pioneerdj.com/support/rekordbox.com)

For FAQs and other support information for this product, visit the above site.

Operating Instructions (Quick Start Guide)

IMPORTANT



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

CAUTION:
TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

D3-4-2-1-1b_A1_En

NOTE

THE NO USER-SERVICEABLE PARTS COMPARTMENT WARNING IS LOCATED ON THE APPLIANCE BOTTOM.

D3-7-13-68_A1_En

IMPORTANT



Ce symbole de l'éclair, placé dans un triangle équilatéral, a pour but d'attirer l'attention de l'utilisateur sur la présence, à l'intérieur du coffret de l'appareil, de "tensions dangereuses" non isolées d'une grandeur suffisante pour représenter un risque d'électrocution pour les êtres humains.

ATTENTION

**DANGER D'ÉLECTROCUTION
NE PAS OUVRIR**

ATTENTION :
POUR ÉVITER TOUT RISQUE D'ÉLECTROCUTION, NE PAS ENLEVER LE COUVERCLE (NI LE PANNEAU ARRIÈRE). AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR NE SE TROUVE À L'INTÉRIEUR. CONFIER TOUT ENTRETIEN À UN PERSONNEL QUALIFIÉ UNIQUEMENT.



Ce point d'exclamation, placé dans un triangle équilatéral, a pour but d'attirer l'attention de l'utilisateur sur la présence, dans les documents qui accompagnent l'appareil, d'explications importantes du point de vue de l'exploitation ou de l'entretien.

D3-4-2-1-1b_A1_Fr

REMARQUE

L'AVERTISSEMENT DE PIÈCES NON RÉPARABLES PAR L'UTILISATEUR SE TROUVE SUR LE DESSOUS DE L'APPAREIL.

D3-7-13-68_A1_Fr

IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



D3-7-13-69_En

WARNING

This equipment is not waterproof. To prevent a fire or shock hazard, do not place any container filled with liquid near this equipment (such as a vase or flower pot) or expose it to dripping, splashing, rain or moisture.

D3-4-2-1-3_A1_En

WARNING

This product equipped with a three-wire grounding (earthed) plug - a plug that has a third (grounding) pin. This plug only fits a grounding-type power outlet. If you are unable to insert the plug into an outlet, contact a licensed electrician to replace the outlet with a properly grounded one. Do not defeat the safety purpose of the grounding plug.

D3-4-2-1-6_A1_En

WARNING

To prevent a fire hazard, do not place any naked flame sources (such as a lighted candle) on the equipment.

D3-4-2-1-7a_A1_En

Operating Environment

Operating environment temperature and humidity:
+5 °C to +35 °C (+41 °F to +95 °F); less than 85 %RH (cooling vents not blocked)

Do not install this unit in a poorly ventilated area, or in locations exposed to high humidity or direct sunlight (or strong artificial light).


D3-4-2-1-7c*_A2_En

VENTILATION CAUTION

When installing this unit, make sure to leave space around the unit for ventilation to improve heat radiation (at least 5 cm at rear, and 5 cm at each side).

D3-4-2-1-7d*_A1_En

CAUTION

 
The  switch on this unit will not completely shut off all power from the AC outlet. Since the power cord serves as the main disconnect device for the unit, you will need to unplug it from the AC outlet to shut down all power. Therefore, make sure the unit has been installed so that the power cord can be easily unplugged from the AC outlet in case of an accident. To avoid fire hazard, the power cord should also be unplugged from the AC outlet when left unused for a long period of time (for example, when on vacation).

D3-4-2-2-2a*_A1_En

When using this product, confirm the safety information shown on the bottom of the unit.

D3-4-2-2-4_B1_En

The graphical symbol  placed on the product means alternating current.

The graphical symbol  placed on the product means direct current.

The graphical symbol  placed on the product means Class II equipment.

D3-8-2-4_A1_En

CAUTION

This product is evaluated in moderate and tropical climate condition.

D3-8-2-1-7a_A1_En

AVERTISSEMENT

Cet appareil n'est pas étanche. Pour éviter les risques d'incendie et de décharge électrique, ne placez près de lui un récipient rempli d'eau, tel qu'un vase ou un pot de fleurs, et ne l'exposez pas à des gouttes d'eau, des éclaboussures, de la pluie ou de l'humidité.

D3-4-2-1-3_A1_Fr

AVERTISSEMENT

Cet appareil est muni d'une fiche de mise à la terre (masse) à trois fils. Comme la fiche présente une troisième broche (de terre), elle ne peut se brancher que sur une prise de courant, prévue pour une mise à la terre. Si vous n'arrivez pas à insérer la fiche dans la prise de courant, contactez un électricien qualifié pour faire remplacer la prise par une qui soit mise à la terre. N'annulez pas la fonction de sécurité que procure cette fiche de mise à la terre.

D3-4-2-1-6_A1_Fr

AVERTISSEMENT

Pour éviter les risques d'incendie, ne placez aucune flamme nue (telle qu'une bougie allumée) sur l'appareil.

D3-4-2-1-7a_A1_Fr

Milieu de fonctionnement

Température et humidité du milieu de fonctionnement : De +5 °C à +35 °C (de +41 °F à +95 °F) ; Humidité relative inférieure à 85 % (orifices de ventilation non obstrués)

N'installez pas l'appareil dans un endroit mal ventilé ou un lieu soumis à une forte humidité ou en plein soleil (ou à une forte lumière artificielle).


D3-4-2-1-7c*_A1_Fr

PRÉCAUTION DE VENTILATION

Lors de l'installation de l'appareil, veillez à laisser un espace suffisant autour de ses parois de manière à améliorer la dissipation de chaleur (au moins 5 cm à l'arrière et 5 cm de chaque côté).

D3-4-2-1-7d*_A1_Fr

ATTENTION


L'interrupteur  de cet appareil ne coupe pas complètement celui-ci de sa prise secteur. Comme le cordon d'alimentation fait office de dispositif de déconnexion du secteur, il devra être débranché au niveau de la prise secteur pour que l'appareil soit complètement hors tension. Par conséquent, veillez à installer l'appareil de telle manière que son cordon d'alimentation puisse être facilement débranché de la prise secteur en cas d'accident. Pour éviter tout risque d'incendie, le cordon d'alimentation sera débranché au niveau de la prise secteur si vous prévoyez une période prolongée de non utilisation (par exemple avant un départ en vacances).

D3-4-2-2-2a*_A1_Fr

Lorsque vous utilisez ce produit, vérifiez les informations concernant la sécurité sous l'appareil.

D3-4-2-2-4_B1_Fr

Le symbole graphique  indiqué sur le produit représente le courant alternatif.

Le symbole graphique  indiqué sur le produit représente le courant continu.

Le symbole graphique  indiqué sur le produit représente un équipement de Classe II.

D3-8-2-4_A1_Fr

ATTENTION

Ce produit a été testé dans des conditions de climats tempéré et tropical.

D3-8-2-1-7a_A1_Fr

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

D8-10-1-2_A1_En

FEDERAL COMMUNICATIONS COMMISSION DECLARATION OF CONFORMITY

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Product Name: DJ SYSTEM

Model Number: XDJ-RX2

Responsible Party Name: PIONEER ELECTRONICS (USA) INC.
SERVICE SUPPORT DIVISION

Address: 1925 E. DOMINGUEZ ST. LONG BEACH, CA 90810-1003, U.S.A.

Phone: 1-800-421-1404

URL: <http://www.pioneerelectronics.com>

D8-10-4*_C1_En

[Supplied power cord]

The supplied power cord is designed specifically for 120 V. Do not use it with a voltage other than 120 V. Doing so may cause a fire or electric shock.

D3-7-14_PDJ_A1_En

[Cordon d'alimentation fourni]

Le cordon d'alimentation fourni est conçu spécialement pour une tension de 120 V. Ne l'utilisez pas avec une tension autre que 120 V.

Cela pourrait provoquer un incendie ou un choc électrique.

D3-7-14_PDJ_A1_Fr

Information to User

Alterations or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

D8-10-2_A1_En

This product is for general household purposes. Any failure due to use for other than household purposes (such as long-term use for business purposes in a restaurant or use in a car or ship) and which requires repair will be charged for even during the warranty period.

K041_A1_En

IMPORTANT NOTICE

THE MODEL NUMBER AND SERIAL NUMBER OF THIS EQUIPMENT ARE ON THE REAR OR BOTTOM. RECORD THESE NUMBERS ON PAGE 23 FOR FUTURE REFERENCE.

D36-AP9-3*_A1_En

Recording equipment and copyright: You may use this product only to reproduce or copy materials for which you own the copyright or have obtained permission to copy from the copyright owner or for which you otherwise have a legal right to reproduce or copy. Unless you own the copyright or have obtained permission from the copyright owner or otherwise have a legal right to reproduce or copy, you may be violating the law, including copyright law, and may be subject to payment of damages and other remedies.

K018US_A1_En

POWER-CORD CAUTION

Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Do not place the unit, a piece of furniture, etc., on the power cord, or pinch the cord. Never make a knot in the cord or tie it with other cords. The power cords should be routed such that they are not likely to be stepped on. A damaged power cord can cause a fire or give you an electrical shock. Check the power cord once in a while. When you find it damaged, ask your nearest service center or your dealer for a replacement.

S002*_A1_En

The Safety of Your Ears is in Your Hands

Get the most out of your equipment by playing it at a safe level – a level that lets the sound come through clearly without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing. Sound can be deceiving. Over time, your hearing “comfort level” adapts to higher volumes of sound, so what sounds “normal” can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

ESTABLISH A SAFE LEVEL:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.
- Once you have established a comfortable sound level, set the dial and leave it there.

BE SURE TO OBSERVE THE FOLLOWING GUIDELINES:

- Do not turn up the volume so high that you can't hear what's around you.
- Use caution or temporarily discontinue use in potentially hazardous situations.
- Do not use headphones while operating a motorized vehicle; the use of headphones may create a traffic hazard and is illegal in many areas.

5001a_A1_En

CAUTION

This product satisfies FCC regulations when shielded cables (with Ferrite-cores attached) and connectors are used to connect the unit to other equipment. To prevent electromagnetic interference with electric appliances such as radios and televisions, use shielded cables (with Ferrite-cores attached) and connectors for connections.

D8-10-3b_A1_En

Contents

How to read this manual

- Thank you for purchasing this Pioneer DJ product.
Read this manual and the Operating Instructions that is available on the Pioneer DJ site before using the product. Both contain important information that you should understand to properly use the product. Be sure to read the "Safety Precautions". Keep this manual and the "Warranty" included at the end of this manual in a safe place.
For obtaining the Operating Instructions for this product, see *Obtaining the Operating Instructions* (p. 7).
- In this manual, names of channels and buttons on the product, etc., are enclosed in square brackets ([]). (e.g. [CH1], [USB STOP] button)

01 Before start

Features.....	7
Obtaining the Operating Instructions.....	7
Accessories.....	7
Preparing the software.....	7
Supported media.....	8

02 Part names

Power section.....	9
USB section.....	9
Deck section.....	9
Browse section.....	10
Mixer/effect section.....	10

03 Connections

Connecting input/output terminals.....	12
--	----

04 Operation

Playback.....	15
Outputting sound.....	15
Monitoring sound with headphones.....	16
Turning off the system.....	16

05 Additional information

Troubleshooting.....	17
Error messages.....	19
Changing the settings.....	19
Cleaning the touch display.....	19
Trademarks and registered trademarks.....	19
Software license notice.....	19
Cautions on copyrights.....	19
Specifications.....	20

Before start

Features

This unit is a system integrating a DJ player and DJ mixer in a single unit and inherits the technology of the Pioneer DJ CDJ series and DJM series, the world standard for club equipment. Full-fledged DJ performances can be made using tracks on USB devices and computers.

Obtaining the Operating Instructions

Some operating instructions are provided in PDF files. Adobe® Reader® is required to view the PDF files.

1 Launch a web browser on a computer and access the following Pioneer DJ support site.

pioneerdj.com/support/

2 Click [Manuals] under [XDJ-RX2].

3 Click on the desired language on the download page.

Download of the Operating Instructions starts.

Accessories

- Power cord
- USB cable
- Operating Instructions (Quick Start Guide) (this document)
- Software license notice
- rekordbox dj license key card

Caution

The license key cannot be reissued. Be careful not to lose it.

Preparing the software

Music management software, rekordbox, and the driver software are not included with this product.

Access the rekordbox site and Pioneer DJ support site, and download the rekordbox software and driver software respectively.

- Prepare a computer, network devices, etc., that are required to access the internet.

About rekordbox and rekordbox dj

- rekordbox is a composite software that enables track management and DJ performances. Music files on computers and mobile devices can be managed (analysis, setting, creation, and history storage) with the music management software rekordbox. Excellent DJ performances can be achieved by using the music files managed by rekordbox together with this unit.
- The DJ performance function of rekordbox is called rekordbox dj. Enter the license key included with this product to use rekordbox dj.
- For information on the latest system requirements, compatibility, and supported operating systems of rekordbox, see [System Requirements] from [Support] on the Pioneer DJ website (rekordbox.com).
- Operation on all computers is not guaranteed even if the computers meet the required operating environment.
- The CPU and hard disc may not provide sufficient processing capabilities depending on the power-saving setting, etc. on the computer. Confirm that the computer meets conditions to provide constant high-performance (for example, connecting the computer to a power

outlet to maintain a stable power supply) especially when using rekordbox on a laptop.

- A separate contract with an internet service provider and payment of the utilization fee are required to access the internet.
- Use the latest version/service pack of the operating system.

❖ Obtaining the rekordbox software

1 Launch a web browser on the computer and access the rekordbox.com site below.

rekordbox.com

2 Click [Download] in the [Download] menu of "rekordbox.com".

The rekordbox download page is displayed.

3 Click the download banner.

Downloading of rekordbox starts.

❖ Installation (Windows)

Do not connect this unit and the computer until the installation is completed.

- Log in to the computer as the administrator before installation.
- Close all the applications running on the computer before installation.

1 Unzip the downloaded rekordbox software file.

2 Double-click the rekordbox software to launch the installer.

3 Read the terms of the license agreement carefully, and if you agree, select [I agree to the license terms and conditions], then click [Next].

After the installation destination is specified, the installation starts.

- If you do not agree to the license agreement, click [Close] to cancel the installation.

4 If the installation completion screen appears, click [Close] to close the rekordbox installer.

❖ Installation (Mac OS)

Do not connect this unit and the computer until the installation is completed.

- Close all the applications running on the computer before installation.

1 Unzip the downloaded rekordbox software file.

2 Double-click the rekordbox software to launch the installer.

3 Read the license agreement, select [Agree] if you agree to the terms.

Proceed by following the instructions on the screen.

- If you do not agree to the contents of the license agreement, click [Disagree] to quit installation.

4 When the installation completion screen appears, click [Close] to close the rekordbox installer.

❖ rekordbox (iOS/Android)

Tracks managed by rekordbox can be played by connecting the mobile device on which rekordbox (iOS/Android) is installed via USB. For the supported devices, see the Pioneer DJ website (rekordbox.com).

- For details on installing rekordbox (iOS/Android), see the Pioneer DJ website (rekordbox.com).

Driver software

❖ Audio driver software

- Dedicated driver software is required for outputting audio signals from a computer.

❖ USB (LINK Export) connections driver software for rekordbox (Mac/Windows)

- Dedicated driver software is required for connecting the unit and rekordbox (Mac/Windows) via USB (LINK Export).

❖ Obtaining the driver software

1 Launch a web browser on a computer and access the following Pioneer DJ support site.

pioneerdj.com/support/

- For information on installing the driver software, see the Pioneer DJ support site or the Operating Instructions for this product that is available on the support site.

Supported media

This unit can play music files stored on USB mass storage devices (external hard disks, portable flash memory devices, etc.).


Supported file systems	FAT16, FAT32, HFS+ (NTFS is not supported.)
------------------------	---

- Information such as cue points, loops points and hot cues can be stored via USB.
- Depending on the USB device you are using, you may not achieve the expected performance.
- There is no guarantee that all USB devices will operate on this unit.

For more information, refer to the Operating Instructions that is available on the Pioneer DJ support site.


Part names

For more information, refer to the Operating Instructions that is available on the Pioneer DJ support site.

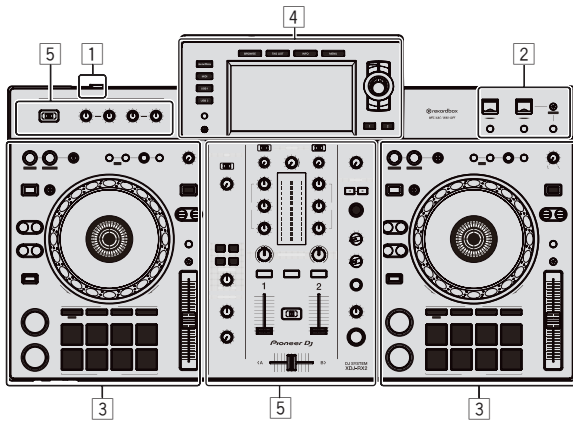


- 1 Power section (page 9)
- 2 USB section (page 9)
- 3 Deck section (page 9)
- 4 Browse section (page 10)
- 5 Mixer/effect section (page 10)

Power section

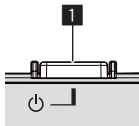


- 1 **⏻ switch**
This switch is used to switch between standby and on.

USB section

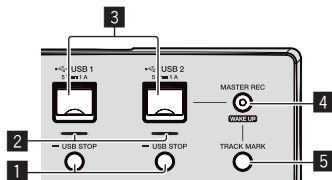

- 1 USB 1, 2 STOP buttons
- 2 USB 1, 2 indicators
- 3 USB 1, 2 slots
- 4 MASTER REC (WAKE UP) button
- 5 TRACK MARK button


Deck section

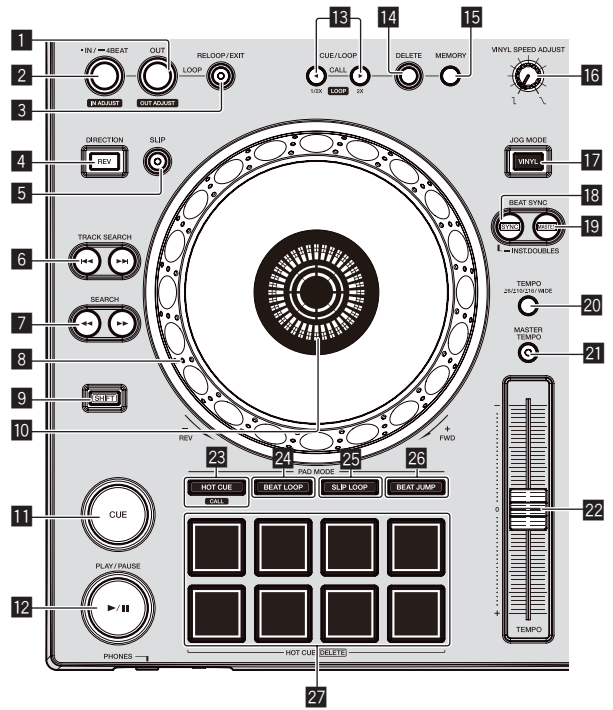

- 1 LOOP OUT (OUT ADJUST) button
- 2 LOOP IN/4BEAT (IN ADJUST) button
- 3 RELOOP/EXIT button
- 4 DIRECTION, REV button
- 5 SLIP button
- 6 TRACK SEARCH ◀◀, ▶▶ buttons
- 7 SEARCH ◀, ▶ buttons
- 8 Jog dial
- 9 SHIFT button
- 10 Jog dial display section
- 11 CUE button
- 12 ▶/|| (PLAY/PAUSE) button
- 13 CUE/LOOP CALL, ◀ (LOOP 1/2X), ▶ (LOOP 2X) buttons
- 14 DELETE button
- 15 MEMORY button
- 16 VINYL SPEED ADJUST control
- 17 VINYL MODE button
- 18 SYNC/INST.DOUBLES button
- 19 MASTER button
- 20 TEMPO RANGE button
- 21 MASTER TEMPO button
- 22 TEMPO slider
- 23 HOT CUE/CALL button



- 24 BEAT LOOP button
- 25 SLIP LOOP button
- 26 BEAT JUMP button
- 27 Performance pads

Browse section

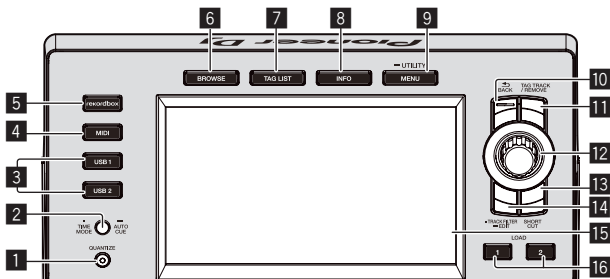

- 1 QUANTIZE button
- 2 TIME MODE (AUTO CUE) button
- 3 USB 1, 2 buttons
- 4 MIDI button
- 5 rekordbox button
- 6 BROWSE button
- 7 TAG LIST button
- 8 INFO button
- 9 MENU (UTILITY) button
- 10 BACK button
- 11 TAG TRACK/REMOVE button
- 12 Rotary selector
- 13 SHORTCUT button
- 14 TRACK FILTER/EDIT button
- 15 Main display
- 16 LOAD 1/2 button

 Mixer/effect section

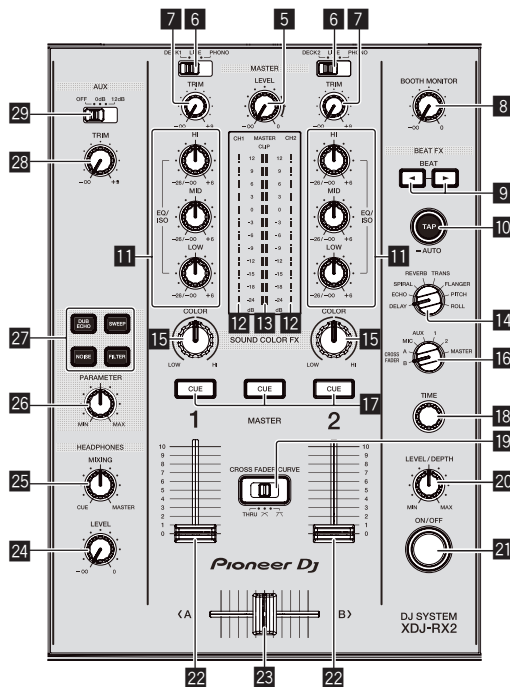

- 1 MIC (OFF, ON, TALK OVER) selector switch
- 2 MIC (OFF, ON, TALK OVER) indicator
- 3 MIC EQ (HI, LOW) controls
- 4 MIC LEVEL (MIC1, MIC2) controls
- 5 MASTER LEVEL control
- 6 DECK1, 2, LINE1, 2, PHONO1, 2 selector switch
- 7 TRIM control
- 8 BOOTH MONITOR control
- 9 BEAT \leftarrow, \rightarrow buttons
- 10 TAP (AUTO) button
- 11 EQ/ISO (HI, MID, LOW) controls
- 12 Channel Level Indicator
- 13 Master level indicator
- 14 BEAT EFFECTS selector switch
- 15 COLOR control
- 16 Effect channel selector switch
- 17 CUE (CH1, CH2, MASTER) buttons
- 18 TIME control
- 19 CROSS FADER CURVE (THRU, \wedge , ∇) (crossfader curve selector switch)
- 20 LEVEL/DEPTH control


- 21 ON/OFF button
- 22 Channel fader
- 23 Crossfader
- 24 HEADPHONES LEVEL control
- 25 HEADPHONES MIXING control
- 26 PARAMETER control
- 27 SOUND COLOR FX (DUB ECHO, SWEEP, NOISE, FILTER) buttons
- 28 AUX TRIM control
- 29 AUX selector switch

Connections

- Connect the power cord to a power outlet after all the connections are completed.
- Turn off this unit and disconnect the power cord from the power outlet before connecting components or changing the connections.
- Refer to the operating instructions for the components to be connected.
- Be sure to use the supplied power cord.
- Connect this unit and the computer directly using the included USB cable.

Connecting input/output terminals

Rear panel, front panel

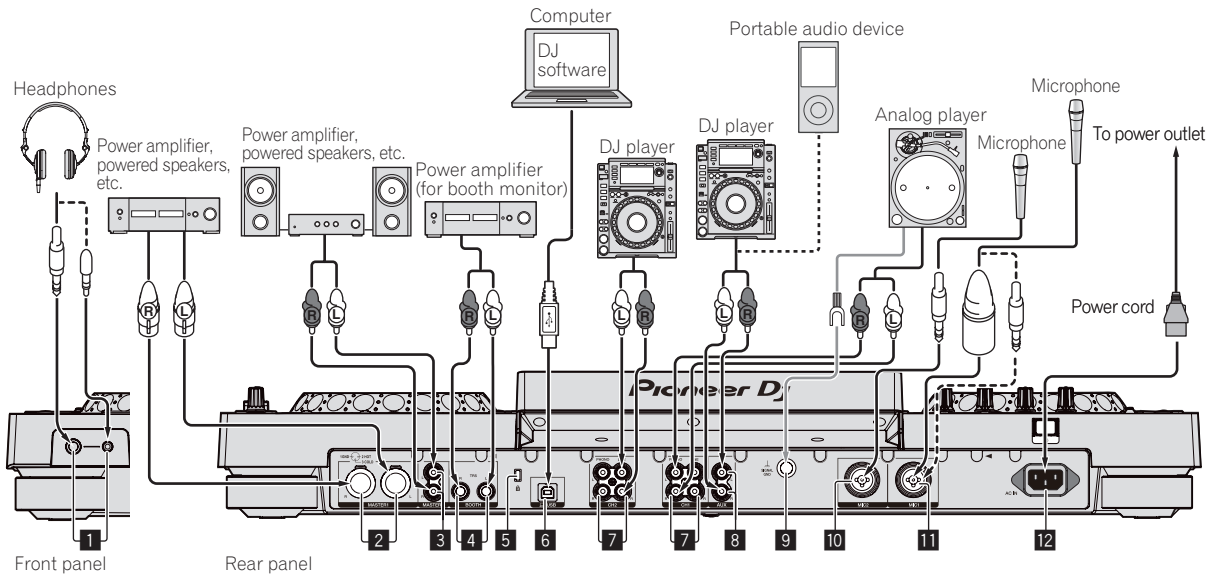

1 PHONES terminals

2 MASTER1 terminals

- Be careful not to accidentally insert the power cord of another unit to [MASTER 1] terminal.
- Do not connect the terminal that can supply phantom power to the [MASTER 1] terminal.

3 MASTER2 terminals

4 BOOTH terminals

5 Kensington security slot

6 USB terminal

7 LINE/PHONO terminals

8 AUX terminal

9 SIGNAL GND terminal

10 MIC2 terminal

11 MIC1 terminal

12 AC IN


Basic style

Playback on this unit is performed mainly using tracks prepared with rekordbox installed on a computer.

For rekordbox operations, see the rekordbox (Mac/Windows) user's manual from the [Help] menu of rekordbox (Mac/Windows).

❖ PRO DJ LINK (USB Export)

You can play music files prepared using rekordbox on this unit and also use the settings such as playlists, cues, loops and hot cues set by rekordbox. Store music files and settings in a memory device (flash memory, hard disk, etc.) and connect it to this unit. Using PRO DJ LINK eliminates the need to bring a computer into the DJ booth.

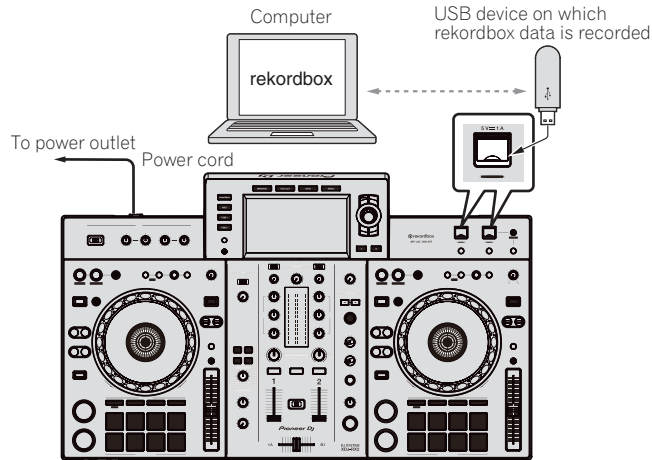

- 1 Connect headphones to the [PHONES] terminal.
- 2 Connect powered speakers, power amplifier, etc. to the [MASTER1] or [MASTER2] terminal.
 - To output sound from the [BOOTH] terminals, connect speakers, etc. to the [BOOTH] terminals.
- 3 Connect the power cord to the unit, and then connect the power plug to the power outlet.
- 4 Press the [⏻] switch on the rear panel of this unit to turn this unit on.
- 5 Turn on the devices connected to the output terminals (such as a power amplifier or powered speakers).
 - When a microphone, DJ player or other external device is connected to the input terminals, the connected device also turns on.


❖ PRO DJ LINK (LINK Export)

- When a computer on which rekordbox is installed is taken into the DJ booth and connected to this unit using a USB cable, tracks in rekordbox can be selected and played. This makes it possible to use the information such as playlists, cues, loops and hot cues that have been set ahead of time with rekordbox for performances.
- When a mobile device on which rekordbox (iOS/Android) is installed is connected using a USB cable, tracks in rekordbox can be selected and played. This makes it possible to use the information such as playlists, cues, loops and hot cues that have been set ahead of time with rekordbox for performances.
- Install the driver software before connecting a USB device to a computer on which rekordbox (Mac/Windows) is installed. For details, see *Driver software* on page 8.

iPod and iPhone that can be connected to this product

- This product is compatible with iPhone7, iPhone7 Plus, iPhone SE, iPhone 6s, iPhone 6s Plus, iPhone 6, iPhone 6 Plus, iPhone 5s, iPhone 5c, iPhone 5, iPhone 4s, and iPod touch (6th and 5th generations).
- For the latest supported devices, see the following Pioneer DJ website.
rekordbox.com

When using a USB cable

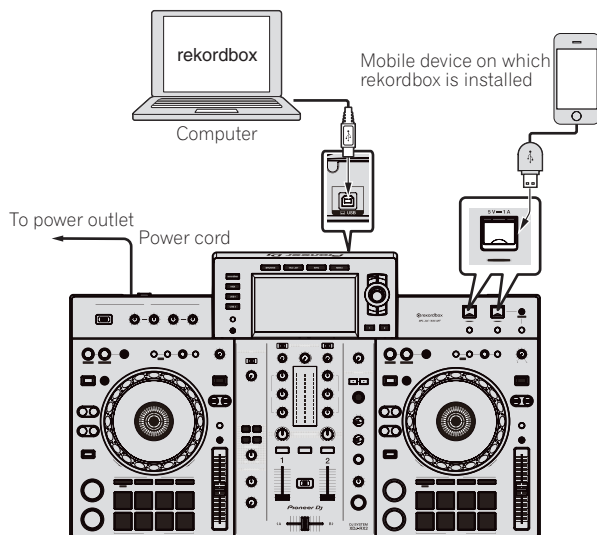

- 1 Connect the unit and the computer by using a USB cable, or connect the unit and the mobile device by inserting the USB cable in the USB device insertion slot.
- 2 Connect headphones to the [PHONES] terminal.
- 3 Connect powered speakers, power amplifier, etc. to the [MASTER1] or [MASTER2] terminal.
 - To output sound from the [BOOTH] terminals, connect speakers, etc. to the [BOOTH] terminals.
- 4 Turn on the power of the computer or the mobile device, and then launch rekordbox.
- 5 Connect the power cord to the unit, and then connect the power plug to the power outlet.
- 6 Press the [⏻] switch on the rear panel of this unit to turn this unit on.
- 7 Turn on the devices connected to the output terminals (such as a power amplifier or powered speakers).
 - When a microphone, DJ player or other external device is connected to the input terminals, the connected device also turns on.

Operation

For more information, refer to the Operating Instructions that is available on the Pioneer DJ support site.

Playback

This section describes basic track selection operations and how to switch the screen.

Playing music files on media connected to this unit

1 Open the USB slot cover and connect a USB device.

2 Press a media button (either [USB1] or [USB2]).

Tracks and folders on the connected USB device are displayed in a list. You can switch the device from which to display the contents to the main display.

[**USB1**] button: Displays the contents of the USB device connected to the USB1 slot.

[**USB2**] button: Displays the contents of the USB device connected to the USB2 slot.

- The rekordbox library is displayed if it is stored in the connected USB device.

3 Rotate the rotary selector.

Move the cursor to select an item.

- Press the rotary selector to move to a lower level in the folder. Press the [**BACK**] button to return to the level above.
- When the [**BACK**] button is pressed for over 1 second or the medium button for the medium being browsed is pressed, the display moves to the topmost level.

4 Use the rotary selector to select the track you want to load.

If the rotary selector is pressed while the cursor is placed over a track title, the track menu is displayed.

5 Press the [LOAD1, 2] button.

The track is loaded into the specified deck of the unit and begins playing.

- When a track has been loaded while pausing, press the [**▶/II (PLAY/PAUSE)**] button to start playback.
- When auto cue is turned on, the disc pauses at the audio start position. In this case, press the [**▶/II (PLAY/PAUSE)**] to start playback.

❖ If the medium contains the rekordbox library

The rekordbox library is displayed if it is stored in the connected USB device.

- Music files are displayed by categories (album, artist, etc.) set with rekordbox.

Playing the rekordbox library on a computer or mobile device

Music files are displayed by categories (album, artist, etc.) set with rekordbox.

1 Press the [rekordbox] button.

The rekordbox library is displayed on the main display of this unit.

- Press the [**USB**] button to select a mobile device connected by USB.

2 Rotate the rotary selector.

Move the cursor to select an item.

3 Use the rotary selector to select the track you want to load.

If the rotary selector is pressed while the cursor is placed over a track title, the track menu is displayed.

4 Press the [LOAD1, 2] button.

The track is loaded into the specified deck of the unit and begins playing.

Outputting sound

Check that the unit and the external devices are properly connected before outputting sound.

➔ *Connecting input/output terminals* (p.12)

Set the volume of the power amplifier or powered speakers connected to the [**MASTER1**] and [**MASTER2**] terminals to an appropriate level. Note that loud sound may be output if the volume is set too high.

Outputting the sound of channel 1 [CH1]

To output the sound of [CH 2] (channel 2), replace [CH1] with [CH 2], [DECK 1] with [DECK 2], [PHONO1] with [PHONO2], and [LINE1] with [LINE2] in the procedure below.

1 Switch the [DECK 1, LINE1, PHONO1] selector switch of [CH1].

Select the input source for [CH1] from the devices connected to this unit.

- [**DECK 1**]: Selects rekordbox, MIDI, USB1, USB2.
- [**LINE1**]: Selects the device connected to the [LINE1] terminals.
- [**PHONO1**]: Selects the device connected to the [PHONO1] terminals.

2 Rotate the [TRIM] control in the [CH1] section clockwise.

Adjust the level of sound input to the [CH1] terminal.

The [CH1] level indicator lights when audio signals are properly input to [CH1].

Rotate the [TRIM] control to confirm that the orange indicator lights up at the highest volume for the track.

Make sure that the red indicator does not light, or the sound may be distorted.

3 Move the [CH1] channel fader to the back side.

 
 
The level of the sound output from [CH1] terminals is adjusted.

4 Set the [CROSS FADER CURVE THRU, ,

Sets the curve characteristics of the crossfader.

5 Set the crossfader.

Switch the channel whose sound is output from the speakers.

- Left edge: The [CH1] sound is output.
- Center position: The sound of [CH1] and [CH 2] is mixed and output.
- Right edge: The [CH 2] sound is output.
- This operation is not necessary when the [CROSS FADER CURVE (THRU, , ) (crossfader curve selector switch) is set to [THRU].

6 Rotate the [MASTER LEVEL] control clockwise.

Sound is output from the speakers.

The master level indicator lights.

Rotate the [MASTER LEVEL] control to confirm that the orange indicator lights up at the highest volume for the track.

- Make sure that the master level indicator does not light, or the sound may be distorted.

Monitoring sound with headphones

1 Connect headphones to the [PHONES] terminal.

2 Press the [CUE] button of the channel to be monitored.

3 Rotate the [HEADPHONES MIXING] control.

Adjust the balance of the volume between the channel selected with the [CUE] button and **MASTER**.

4 Rotate the [HEADPHONES LEVEL] control.

Adjust the volume of the headphones.

Setting monitor output

The **[MONO SPLIT, STEREO]** setting can be changed with **UTILITY**.

- **[MONO SPLIT]**: Outputs the sound of the channel selected with the [CUE] button to [L] and the sound of **MASTER** to R.
- **[STEREO]**: Outputs the sound selected with the [CUE] button in stereo.

For details on the functions, see the Operating Instructions for this product.

Turning off the system

1 Press the [USB STOP] button for over 2 seconds.

Do not disconnect the USB device or turn off this unit while the USB indicator is lit or flashing. Doing so could delete the management data of this unit and damage the USB device, resulting in unreadable data.

2 Disconnect the USB device.

3 Close the USB slot cover

4 Press the [⏻] switch.

This unit turns off.

Additional information

Troubleshooting

- Improper operation is often mistaken for trouble or a malfunction that occurred in the device. If something is wrong with this unit, check the following issues, and also access the following Pioneer DJ support site and check [FAQ] for [XDJ-RX2].
pioneerdj.com/support/
Some problems occurs due to the connected components. If the problem cannot be resolved after checking the connected components, ask the service center or dealer for repairs.
- The unit may not operate properly due to static electricity or other external influences. If this happens, normal operation can be sometimes restored by removing the power cord after turning the power off, and turning the power back on after inserting the power cord into the power outlet.

Power supply

Problem	Check	Remedy
The unit does not turn on.	Is the power cord properly connected?	Connect the power cord to an AC outlet. (page 12)
The indicators do not light up.	Is the [Ⓞ] switch turned on?	Turn on the [Ⓞ] switch.
The power suddenly turns off.	Is the auto standby function activated? (When auto standby is functioning, the [MASTER REC (WAKE UP)] button is lit in red.)	This unit is shipped with the auto standby function set to on. If you do not want to use the auto standby function, set [AUTO STANDBY] to [OFF] on the [UTILITY] screen.

Audio output





Problem	Check	Remedy
Sound is not output, or sound is too small.	Are the [DECK 1, LINE1, PHONO1] and [DECK 2, LINE2, PHONO2] selector switches set to the proper positions?	Change the input source for the channel using the [DECK 1, LINE1, PHONO1] and [DECK 2, LINE2, PHONO2] selector switches. (page 15)
	Are the [TRIM] control, channel faders, crossfader and [MASTER LEVEL] control set to the proper positions?	Set the [TRIM] control, channel faders, crossfader and [MASTER LEVEL] control to the proper positions. (page 15)
Sound is distorted.	Is the [MASTER LEVEL] control set to the proper position?	Adjust the [MASTER LEVEL] control so that the master channel level indicator lights around [0 dB] at the peak level. Set [ATT.] of [MASTER OUT] on the [UTILITY] screen to [-6 dB] or [-12 dB].
	Is the [TRIM] control set to the proper position?	Adjust the [TRIM] control to confirm that the channel level indicator lights up in orange at the highest volume. (page 15)
	Is the level of sound input to the [MIC] terminal set to an appropriate level?	Set the [MIC1, 2 LEVEL] control to the proper position.
Sound is not output, or the output sound is distorted or noisy.	Is this unit placed near a TV?	Turn the TV off, or place this unit farther away from the TV.
Microphone sound is not output or the volume is low.	Is the [MIC1, 2 LEVEL] control set to the proper position?	Set the [MIC1, 2 LEVEL] control to the proper position.
	Is the switch on this unit or the microphone turned off?	Turn the switch on.
Sound is distorted when an analog player is connected to the [PHONO] terminals of this unit. Or, lighting of the channel level indicator does not change when the [TRIM] control is turned.	Is an analog player with a built-in phono equalizer connected to this unit?	When using an analog player with a built-in phono equalizer, connect it to the [LINE] input terminals. (page 12) If the analog player with a built-in phono equalizer has a LINE, PHONO selector switch, set it to PHONO.
	Is an audio interface for computers connected between the analog player and this unit?	If the audio interface for computers has a line level output, connect it to the [LINE] input terminals. (page 12) If the analog player has a LINE, PHONO selector switch, set it to PHONO.

Display

Problem	Check	Remedy
Playing address is not displayed in the remaining time display.	—	Playing address may not be displayed for files recorded in VBR. This happens when it takes time for the unit to detect the length of the track and display the playing address.
The category is not displayed.	Is the rekordbox library information stored on the USB device?	Use a USB device containing the library information that is exported from rekordbox to the device..
	Is the USB device write-protected?	Disable write-protection on the USB device to make it writable.
The scale is not displayed.	Is the track over 15 minutes long?	The scale is not displayed for tracks whose playing time is over 15 minutes.
The enlarged waveform is not displayed.	Is the track over 60 minutes long?	The enlarged waveform is not displayed for tracks whose playing time is over 60 minutes.

Problem	Check	Remedy
The unit does not respond when the screen is touch, or the response is poor. The detected position is different from the position actually touched.	Deviation in touch display calibration.	Adjust touch screen detection with the [TOUCH DISPLAY CALIBRATION] settings on the [UTILITY] screen.

Functions and operations

Problem	Check	Remedy
The crossfader function does not work.	Is the [CROSS FADER CURVE (THRU,  )] (crossfader curve selector) switch set to [THRU] ?	Set the [CROSS FADER CURVE (THRU,  )] (crossfader curve selector) switch to a position other than [THRU] . (page 15)
The back cue function does not work.	Is a cue point set?	Set a cue point.
Beat effect does not work.	Is the [LEVEL/DEPTH] control set to the center position? Is the [TRIM] control set to the proper position?	Rotate the [LEVEL/DEPTH] control clockwise or counterclockwise. Set the [TRIM] control to the proper position.
Color effect does not work.	Is the [SOUND COLOR FX (DUB ECHO, SWEEP, NOISE, FILTER)] button pressed? Is the [COLOR] control set to the proper position?	Press the [SOUND COLOR FX (DUB ECHO, SWEEP, NOISE, FILTER)] button. Set the [COLOR] control to the proper position.
The SYNC function does not work.	Has the music file been analyzed?	Perform file analysis.
The SYNC function does not work even when files are analyzed.	Is the beat grid irregular? Is the beat grid properly tapped? Are the BPMs of the tracks in the two decks too different?	Set the beat grid properly. The SYNC function does work properly if the BPM of the track on the deck for which the [SYNC/INST.DOUBLES] button is pressed is not within the adjustable tempo range of the track on the deck for which the [SYNC/INST.DOUBLES] button is not pressed.
	Are you scratching?	The SYNC function is disabled while scratching.
Settings are not stored in the memory.	Did you turn this unit off directly after changing the settings?	Turn this unit off 10 seconds after changing the settings. Make sure to press the [⏻] switch to turn this unit off.
PRO DJ LINK does not work well.	Is the USB (LINK Export) connections driver software installed?	For a USB connection, install the USB (LINK Export) connections driver software.

USB devices

Problem	Check	Remedy
USB device is not recognized.	Is the USB device properly connected?	Connect the USB device securely (all the way in).
	Is the USB device connected via a USB hub?	Do not use a USB hub.
	Is the USB device supported by this unit?	This unit supports USB mass storage devices that can be used as external hard disks and portable flash memory devices.
	Is the file format supported by this unit?	Check that the file format of the connected USB device is supported by the unit. (page 8)
—	—	Turn the unit off, wait for 1 minute, and then turn the unit on.
It takes time to read USB devices (flash memory drives and hard discs).	Are many folders and files stored on the USB device?	It takes time to read a connected USB device if the device contains many folders and files.
	Are files other than music files stored on the USB device?	It takes time to read a connected USB device if files other than music files are stored in folders. Do not store files or folders other than music files on the USB device.
Playback does not start when a track is loaded from a USB device.	Are the files playable?	Check that the file format of the track is supported by the unit.
	Is the auto cue function enabled?	Press and hold the [TIME MODE/AUTO CUE] button for approximately 1 second or more, and disable the auto cue function.
Files cannot be played.	Is the file copyright-protected (by DRM)?	Copyright-protected files cannot be played.
Music files cannot be played.	Are the music files damaged?	Play music files that are not damaged.

DJ software

Problem	Check	Remedy
The DJ software on a computer cannot be operated.	Is the USB cable properly connected?	Connect the unit and the computer directly using the USB cable. USB hubs cannot be used. (page 12)
Sound of the DJ software is not properly output.	Are the DJ software settings and the [MIXER MODE] setting of this unit properly set?	Check the DJ software settings, and then check the settings of this unit on the [UTILITY] screen and set the proper signal path.
	Is the driver software properly set?	Set the driver software properly.
Sound is interrupted when using the DJ software.	Is the latency value of the driver software properly set?	Set the latency of the driver software to a suitable value.
		Set the latency of the DJ software to a suitable value.

Error messages

When this unit cannot operate normally, an error code appears on the display. Check the table below and take the measures indicated. If an error code not shown on the table below is displayed, or if the same error code is displayed again after taking the indicated action, contact your store of purchase.

Error code	Error type	Description of error	Cause and action
E-8302	CANNOT PLAY TRACK	Track data (files) on the storage device cannot be read correctly.	The track data (file) may be corrupted. → Check if the track can be played with another player that supports the same formats as this unit.
E-8304 E-8305	UNSUPPORTED FILE FORMAT	Music files that cannot be played with this unit are loaded.	The format is not supported by this unit. → Load music files in the supported formats.

Changing the settings

For more information, refer to the Operating Instructions that is available on the Pioneer DJ support site.

Cleaning the touch display

Do not use organic solvents, acids or alkalis for cleaning the surface of the touch display. Wipe with a dry soft cloth or a cloth immersed in neutral detergent and squeezed properly.

Trademarks and registered trademarks

- Pioneer DJ is a trademark of Pioneer DJ Corporation and is used under license. rekordbox is a registered trademark or trademark of Pioneer DJ Corporation.
- Windows is a registered trademark of Microsoft Corporation in the United States and other countries.
- Adobe and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.



- iPhone, iPod, iPod touch, and Mac are trademarks of Apple Inc., registered in the U.S. and other countries.
- Android™ is a trademark of Google Inc.
- iOS is a trademark on which Cisco holds the trademark right in the US and certain other countries.
- The names of companies and products mentioned herein are trademarks or registered trademarks of their respective owners.

Software license notice

- This software is based in part on the work of the Independent JPEG Group.

About using MP3 files

This product has been licensed for nonprofit use. This product has not been licensed for commercial purposes (for profit-making use), such as broadcasting (terrestrial, satellite, cable or other types of broadcasting), streaming on the Internet, Intranet (a corporate network) or other types of networks or distributing of electronic information (online digital music distribution service). You need to acquire the corresponding licenses for such uses. For details, see <http://www.mp3licensing.com>.

Cautions on copyrights

rekordbox restricts playback and duplication of copyright-protected music contents.

- When coded data, etc., for protecting the copyright is embedded in the music contents, it may not be possible to operate the program normally.
- When rekordbox detects that coded data, etc., for protecting the copyright is embedded in the music contents, processing (playback, reading, etc.) may stop.

Recordings you have made are for your personal enjoyment and according to copyright laws may not be used without the consent of the copyright holder.

- Music recorded from CDs, etc., is protected by the copyright laws of individual countries and by international treaties. It is the full responsibility of the person who has recorded the music to ensure that it is used legally.
- When handling music downloaded from the Internet, etc., it is the full responsibility of the person who has downloaded the music to ensure that it is used in accordance with the contract concluded with the download site.

Specifications

Power requirements	AC 110 V to 240 V, 50 Hz/60 Hz
Power consumption	41 W
Power consumption (standby)	0.4 W
Main unit weight	9.1 kg (20.1 lb)
Max. dimensions	
	728.2 mm (W) × 108.4 mm (H) × 443.8 mm (D) (28.7 in. (W) × 4.3 in. (H) × 17.5 in. (D))
Tolerable operating temperature	+5 °C to +35 °C (+41 °F to +95 °F)
Tolerable operating humidity	5 % to 85 % (no condensation)

Audio Section

Sampling rate	44.1 kHz
A/D, D/A converter	24-bit
Frequency characteristic	

USB, AUX (0 dB/12 dB), MIC1, MIC2 20 Hz to 20 kHz

S/N ratio (rated output, A-WEIGHTED)

USB	112 dB
LINE	96 dBu
PHONO	85 dB
AUX (0 dB)	96 dB
AUX (12 dB)	90 dB
MIC	81 dB

Total harmonic distortion (20 Hz to 20 kHzBW)

USB	0.003 %
LINE	0.005 %
PHONO	0.017 %

Standard input level / Input impedance

LINE	-12 dBu/47 k Ω
PHONO	-52 dBu/47 k Ω
AUX (0 dB)	-12 dBu/47 k Ω
AUX (12 dB)	-24 dBu/47 k Ω
MIC	-57 dBu/3 k Ω

Standard output level / Load impedance / Output impedance

MASTER 1	+6 dBu/10 k Ω /390 Ω or less
MASTER2	+2 dBu/10 k Ω /1 k Ω or less
BOOTH	+6 dBu/10 k Ω /470 Ω or less
PHONES	+8 dBu/32 Ω /1 Ω or less

Rated output level / Load impedance

MASTER 1	+24 dBu/10 k Ω
MASTER 2	+20 dBu/10 k Ω

Crosstalk

LINE	90 dB
PHONO	78 dB

Channel equalizer characteristic

HI	- ∞ dB to +6 dB (20 kHz)
MID	- ∞ dB to +6 dB (1 kHz)
LOW	- ∞ dB to +6 dB (20 Hz)

Microphone equalizer characteristic

HI	-12 dB to +12 dB (10 kHz)
LOW	-12 dB to +12 dB (100 Hz)

Input / Output terminals

PHONO input terminals

RCA pin jacks	2 sets
---------------	--------

LINE input terminal

RCA pin jacks	2 sets
---------------	--------

MIC input terminal

XLR connector & 1/4" TRS jack	2 set
-------------------------------	-------

AUX input terminal

RCA pin jacks	1 set
---------------	-------

MASTER1 output terminal

XLR connector	1 set
---------------	-------

MASTER2 output terminal

RCA pin jacks	1 set
---------------	-------

BOOTH output terminal

1/4" TRS jack	1 set
---------------	-------

PHONES output terminal

1/4" stereo phone jack	1 set
3.5 mm stereo mini jack	1 set

USB terminals

A type	2 sets
Power supply	5 V/1 A or less
B type	1 set

- Be sure to use the **[MASTER1]** terminals for a balanced output. If they are connected to an unbalanced input (such as RCA) with an XLR to RCA converter cable (or converter adapter), etc., the sound quality may be lowered or noise may occur. Use the **[MASTER2]** terminals for an unbalanced input (such as RCA).
- Be sure to use the **[BOOTH]** terminals for a balanced output. If they are connected to an unbalanced input, the sound quality may be lowered or noise may occur.
- The specifications and design of this product are subject to change without notice.

Pioneer Dj

Pioneer DJ Americas, Inc.
LIMITED WARRANTY
WARRANTY VALID ONLY IN THE U.S.A. AND CANADA

WARRANTY

Pioneer DJ Americas, Inc. (PDJA) warrants that products distributed by PDJA in the U.S.A. and Canada that fail to function properly under normal use due to a manufacturing defect when installed and operated according to the owner's manual enclosed with the unit will be repaired or replaced with a unit of comparable value, at the option of PDJA, without charge to you for parts or actual repair work. Parts supplied under this warranty may be new or rebuilt at the option of PDJA.

THIS LIMITED WARRANTY APPLIES TO THE ORIGINAL OR ANY SUBSEQUENT OWNER OF THIS PIONEER DJ PRODUCT DURING THE WARRANTY PERIOD PROVIDED THE PRODUCT WAS PURCHASED FROM AN AUTHORIZED PIONEER DJ DISTRIBUTOR/DEALER IN THE U.S.A. OR CANADA. YOU WILL BE REQUIRED TO PROVIDE A SALES RECEIPT OR OTHER VALID PROOF OF PURCHASE SHOWING THE DATE OF ORIGINAL PURCHASE OR, IF RENTED, YOUR RENTAL CONTRACT SHOWING THE PLACE AND DATE OF FIRST RENTAL. IN THE EVENT SERVICE IS REQUIRED, THE PRODUCT MUST BE DELIVERED WITHIN THE WARRANTY PERIOD, TRANSPORTATION PREPAID, ONLY FROM WITHIN THE U.S.A. AS EXPLAINED IN THIS DOCUMENT. YOU WILL BE RESPONSIBLE FOR REMOVAL AND INSTALLATION OF THE PRODUCT. PDJA WILL PAY TO RETURN THE REPAIRED OR REPLACEMENT PRODUCT TO YOU WITHIN THE U.S.A.

PRODUCT WARRANTY PERIOD

	Parts	Labor
Audio and Video	1 Year	1 Year

The warranty period for retail customers who rent the product commences upon the date product is first put into use (a) during the rental period or (b) retail sale, whichever occurs first.

WHAT IS NOT COVERED

IF THIS PRODUCT WAS PURCHASED FROM AN UNAUTHORIZED DISTRIBUTOR, THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND THIS PRODUCT IS SOLD STRICTLY "AS IS" AND "WITH ALL FAULTS".

PIONEER DJ SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL AND/OR INCIDENTAL DAMAGES.

THIS WARRANTY DOES NOT APPLY IF THE PRODUCT HAS BEEN SUBJECTED TO POWER IN EXCESS OF ITS PUBLISHED POWER RATING.

THIS WARRANTY DOES NOT COVER THE CABINET OR ANY APPEARANCE ITEM, USER ATTACHED ANTENNA, ANY DAMAGE TO RECORDS OR RECORDING TAPES OR DISCS, ANY DAMAGE TO THE PRODUCT RESULTING FROM ALTERATIONS, MODIFICATIONS NOT AUTHORIZED IN WRITING BY PIONEER DJ, ACCIDENT, MISUSE OR ABUSE, DAMAGE DUE TO LIGHTNING OR TO POWER SURGES, SUBSEQUENT DAMAGE FROM LEAKING, DAMAGE FROM INOPERATIVE BATTERIES, OR THE USE OF BATTERIES NOT CONFORMING TO THOSE SPECIFIED IN THE OWNER'S MANUAL.

THIS WARRANTY DOES NOT COVER THE COST OF PARTS OR LABOR WHICH WOULD BE OTHERWISE PROVIDED WITHOUT CHARGE UNDER THIS WARRANTY OBTAINED FROM ANY SOURCE OTHER THAN A PIONEER DJ AUTHORIZED SERVICE COMPANY OR OTHER DESIGNATED LOCATION. THIS WARRANTY DOES NOT COVER DEFECTS OR DAMAGE CAUSED BY THE USE OF UNAUTHORIZED PARTS OR LABOR OR FROM IMPROPER MAINTENANCE.

ALTERED, DEFACED, OR REMOVED SERIAL NUMBERS VOID THIS ENTIRE WARRANTY

NO OTHER WARRANTIES

PIONEER DJ LIMITS ITS OBLIGATIONS UNDER ANY IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, TO A PERIOD NOT TO EXCEED THE WARRANTY PERIOD. NO WARRANTIES SHALL APPLY AFTER THE WARRANTY PERIOD. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND SOME STATES DO NOT ALLOW THE EXCLUSIONS OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

TO OBTAIN SERVICE

PDJA has appointed a number of Authorized Service Companies throughout the U.S.A. and Canada should your product require service. To receive warranty service you need to present your sales receipt or, if rented, your rental contract showing place and date of original owner's transaction. If shipping the unit you will need to package it carefully and send it, transportation prepaid by a traceable, insured method, to an Authorized Service Company. Package the product using adequate padding material to prevent damage in transit. The original container is ideal for this purpose. Include your name, address and telephone number where you can be reached during business hours.

On all complaints and concerns in the U.S.A. and Canada call Customer Support at 1-800-872-4159.

For hook-up and operation of your unit or to locate an Authorized Service Company, please call or write:
CUSTOMER SUPPORT
PIONEER ELECTRONICS (USA) INC.
P.O. BOX 1720
LONG BEACH, CALIFORNIA 90801
1-800-872-4159
<http://www.pioneerelectronics.com>

DISPUTE RESOLUTION

Following our response to any initial request to Customer Support, should a dispute arise between you and Pioneer DJ, Pioneer DJ makes available its Complaint Resolution Program to resolve the dispute. The Complaint Resolution Program is available to you without charge. You are required to use the Complaint Resolution Program before you exercise any rights under, or seek any remedies, created by Title I of the Magnuson-Moss Warranty-Federal Trade Commission Improvement Act, 15 U.S.C. 2301 *et seq.*

To use the Complaint Resolution Program call 1-800-872-4159 and explain to the customer service representative the problem you are experiencing, steps you have taken to have the product repaired during the warranty period and the name of the authorized Distributor/Dealer from whom the Pioneer DJ product was purchased. After the complaint has been explained to the representative, a resolution number will be issued. Within 40 days of receiving your complaint, Pioneer DJ will investigate the dispute and will either: (1) respond to your complaint in writing informing you what action Pioneer DJ will take, and in what time period, to resolve the dispute; or (2) respond to your complaint in writing informing you why it will not take any action.

RECORD THE PLACE AND DATE OF PURCHASE FOR FUTURE REFERENCE

Model No. _____ Serial No. _____ Purchase Date _____

Purchased From _____

KEEP THIS INFORMATION AND YOUR SALES RECEIPT IN A SAFE PLACE

UCP0516

To register your product, find the nearest authorized service location, to purchase replacement parts, operating instructions, or accessories, please go to one of following URLs :

Pour enregistrer votre produit, trouver le service après-vente agréé le plus proche et pour acheter des pièces de rechange, des modes d'emploi ou des accessoires, reportez-vous aux URL suivantes :

In the USA/Aux Etats-Unis or In Canada/Aux Canada
<http://www.pioneerelectronics.com>

S018_C1_EnFr_PSV

© 2017 Pioneer DJ Corporation.
All rights reserved.

Pioneer DJ Corporation

6F, Yokohama i-Mark Place, 4-4-5 Minatomirai, Nishi-ku, Yokohama, Kanagawa 220-0012 JAPAN

Pioneer DJ 株式会社

〒220-0012 神奈川県横浜市西区みなとみらい4丁目4番5号 横浜アイマークプレイス6階

Корпорация Пайонир Диджей

6F, Йокогама i-Mark Place, 4-4-5 Минатомирай, Ниси-ку, Йокогама, Канагава 220-0012 ЯПОНИЯ

Pioneer DJ Europe Limited

Anteros Building, Odyssey Business Park, West End Road, South Ruislip, Middlesex, HA4 6QQ, U.K. TEL: +44-203-7617-220

Pioneer DJ Americas, Inc.

2050 W. 190th Street, Suite 109, Torrance, CA 90504, U.S.A. TEL: +1 (424) 488-0480

PIONEER ELECTRONICS ASIACENTRE PTE. LTD.

2 Jalan Kilang Barat, #07-01, Singapore 159346 TEL: +65-6378-7888

PIONEER ELECTRONICS AUSTRALIA PTY. LTD.

5 Arco Lane, Heatherton, Victoria, 3202, Australia, TEL: +61-3-9586-6300

PIONEER ELECTRONICS (THAILAND) CO., LTD.

17th Fl., KPN Tower, 719 Rama 9 Road, Bangkapi, Huaykwang, Bangkok 10310
TEL: +66-2-717-0777

PIONEER TECHNOLOGY (MALAYSIA) SDN. BHD

16th Floor, Menara Uni. Asia 1008 Jalan Sultan Ismail 50250 Kuala Lumpur
TEL: +60-3-2697-2920

先鋒股份有限公司

台灣台北市內湖區瑞光路 407 號 8 樓 TEL: +886-(0)2-2657-3588

先鋒電子(香港)有限公司

香港九龍長沙灣道 909 號 5 樓 TEL: +852-2848-6488

PIONEER ELECTRONICS DE MEXICO S.A. DE C.V.

Blvd. Manuel Avila Camacho 138 10 piso Col.Lomas de Chapultepec, Mexico, D.F. 11000 TEL: +52-55-9178-4270

PIONEER INDIA ELECTRONICS PRIVATE LTD.

216, Second Floor, Time Tower, M.G. Road, Sector 28, Gurgaon 122001, Haryana, India TEL: +91-124-463-6100

PDJ_001_all

Printed in Malaysia

<DRH1447-A>

