



Assembly Instructions

S450, SW450

Ready to Assemble Lectern












Thank you for choosing the **S450, SW450 Presidential Plus Lectern** from AmpliVox Portable Sound Systems.

We are excited in introducing this truly unique lectern. Our lectern combines flexibility with functionality. Please refer to this user guide as you enjoy the unique capabilities of another quality product from AmpliVox Portable Sound Systems.

We encourage you to visit our website www.ampli.com to register your product for its warranty coverage, sign up to receive our newsletter, download our catalog, and learn more about the complete line of AmpliVox audio visual products, including portable PA systems, and lecterns.

PANEL DESCRIPTIONS

 <p>Panel 1 - Speakers</p>	 <p>Panel 2 - Right Side Panel</p>	 <p>Panel 3 - Left Side Panel</p>
 <p>Panel 4 - Lectern Bottom / Cast-</p>	 <p>Panel 5 - Middle Shelf</p>	 <p>Panel 6 - Top Reading Surface</p>
 <p>Panel 7 - Speaker Grille</p>	 <p>Gooseneck Microphone</p>	 <p>Amplifier S450...S805A SW450...SW805A</p>

HARDWARE LIST

ITEM	DESCRIPTION	QTY
A	Casters	4
B	Cam Lock	16
C	Dowel Pins	12
D	Screws	16



GETTING STARTED

TOOLS NEEDED: Philips Screw Driver, Rubber Mallet

- Unpack all panels from shipping box. Locate accessories and open.


CASTER PANEL

- Locate Panel (4) and item (A) the four casters. Place Panel (4) down on a flat smooth surface with the caster mounting holes facing up. Notice that two casters are locking. These will be installed on the side with the curved edge. The other two non locking casters are installed on the straight side. Use four of the (D) screws for each caster.
- Set panel aside.




CAM LOCK AND DOWEL PIN INSTALLATION

- Locate Panels (1) (4) (5) and (6), items (B) and (C). Lay all the panels on a flat surface with the side that has all the cutouts facing up.
- Take one item (B) Cam Lock, and press into each cutout with your fingers or softly tap in with rubber mallet.
- Repeat on all panels.
- On the edges of all four panels you will see holes for the dowel pins, item (C). Insert a dowel pin into each hole.
- Set all panels aside.

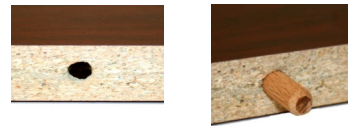

- Place Panel (1) Speaker Panel, on flat surface.
- Take Panel (2) and align the holes with the dowel pins and cam locks sticking out from Panel (1). Tap in place.

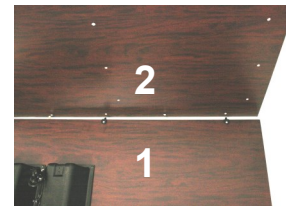

- Lock panel in place by rotating cam lock with screwdriver turning lock clockwise until you can not turn anymore.



- Starting with Panel (4) Caster Panel, align the dowel pins and cam locks sticking out from panel with the holes in Panel (2). Tap in place. Lock cam locks.
- Repeat with Panels (5) and (6). Lock cam locks.



- Complete assembly by aligning Panel (4) (5) and (6) with holes in Panel (3). Tap in place. Lock cam locks.
- Stand lectern up.



AMPLIFIER

- Read separate amplifier instructions included in package. Place amplifier on shelf.

GOOSENECK MICROPHONE

- Plug microphone cable into the microphone jack marked "DYNAMIC."
- Take female end of microphone cable and starting at the amplifier, route cable up through opening in microphone mount in the reading surface.
- Plug in microphone into the microphone mount. Push microphone and cable back into the microphone mount. See picture (microphone removed).



SPEAKERS

- Looking inside of cabinet you will see the backside of the speaker enclosure. Unwrap speaker wires and bring them to the front of the amplifier. Plug them into the speaker jacks marked "L - SPEAKER - R".



WARRANTY

Limited Six (6) -Year Warranty

AmpliVox warrants this product to be free from defects in materials and workmanship (subject to the terms set forth below) for a period of six (6) years from the date of purchase ("Warranty Period").

During the Warranty Period, AmpliVox will repair or replace (at AmpliVox discretion) this product or any defective parts ("Warranty Service").

Repair or replacement under the terms of this warranty does not give right to any extension or a new beginning of the period of warranty.

CLAIMS UNDER THE WARRANTY

To obtain Warranty Service, **contact AmpliVox (800-267-5486)** to be assigned a **Return Authorization number (RA#)**. After receiving a RA#, the defective unit is to be returned to AmpliVox in either its original packaging or packaging affording an equal degree of protection. You will bear the cost of shipping the product to AmpliVox. If the product is covered by the warranty, AmpliVox will bear the cost of shipping product back to you after the completion of service under this warranty.

Return shipping will be charged to you for products not covered by the warranty or requiring no warranty repair.

The following information must be presented to obtain Warranty Service: **(a)** the RA# must be clearly and legibly marked on the outside of shipping carton, **(b)** proof of purchase, which clearly indicates the name and address of the seller, the date of purchase and the product type, which is evidence that this product is within the Warranty Period. Please further include **(c)** your return address, **(d)** daytime telephone number, and **(e)** reason for return.

LIMITATION OF WARRANTY

This warranty is only valid for the original purchaser and will automatically terminate prior to expiration if this product is sold or otherwise transferred to another party. The warranty provided by AmpliVox in this statement applies only to products purchased for use, and not for resale. It does not apply to open box purchases, which are sold "as is" and without any warranty. Specifically exempt from warranty are limited-life consumable components subject to normal wear and tear, such as microphone windscreens, ear cushions, modular plugs, ear tips, decorative finishes, batteries, and other accessories. This warranty is invalid if the factory-applied serial number, date code label, or product label has been altered or removed from this product. This Warranty does not cover cosmetic damage or damage due to misuse, abuse, negligence, Acts of Nature, accident, disassembling or modification of, or to any part of, the product. This Warranty does not cover damage due to improper operation, maintenance or installation, or attempted repair by anyone other than AmpliVox. Any unauthorized repairs will void this warranty.

REPAIRS OR REPLACEMENTS AS PROVIDED UNDER THIS WARRANTY ARE THE EXCLUSIVE REMEDY OF THE CONSUMER. AMPLIVOX SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY LAW, THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESS AND IMPLIED WARRANTIES WHATSOEVER, INCLUDING BUT NOT LIMITED TO THE WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PRACTICAL PURPOSE.

NOTE! This warranty gives you specific legal rights. You may have other rights which vary from location to location. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or implied warranties, so the above exclusions may not apply to you. This warranty does not affect your legal (statutory) rights under your applicable national or local laws.



Dispose of the product according to local standards and regulations

July, 2013