



ATTACH NEGATIVE (-)
SPEAKER WIRE TO "COM"
CONNECTION ON SCREW
TERMINAL OUTPUT.

ATTACH POSITIVE (+)
SPEAKER WIRE TO "70V"
CONNECTION ON SCREW
TERMINAL OUTPUT.



ATTACH SPEAKER WIRE TO FIRST SPEAKER.

**NOTE: BEFORE ACTIVATING SYSTEM BE SURE TO
SELECT THE CORRECT WATTAGE TAP ON EACH
SPEAKER. TAP DIAL IS LOCATED ON THE FRONT
OF THE SPEAKER UNDER THE GRILL AS SHOWN
BELOW.**

TAP AT 4
WATTS

CONTINUE DAISY CHAINING TO
REST OF SPEAKERS.

