


CONNECTING YOUR DEVICES TO A SHURE MIXER


The variety of connectors on audio equipment sometimes leads to confusion in wiring. The diagrams below provide wiring recommendations for most common cables.


NOTE: XLR pin 1 is always connected to cable shield.


BALANCED CABLE

UNBALANCED CABLE

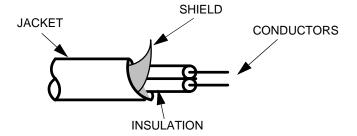

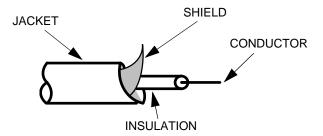


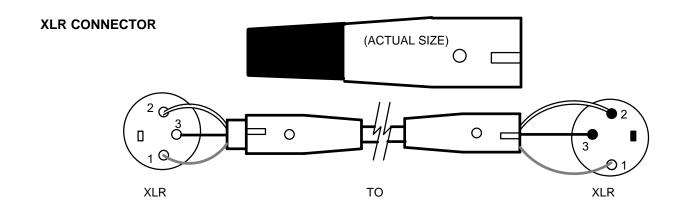


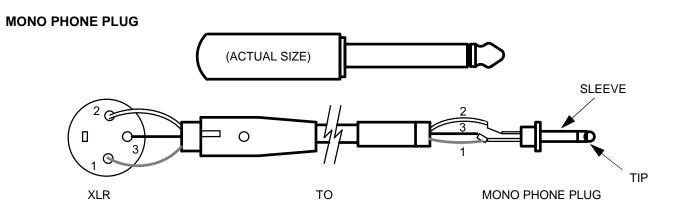

STEREO PHONE PLUG (USED AS A BALANCED LINE CONNECTION)



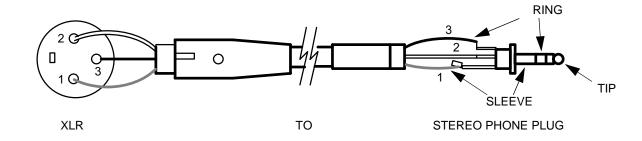

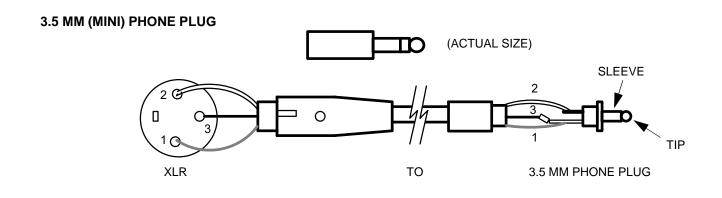

PHONO PIN (RCA) PLUG

