


# THE PUCK

RGBAW

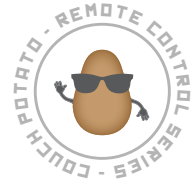

WIRELESS DMX  
wiCICLE<sup>®</sup>  
ENABLED



Blizzard Lighting, LLC  
[www.blizzardlighting.com](http://www.blizzardlighting.com)  
Waukesha, WI USA  
Copyright (c) 2012

# TABLE OF CONTENTS

The Puck RGBAW: Couch Potato Remote Control Series	1
<b>1. Getting Started</b>	<b>3</b>
What's In The Box?	3
Getting It Out Of The Box	3
Powering Up!	3
Getting A Hold Of Us	3
Safety Instructions (Don't Stick Your Hand In The Toaster!)	4
<b>2. Meet The Puck: Remote Series LED PAR Can</b>	<b>5</b>
Features	5
DMX Quick Reference	5
The Puck: Remote Series Pin-up Pictures	6
<b>3. Setup</b>	<b>8</b>
Fuse Replacement	8
Connecting A Bunch Of Puck: Flat LED Par Cans	8
Data/DMX Cables	8
Cable Connectors	9
3-Pin??? 5-Pin??? Huh?!?	9
Take It To The Next Level: Setting Up DMX Control	9
Fixture Linking (Master/Slave Mode)	10
Mounting & Rigging	10
Using this fixture with the wiCICLE® Wireless DMX System	11
<b>4. Operating Adjustments</b>	<b>13</b>
DMX Mode & DMX Mode Selection	14
Master/Slave Mode	14
Sound Active Mode	14
Custom Color Display	15
Additional Operating Help	15
Troubleshooting	16
<b>5. Appendix</b>	<b>17</b>
A Quick DMX Lesson	17
Keeping Your Puck: Remote Series Fixture As Good As New	18
Returns (Gasp!)	18
Shipping Issues	18
Tech Specs	19

# 1. GETTING STARTED

## What's In The Box?

- 1 x Puck: Couch Potato™ RGBAW LED PAR Fixture
- 1x Wireless IR Remote Control
- 1x IEC Power Cord
- This Lovely User Manual

## Getting It Out Of The Box

Congratulations on purchasing one way cool, remote controlled PAR fixture! Now that you've got The Puck (or hopefully, *Pucks!*), you should carefully unpack the box and check the contents to ensure that all parts are present and in good condition. If anything looks as if it has been damaged in transit, notify the shipper immediately and keep the packing material for inspection. Again, please save the carton and all packing materials. If a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

## Powering Up!

All fixtures must be powered directly off a switched circuit and **cannot be run off a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel is used solely for a 0% to 100% switch.**

*AC Voltage Switch* - Not all fixtures have a voltage select switch, so please verify that the fixture you receive is suitable for your local power supply. See the label on the fixture or refer to the fixture's specifications chart for more information. A fixture's listed current rating is its average current draw under normal conditions. Check the fixture or device carefully to make sure that if a voltage selection switch exists that it is set to the correct line voltage you will use.

***Warning! Verify that the voltage select switch on your unit matches the line voltage applied. Damage to your fixture may result if the line voltage applied does not match the voltage indicated on the voltage selector switch. All fixtures must be connected to circuits with a suitable Ground (Earthing).***

## Getting A Hold Of Us

**If something is wrong, just give us a call or send an email. We'll be happy to help, honest.**

Blizzard Lighting  
W220 N1531 Jericho Ct. Suite E., Waukesha, WI 53186 USA  
support@blizzardlighting.com  
www.blizzardlighting.com  
866.493.6025

# SAFETY INSTRUCTIONS



Please read these instructions carefully. They include important information about the installation, usage and maintenance of this product.

- Please keep this User Guide for future use. If you sell the unit to someone else, be sure that they also receive this User Guide.
- ALWAYS make sure that you are connecting to the proper voltage, and that the line voltage you are connecting to is not higher than that stated on the decal or rear panel of the fixture.
- This product is intended for indoor use only.
- To prevent risk of fire or shock, do not expose fixture to rain or moisture.
- Make sure there are no flammable materials close to the unit while operating.
- The unit must be installed in a location with adequate ventilation, at least 20in (50cm) from adjacent surfaces. Be sure that no ventilation slots are blocked.
- ALWAYS disconnect from the power source before servicing or replacing fuse and be sure to replace with same fuse size and type.
- ALWAYS secure fixture using a safety chain. NEVER carry the fixture by its cord. Use its carrying handles.
- DO NOT operate at ambient temperatures higher than 104°F (40°C).
- In the event of a serious operating problem, stop using the unit immediately. NEVER try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center. Always use the same type spare parts.
- NEVER connect the device to a dimmer pack.
- Make sure the power cord is never crimped or damaged.
- Never disconnect the power cord by pulling or tugging on the cord.
- Avoid direct eye exposure to the light source while it is on.

**Caution!** There are no user serviceable parts inside the unit. Do not open the housing or attempt any repairs yourself. In the unlikely event your unit may require service, please contact Blizzard Lighting at support@blizzardlighting.com.

## 2. MEET THE PUCK RGBAW: COUCH POTATO

### CONTROL FEATURES

- RGBAW color mixing via 198 10mm R/G/B/A/W LEDs
- IR remote control functionality
- Variable electronic strobe
- Variable electronic dimmer
- Built-in automated programs via DMX and master/slave
- Built-in sound active programs
- Full RGBAW color mixing in standalone and master/slave
- Color Preset (3-Ch), RGBAW (5-Ch) and extended (12-Ch) DMX modes

### ADDITIONAL FEATURES

- Lightweight and Compact (It kept its New Years' resolution!)
- 4-Button LED control panel for easy programming
- Light source: 198x 10mm LEDs, 36 each R/G/B/A/W
- Dual bracket for flexibility in mounting
- Power outlet for fixture linking (up to 50 fixtures)

### DMX Quick Reference (12-Channel Mode)

Channel	What It Does	Channel	What It Does
1	Dimmer	7	Amber Intensity
2	Strobe (Slow <--> Fast)	8	Color Snap
3	Red Intensity	9	Snap Speed (Slow <--> Fast)
4	Green Intensity	10	Color Fade (Slow <--> Fast)
5	Blue Intensity	11	Fade Speed (Slow <--> Fast)
6	Amber Intensity	12	Microphone Sensitivity

### DMX Quick Reference (5-Channel Mode)

Channel	What It Does
1	Red Intensity
2	Green Intensity
3	Blue Intensity
4	Amber Intensity
5	White Intensity


### DMX Quick Reference (3-Channel Mode)

Channel	What It Does
1	Dimmer
2	Strobe
3	Built-in Programs

**Figure 1: The Puck: Remote Series RGBAW Pin-Up Picture**




**Figure 2: The Rear Connections**

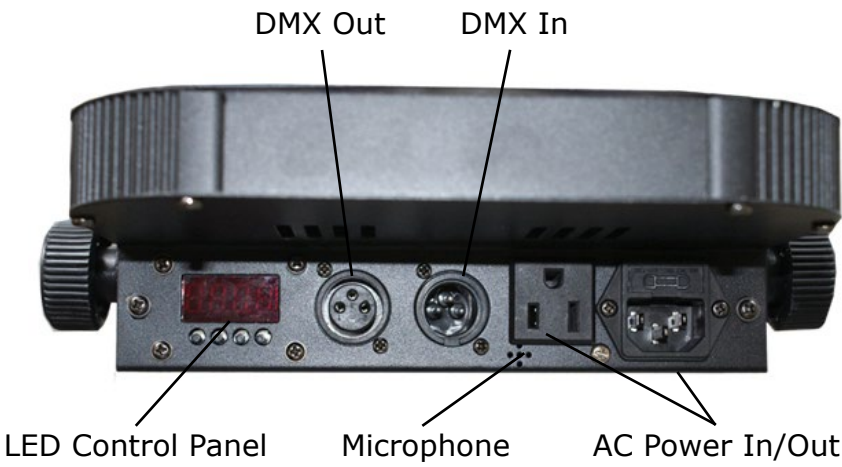

### Figure 3: The Remote Control

Note: Make sure to point the remote control directly at the receiver on the product which is on the front of the unit.

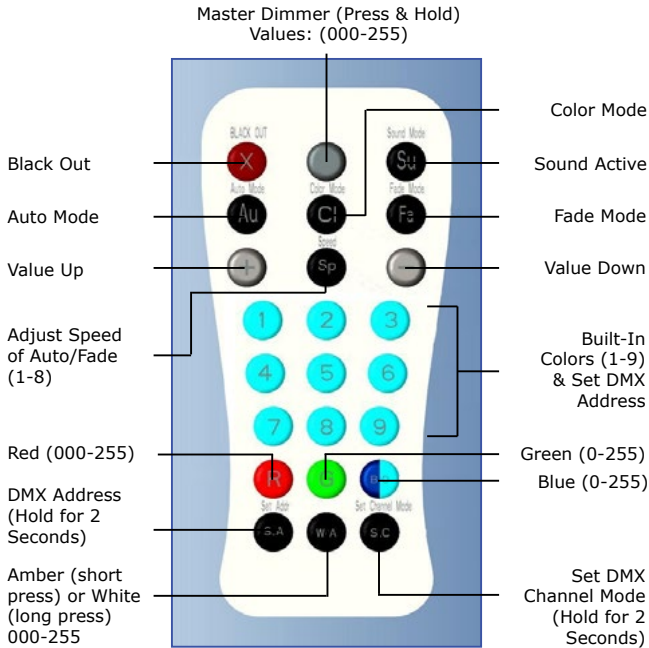

Note: You must first synchronize the remote control with the fixture.

1. Press the **<MENU>** button on the fixture until the digital display shows *Raddr*, and then press the **<ENTER>** button for 5 seconds. The digital display then shows *rFrL*, accompanied by flashes. Then point the remote control at the infrared receiver in the front of the fixture and press any button. The remote is now synchronized to control the fixture. (Each fixture can store up to three remote control codes)
2. Clear the remote code: press the **<MENU>** button on the fixture until the digital display shows *Raddr*, then press **<ENTER>** for 5 seconds, the digital display then shows *rFrL*, then press the **<MENU>** key to clear the stored remote control code.
3. To set DMX address: Push the remote control **<S.A>** key 5 seconds, and the digital display will show *Raddr* (flashing), then press the number keys to enter the address code you wish to use, or use the **<+/->** buttons to scroll through your choices.
4. To select a DMX channel mode: Push the remote control **<S.C>** key 2 seconds, and the digital display will show *Chnd* (flashing), then press the number keys **<1>**, **<2>**, or **<3>** to select from the 3 different channel modes, or use the **<+/->** buttons to scroll through your choices.
5. You can set R/G/B/A/W colors with the remote by pushing either the Red **<R>** button for red, the Green **<G>** button for green, and the Blue **<B.O>** button for blue. Push the black **<W.A>** button quickly for amber, and push and hold the same **<W.A>** button for 5 seconds for white. Each color's intensity is then adjustable using the **<+/->** buttons (0-255).


### 3. SETUP



Before replacing a fuse, disconnect power cord. ALWAYS replace with the same type and rating of fuse.

#### Fuse Replacement

With a flat head screwdriver, wedge the fuse holder out of its housing. Remove the damaged fuse from its holder and replace with exact same type fuse. Insert the fuse holder back in its place and reconnect power.

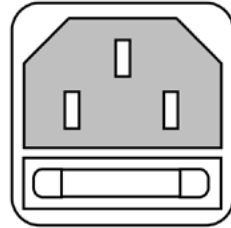

#### Connecting A Bunch of Puck Flat LED PAR Cans

You will need a serial data link to run light shows using a DMX-512 controller or to run shows on two or more fixtures set to sync in master/slave operating mode. The combined number of channels required by all the fixtures on a serial data link determines the number of fixtures the data link can support.

Fixtures on a serial data link must be daisy chained in one single line. Also, connecting more than 32 fixtures on one serial data link without the use of a DMX optically-isolated splitter may result in deterioration of the digital DMX signal.

The maximum recommended cable-run distance is 500 meters (1640 ft). The maximum recommended number of fixtures on a serial data link is 32 fixtures.

#### Data/DMX Cabling

To link fixtures together you'll need data cables. You should use data-grade cables that can carry a high quality signal and are less prone to electromagnetic interference.

For instance, Belden© 9841 meets the specifications for EIA RS-485 applications. Standard microphone cables will "probably" be OK, but note that they cannot transmit DMX data as reliably over long distances. In any event, the cable should have the following characteristics:

*2-conductor twisted pair plus a shield*

*Maximum capacitance between conductors – 30 pF/ft.*

*Maximum capacitance between conductor & shield – 55 pF/ft.*


*Maximum resistance of 20 ohms / 1000 ft.*

*Nominal impedance 100 – 140 ohms*




## Cable Connectors

Cables must have a male XLR connector on one end and a female XLR connector on the other end. (Duh!)

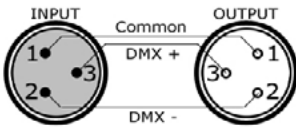

**A Word on Termination:** DMX is a resilient communication protocol, however errors still occasionally occur. Termination reduces signal errors, and therefore best practices include use of a terminator in all circumstances. If you are experiencing problems with erratic fixture behavior, especially over long signal cable runs, a terminator may help improve performance.

 **To build your own DMX Terminator:**  
Obtain a 120-ohm, 1/4-watt resistor, and wire it between pins 2 & 3 of the last fixture. They are also readily available from specialty retailers.



**CAUTION:** Do not allow contact between the common and the fixture's chassis ground. Grounding the common can cause a ground loop, and your fixture may perform erratically. Test cables with an ohm meter to verify correct polarity and to make sure the pins are not grounded or shorted to the shield or each other.

## 3-Pin??? 5-Pin??? Huh?!?

If you use a controller with a 5 pin DMX output connector, you will need to use a 5 pin to 3 pin adapter. They are widely available over the internet and from specialty retailers. If you'd like to build your own, the chart below details a proper cable conversion:


Conductor	3-Pin Female (Output)	5-Pin Male (Input)
Ground/Shield	Pin 1	Pin 1
DMX Data (-)	Pin 2	Pin 2
DMX Data (+)	Pin 3	Pin 3
Not Used.	No Connection.	No Connection.
Not Used.	No Connection.	No Connection.

## Take It To The Next Level: Setting Up DMX Control

**Step 1:** Connect the male connector of the DMX cable to the female connector (output) on the controller.




**Step 2:** Connect the female connector of the DMX cable to the first fixture's male connector (input). *Note:* It doesn't matter which fixture address is the first one connected. We recommend connecting the fixtures in terms of their proximity to the controller, rather than connecting the lowest fixture number first, and so on.

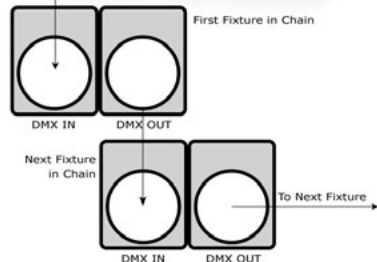

**Step 3:** Connect other fixtures in the chain from output to input as above. Place a DMX terminator on the output of the final fixture to ensure best communication.

## Fixture Linking (Master/Slave Mode)

1. Connect the (male) 3 pin connector side of the DMX cable to the output (female) 3 pin connector of the first fixture.
2. Connect the end of the cable coming from the first fixture which will have a (female) 3 pin connector to the input connector of the next fixture consisting of a (male) 3 pin connector. Then, proceed to connect from the output as stated above to the input of the following fixture and so on.

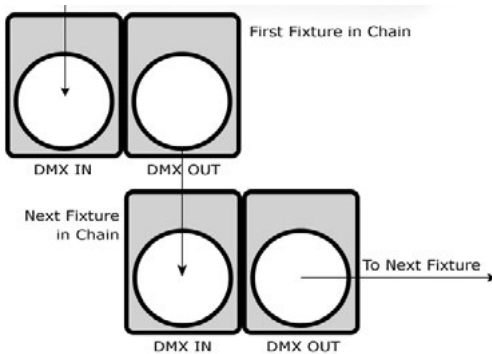

**A quick note:** Often, the setup for Master-Slave and Standalone operation requires that the first fixture in the chain be initialized for this purpose via either settings in the control panel or DIP-switches. Secondly, the fixtures that follow may also require a slave setting.

Check the **"Operating Adjustments"** section in this manual for complete instructions for this type of setup and configuration.

## Mounting & Rigging

This fixture may be mounted in any SAFE position provided there is enough room for ventilation.

It is important never to obstruct the fan or vents pathway. Mount the fixture using a suitable "C" or "O" type clamp. The clamp should be rated to hold at least 10x the fixture's weight to ensure structural stability. Do not mount to surfaces with unknown strength, and ensure properly "rated" rigging is used when mounting fixtures overhead.

Adjust the angle of the fixture by loosening both knobs and tilting the fixture. After finding the desired position, retighten both knobs.

- When selecting installation location, take into consideration lamp replacement access (if applicable) and routine maintenance.
- Safety cables **MUST ALWAYS** be used.
- Never mount in places where the fixture will be exposed to rain, high humidity, extreme temperature changes or restricted ventilation.

# USING THIS FIXTURE WITH THE wiCICLE® WIRELESS DMX SYSTEM

In addition to the unbridled thrill you already received the first time you plugged in your fixture, you'll be delighted to know that This fixture also works seamlessly with our wiCICLE® Wireless DMX system, **without additional power.**




- ONLY fixtures bearing this logo are certified for use with the wiCICLE® without external power.

- **Unauthorized modification and/or using the wiCICLE® with unapproved fixtures may cause damage to the wiCICLE® or fixture. UNDER NO CIRCUMSTANCES IS BLIZZARD LIGHTING RESPONSIBLE FOR ANY DAMAGE FROM SUCH OPERATION.**

- Fixtures bearing the above logo **MUST** only use cable and connectors which separate chassis/case ground from cable shielding. Cabling with the shield connected to the connector's case/chassis may cause malfunction and damage to the wiCICLE® or fixture.

- wiCICLE® transmitters have additional power requirements and therefore cannot be powered directly from the fixture. You will need to utilize the supplied AC/DC adaptor to drive wiCICLE® transmitters in your system.

**WE HAD THIS SPACE, SO WE FIGURED WE'D DRAW YOU A PICTURE:**

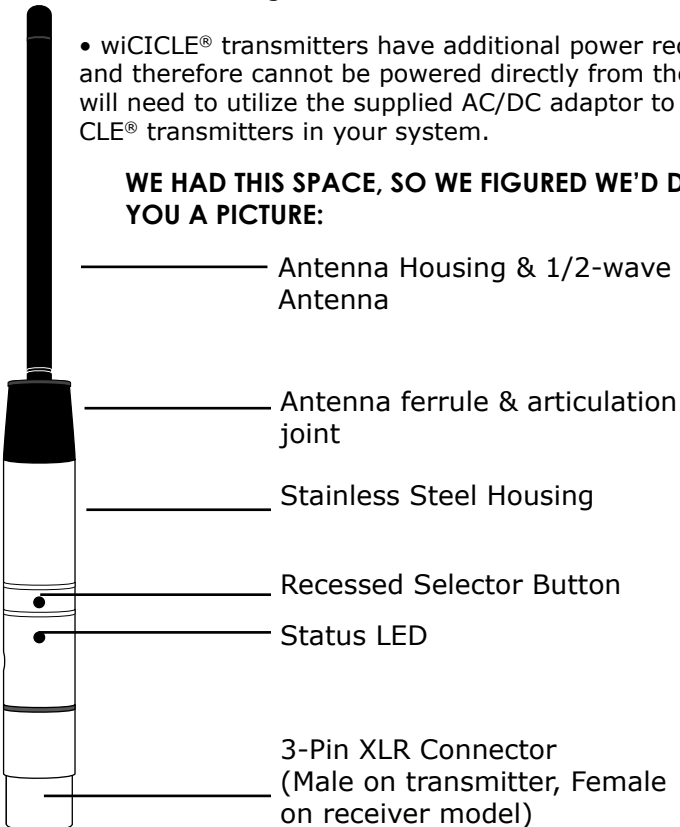

Each wiCICLE® acts as both a transmitter and a receiver, depending on whether a DMX source is applied to the integral XLR connector. This is an extremely powerful feature of the system, however, it also requires 1 piece of due diligence, and that is the removal of extraneous DMX signals from your lighting rig BEFORE proceeding.

**SO: BEFORE DOING ANYTHING ELSE, YOU SHOULD DISABLE ANY BUILT-IN PROGRAMS IN THE FIXTURES YOU WISH TO CONNECT AND/OR SET THEM AS SLAVES PRIOR TO RETURNING THEM TO DMX MODE (IF APPLICABLE). Most fixtures contain a built-in automatic, sound active or custom program which is designed to operate with the fixture NOT connected to a DMX chain.**

Some of these programs will automatically run unless the fixture is set to slave mode. These fixtures typically sense DMX automatically and switch to DMX mode upon receiving DMX signal (our Pucks do that!)

If you plug a wiCICLE® “receiver” into an autosensing fixture set as a “master, “chances are good that the wiCICLE® “receiver” will begin transmitting the master program. Most times, this is undesirable, and taking the two seconds to switch these programs off will solve a lot of ails.

Got that done? Good! Then let’s proceed!

1. Plug the wiCICLE® Receiver into the “DMX IN” connector of the fixture and verify it is receiving power (the **STATUS LED** should illuminate.)
2. Connect the AC/DC adaptor to the wiCICLE® Transmitter and verify it is receiving power (the **STATUS LED** should illuminate.)
3. Press the **RECESSED SELECTOR BUTTON** on the Transmitter to select the operating channel group. (The system will store this setting for future use)


The 7-Color Status LED will change color to indicate the current channel group:

- GROUP 1: **RED**
- GROUP 2: **GREEN**
- GROUP 3: **YELLOW**
- GROUP 4: **BLUE**
- GROUP 5: **VIOLET**
- GROUP 6: **CYAN**
- GROUP 7: **WHITE**

**NOTE: “GROUP” number also corresponds to the “GROUP” setting on our LightCaster™ wireless DMX Transceiver.**

4. Follow the same procedure on the Receiver to select the channel group.
5. Once both the transmitter and receiver(s) are both set to the same channel group, connect the transmitter to the DMX controller or the DMX out of a fixture on your DMX chain.
6. Once a DMX signal is provided to the transmitter, the status LED will blink **RED** slowly until communication is established with the receiver. The status LED on the receiver(s) will flash **GREEN** slowly until communication is established.
7. Once the clearest channel is auto-selected, the status LEDs will blink quickly on both the transmitter and receiver. **NOTE:** The color of the LED DURING operation does not indicate channel group, instead it indicates whether the unit is transmitting or receiving. **That’s It!**

## Control Panel Menu Structure

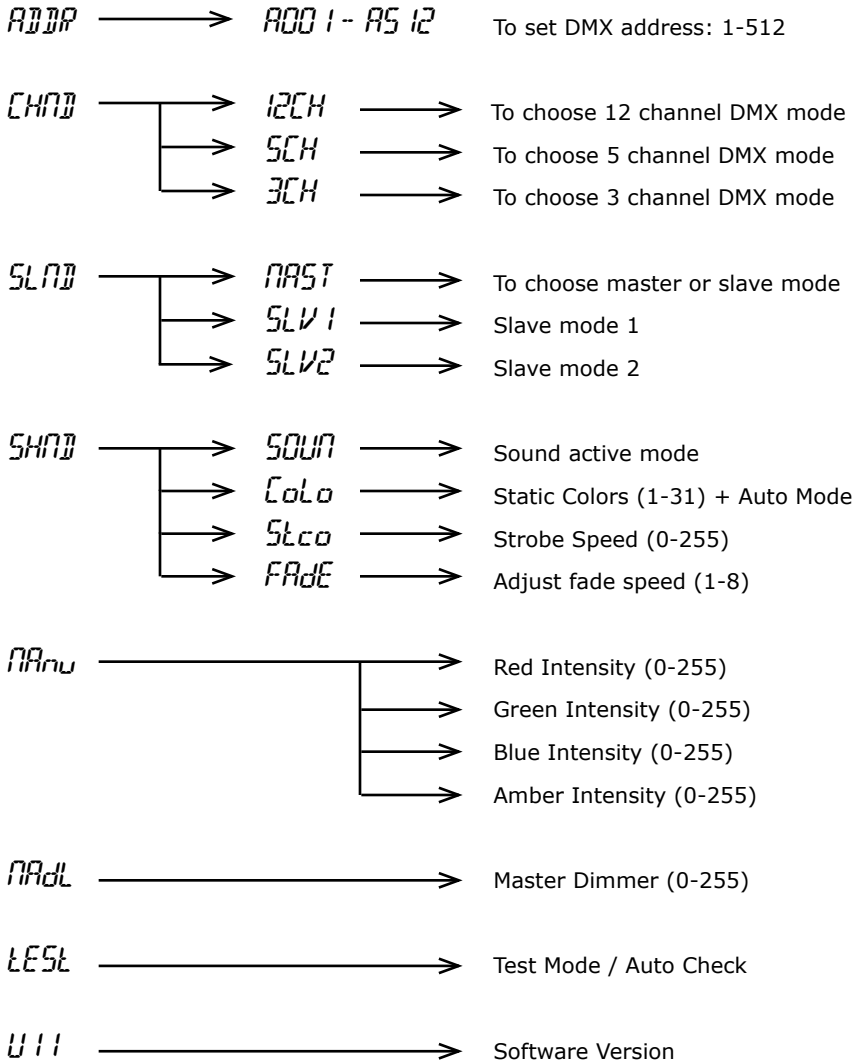

## 4. OPERATING ADJUSTMENTS

**NOTE: After making any adjustment, hold the <MENU> button for approximately 3 seconds, otherwise the fixture will return to the correct mode after approximately 10 seconds.**

### DMX Mode

Allows the unit to be controlled by any universal DMX controller.

- 1.) The default mode for the fixture is DMX, which appears as *Addr* on the LED readout. Push the <ENTER> button then the <UP> and <DOWN> buttons to choose a channel between 1 and 512. Press <ENTER> again to confirm.
- 2.) To change between DMX channel modes, select *Chnd*, then press <ENTER>. Select either *3Ch*, *5Ch* or *12Ch*, then press <ENTER> again to confirm.

### Master/Slave Mode (Auto/Sound Active/Color Preset/Custom):

Allows you to link up to 32 units together without a controller.

- 1.) Use standard DMX cables to daisy chain your units together via the DMX connector on the rear of the units.
- 2.) Choose a unit to function as the Master. Select MAST. The master unit must be the first unit. Finally, chain the units together using DMX cable.  
Master *SLNd* then *MASt* to confirm.
- 3.) Set the fixture to slave run in slave mode by using the <UP>/<DOWN> keys to reach either *SLV1* (which functions the same as the master fixture) or choose *SLV2* (functions as complimentary to the master fixture).

Slave 1 *SLNd* then *SLV1* to confirm.  
Slave 2 *SLNd* then *SLV2* to confirm.

**NOTE: Fixtures in slave mode will display "STBY" (Standby). This is NORMAL. Return the fixture to master mode to use it as a standalone fixture.**

- 4.) On the master fixture, use the <UP>/<DOWN> keys to reach SHND, which allows you to select other functions:

Sound active *SoUn* then *S1-S3*, <ENTER>.

*S1* = Sound Active + Strobe  
*S2* = Sound Active - Color Snap  
*S3* = Sound Active + Fade

Auto mode *CoLo* then *Auto* then <ENTER> to confirm.

Color preset *CoLo* then *Co 1-Co 31*, <ENTER>

Color strobe *StCo* then *0-255* (Slowest <---> Fastest)

then *Co 1-Co 31*, <ENTER>

Color fade *FaDe* then *SPD 1-SPD8* (Slowest <---> Fastest)

**NOTE: Speed 1 = Fastest (Approx. 1.5 sec. per color), Speed 8 = Slowest (Approx. 2 min. per color).**

### **To set a custom color in Master/Slave / Standalone Mode:**

*Using this function, you can select any color by adjusting the Red, Green and Blue values from 0-255. You may also adjust the color balance of the fixture.*

**Please note that modifying the values in this step will affect ALL modes, therefore we recommend resetting all levels to their highest value (255) after using this mode.**

- 1.) Select *MANU* from the control panel, then hit **<ENTER>**.
- 2.) Choose *rEd, GrEE, bLuE, AMbE or WhiL*, then hit **<ENTER>** to confirm.
- 3.) Using the **<UP>/<DOWN>** keys, select the color you wish to display by varying Red/Green/Blue/Amber/White intensity between 0 and 255, then hit **<ENTER>** to confirm each color choice.
- 4.) Select Color preset mode as instructed above, then select *Co 31*, then **<ENTER>** to confirm.

**Stuck? Want More  
Information?  
Check out our  
helpful tutorial video  
HERE:**

<http://youtu.be/xVKhmV-v0jA>

That should tell you everything you need to know!

## Troubleshooting

Symptom	Solution
Fixture Auto-Shut Off	Check the fan in the fixture. If it is stopped or moving slower than normal, the unit may have shut itself off due to high heat. This is to protect the fixture from overheating. Clear the fan of obstructions, or return the unit for service.
Beam is Dim	Check optical system and clean excess dust/grime. Also ensure that the 220V/110V switch is in the correct position, if applicable.
No Light Output	Check to ensure fixture is operating under correct mode, IE sound active/auto/DMX/Etc., if applicable. Contact service for more information.
Chase Speed Too Fast/Slow	Check to ensure proper setup of speed adjustment.
No Power	Check fuse, AC cord and circuit for malfunction.
Blown Fuse	Check AC cord and circuit for damage, verify that moving parts are not restricted and that unit's ventilation is not obstructed
Slow Movement	Verify that 220V/110V switch is in the correct position, if applicable. Also check that speed channels are set appropriately.
No Response to Audio	Verify that the fixture is in "Sound Active" mode. Adjust Audio Sensitivity, If Applicable.
Fixture Not Responding / Responding Erratically	Make sure all connectors are seated properly and securely. Use Only DMX Cables. Install a Terminator. Check all cables for defects. Reset fixture(s).
Intermittent Lamp	Check lamp for properly installation. Relamp, lamp may have reached end of life.
Remote Doesn't Work	Verify remote control cable is installed properly and securely. Verify remote is correct type (CA-9 or other as applicable.)
Fixture Moving On Its Own	Verify proper mode of operation. Is the fixture in "Auto" mode?

**If your problem isn't listed, or if problems persist, please contact support: [support@blizzardlighting.com](mailto:support@blizzardlighting.com).**



# 5. APPENDIX

## A Quick Lesson On DMX

DMX (aka DMX-512) was created in 1986 by the United States Institute for Theatre Technology (USITT) as a standardized method for connecting lighting consoles to lighting dimmer modules. It was revised in 1990 and again in 2000 to allow more flexibility. The Entertainment Services and Technology Association (ESTA) has since assumed control over the DMX512 standard. It has also been approved and recognized for ANSI standard classification.

DMX covers (and is an abbreviation for) Digital MultipleXed signals. It is the most common communications standard used by lighting and related stage equipment.

DMX provides up to 512 control "channels" per data link. Each of these channels was originally intended to control lamp dimmer levels. You can think of it as 512 faders on a lighting console, connected to 512 light bulbs. Each slider's position is sent over the data link as an 8-bit number having a value between 0 and 255. The value 0 corresponds to the light bulb being completely off while 255 corresponds to the light bulb being fully on.

DMX data is transmitted at 250,000 bits per second using the RS-485 transmission standard over two wires. As with microphone cables, a grounded cable shield is used to prevent interference with other signals.

There are five pins on a DMX connector: a wire for ground (cable shield), two wires for "Primary" communication which goes from a DMX source to a DMX receiver, and two wires for a "Secondary" communication which goes from a DMX receiver back to a DMX source. Generally, the "Secondary" channel is not used so data flows only from sources to receivers. Hence, most of us are most familiar with DMX-512 as being employer over typical 3-pin "mic cables," although this does not conform to the defined standard.

DMX is connected using a daisy-chain configuration where the source connects to the input of the first device, the output of the first device connects to the input of the next device, and so on. The standard allows for up to 32 devices on a single DMX link.

Each receiving device typically has a means for setting the "starting channel number" that it will respond to. For example, if two 6-channel fixtures are used, the first fixture might be set to start at channel 1 so it would respond to DMX channels 1 through 6, and the next fixture would be set to start at channel 7 so it would respond to channels 7 through 12.

The greatest strength of the DMX communications protocol is that it is very simple and robust. It involves transmitting a reset condition (indicating the start of a new "packet"), a start code, and up to 512 bytes of data. Data packets are transmitted continuously. As soon as one packet is finished, another can begin with no delay if desired (usually another follows within 1 ms). If nothing is changing (i.e. no lamp levels change) the same data will be sent out over and over again. This is a great feature of DMX -- if for some reason the data is not interpreted the first time around, it will be re-sent shortly.

Not all 512 channels need to be output per packet, and in fact, it is very uncommon to find all 512 used. The fewer channels are used, the higher the "refresh" rate. It is possible to get DMX refreshes at around 1000 times per second if only 24 channels are being transmitted. If all 512 channels are being transmitted, the refresh rate is around 44 times per second.

In summary, since its design and evolution in the 1980's DMX has become the standard for lighting control. It is flexible, robust, and scalable, and its ability to control everything from dimmer packs to moving lights to foggers to lasers makes it an indispensable tool for any lighting designer or lighting performer.

## **Keeping Your Puck: Remote Series Fixture As Good As New**

The fixture you've received is a rugged, tough piece of pro lighting equipment, and as long as you take care of it, it will take care of you. That said, like anything, you'll need to take care of it if you want it to operate as designed. You should absolutely keep the fixture clean, especially if you are using it in an environment with a lot of dust, fog, haze, wild animals, wild teenagers or spilled drinks.

Cleaning the optics routinely with a suitable glass cleaner will greatly improve the quality of light output. Keeping the fans free of dust and debris will keep the fixture running cool and prevent damage from overheating.

In transit, keep the fixtures in cases. You wouldn't throw a prized guitar, drumset, or other piece of expensive gear into a gear trailer without a case, and similarly, you shouldn't even think about doing it with your shiny new light fixtures.

Common sense and taking care of your fixtures will be the single biggest thing you can do to keep them running at peak performance and let you worry about designing a great light show, putting on a great concert, or maximizing your client's satisfaction and "wow factor." That's what it's all about, after all!

### **Returns (Gasp!)**

We've taken a lot of precautions to make sure you never even have to worry about sending a defective unit back, or sending a unit in for service. But, like any complex piece of equipment designed and built by humans, once in a while, something doesn't go as planned. If you find yourself with a fixture that isn't behaving like a good little fixture should, you'll need to obtain a Return Authorization (RA).

Don't worry, this is easy. Just send an email to [support@blizzardlighting.com](mailto:support@blizzardlighting.com), and we'll issue you an RA. Then, you'll need to send the unit to us using a trackable, pre-paid freight method. We suggest using USPS Priority or UPS. Make sure you carefully pack the fixture for transit, and whenever possible, use the original box & packing for shipping.

When returning your fixture for service, be sure to include the following:

- 1.) Your contact information (Name, Address, Phone Number, Email address).
- 2.) The RA# issued to you
- 3.) A brief description of the problem/symptoms.

We will, at our discretion, repair or replace the fixture. Please remember that any shipping damage which occurs in transit to us is the customer's responsibility, so pack it well!

### **Shipping Issues**

**Damage incurred in shipping is the responsibility of the shipper, and must be reported to the carrier immediately upon receipt of the items. Claims must be made within seven (7) days of receipt.**

## Tech Specs!

<b>Weight &amp; Dimensions</b>	
Length	8.25 inches (210 mm)
Width	2.5 inches (63.5 mm)
Height	8.25 inches (210 mm)
Weight	4.0 lbs (1.8 kg)
<b>Power</b>	
Operating Voltage	90-230VAC, 50-60 Hertz
Fuse	3A 250V
Power Consumption	20W
<b>Light Source</b>	
LED	198x 10mm Red/Green/Blue/Amber/White 100K hrs.
<b>Optical</b>	
Beam Angle	21 degrees 32 degree field
Luminous Intensity	4,075 Lux @ 1m
<b>Thermal</b>	
Max. Operating Temp.	104 degrees F (40 degrees C) ambient
<b>Control</b>	
Protocol	USITT DMX-512
DMX Channels	3, 5, or 12 (User Selectable)
Input	3-pin XLR Male
Output	3-pin XLR Female
Other Operating Modes	Standalone, Master/Slave, Sound Active, Color Preset, Standalone color mixing
<b>Coolness Factor</b>	
Leventy Billion Percent	
<b>Warranty</b>	2-year limited warranty, does not cover malfunction caused by damage to LED's.



**Enjoy your product!  
Our sincerest thanks for your purchase!  
--The team @ Blizzard Lighting**