



NUAGE

NUAGE MASTER CONTROL SURFACE
Ncs500-CT

Operation Manual

Using this manual

This operation manual supports keyword searching and linking as follows.

Keyword searching

Searching for keywords is performed using your pdf viewer's search function. If you are viewing this manual using Adobe Reader, type the term you wish to find into the Find toolbar and then press your computer's [Enter] key.

Jumping between pages

If using Adobe Reader, you can jump forwards and backwards to various pages in this manual. This provides a convenient way to return to your original page after clicking a page link.

Contents

Introduction	3
How to Read the Manual	3
Description of the Device	4
Top Panel	4
Front Panel	26
Rear Panel	27
Description of the Software Programs.....	28
Pages Shown on the Multi Function Display	28
NUAGE MASTER Setup	44
NUAGE Workgroup Manager	46
Troubleshooting (in operation).....	47
Appendix.....	47
Contents of the Getting Started Manual	47
Replacing Square-button Labels	47
Pro Tools Control	48
Added functions in NUAGE V2.0	52
Added functions in NUAGE V1.7	65
Added functions in NUAGE V1.6	80
Added functions in NUAGE V1.5	89
Added functions in NUAGE V1.2	96
Added functions in NUAGE V1.1	99

Information

- The illustrations and LCD screens as shown in this manual are for instructional purposes only, and may appear somewhat different from those on your device.
- Windows is a registered trademark of Microsoft® Corporation in the United States and other countries.
- Apple, Mac and Macintosh are trademarks of Apple Inc., registered in the U.S. and other countries.
- The company names and product names in this manual are the trademarks or registered trademarks of their respective companies.

Introduction

How to Read the Manual

Types and Contents

- **Getting Started**

This is the manual included with the device. Read this manual when setting up the device.

- **Operation Manual**

This is the PDF manual downloaded from the website. Read this manual when needing information about the functions and how to use the device.

Conventions

- **Brackets and quotation marks**

Brackets ([]) and quotation marks (“ ”) around names and phrases in this manual are used to indicate the following.

Mark	Indication target
[]	<ul style="list-style-type: none"> • Buttons, switches, indicators, terminals, etc. on the device. • Keys on a computer keyboard.
“ ”	<ul style="list-style-type: none"> • Menus, buttons, tabs, areas, windows, etc. on a computer window, software window, and touch screen. • Excerpts of messages, function names, terms in the manual, etc.

- **Windows or Mac**

When the procedures or explanations are specific to only one of the platforms, Windows or Mac, this is properly indicated in the manual. When the platforms do not appear, procedures or explanations are for both Windows and Mac.

- **Procedures**

“→” appears on some procedures in the manual. For example, the string “Devices” → “Device Setup” → “Control Panel” indicates that you should perform the procedures in the following order.

1. Click the “Devices” menu.
2. Select the “Device Setup” option.
3. Click the “Control Panel” button.

- **Keyboard Shortcuts**

[Windows modifier key]/[Mac modifier key] + [key] shows the shortcut keys. For example, [Ctrl]/[command] + [Z] means “press [Ctrl] under Windows or [command] under Mac, then press [Z].”

- **Screens**


This manual predominantly uses screenshots of Windows. However, Mac screenshots are used when instructions of the function apply only to the Mac. Also, this manual uses screenshots of Nuendo 6. If you are using another version of Nuendo, the actual screenshots might not be the same. For details, refer to the Nuendo manuals (PDF) opened from the “Help” menu.

Nuendo References


For brevity, the descriptions of Nuendo functions in this manual have been kept simple and basic. For details on Nuendo functions, refer to the Nuendo manuals (PDF) opened from the “Help” menu.

Description of the Device

Top Panel

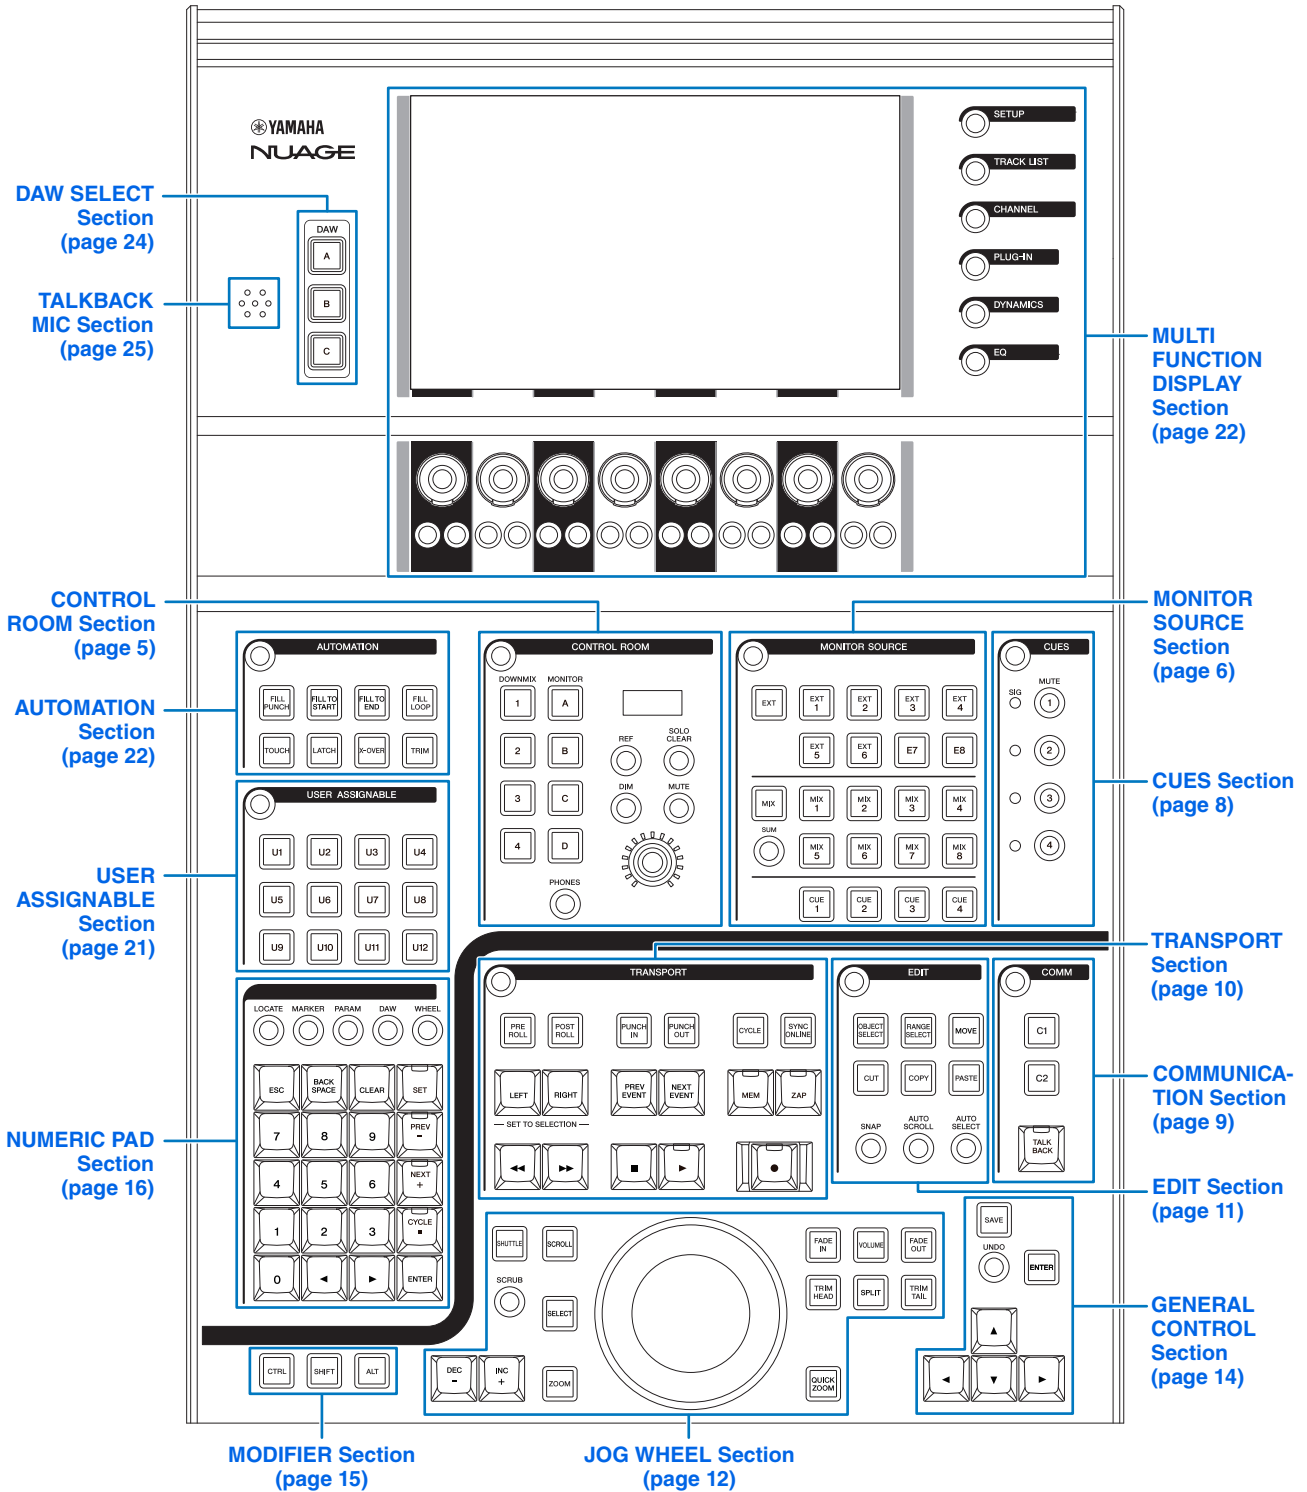

CONTROL ROOM Section

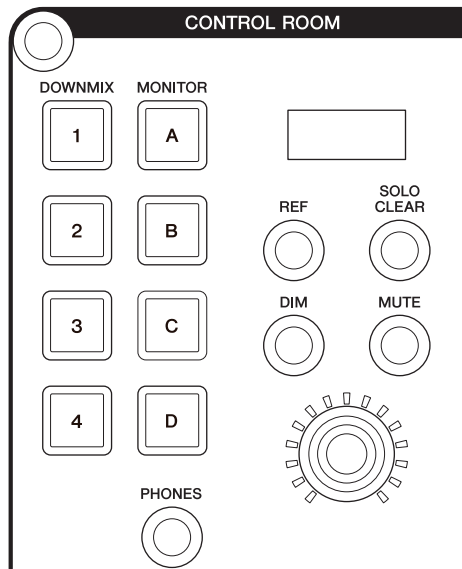

Overview


This section is for operating the Control Room features. To operate it, make sure that Control Room is turned on in Nuendo and the channels you need have been created, then configure the input/output routing for those channels.

The [DOWNMIX 1] – [DOWNMIX 4] buttons are for selecting the Downmix presets 1 – 4. The [MONITOR A] – [MONITOR D] buttons are for selecting Monitors A – D.

The [CONTROL ROOM LEVEL] knob is for adjusting the Control Room level. However, when [PHONES] is on, you can adjust the Phones level with this knob.

If you have configured multiple DAW software programs and operate them by selecting the “DAW SELECT Section” (page 24), this section will always operate the Control Room of DAW A. In other words, the Control Room section is not affected by the DAW software selection.

Controls and Functions

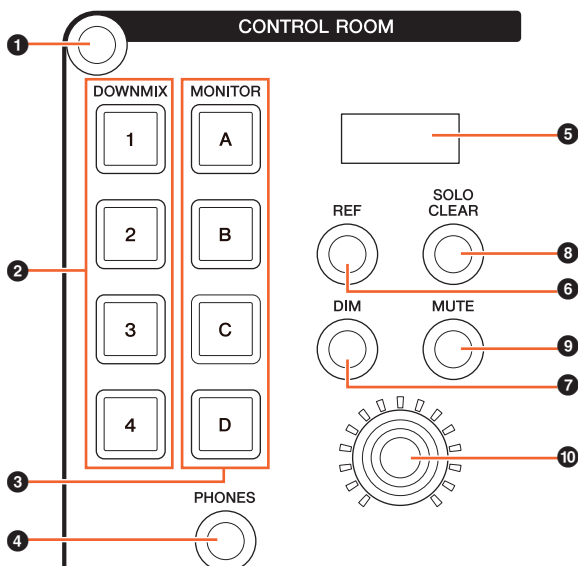

1 [Display access]

Calls up the “CONTROL ROOM Page” (page 38) in the [Multi function display]. When the CONTROL ROOM page is shown, you can toggle among the tabs of the CONTROL ROOM page.

2 [DOWNMIX 1] – [DOWNMIX 4]

Selects the Downmix presets.

Lamp	Description
Lit	Downmix preset has been selected.
Dim	Downmix preset has not been selected.

3 [MONITOR A] – [MONITOR D]

Selects the desired Monitor.

Lamp	Description
Lit	Monitor has been selected.
Dim	Monitor has not been selected.
Off	Monitor has not been configured yet.

4 [PHONES]

Assigns operation of the following controls to “Phones.”

- [CONTROL ROOM LEVEL] knob
- [EXT] (page 7) in the MONITOR SOURCE Section
- [MIX] (page 7) in the MONITOR SOURCE Section
- [CUE 1] – [CUE 4] (page 7) in the MONITOR SOURCE Section

Lamp	Description
Lit	The controls above are assigned to Phones.
Dim	The controls above are assigned to Control Room.
Off	Phones settings have not been configured yet.

5 [CONTROL ROOM display]

Displays the assigned function and level, adjustable with the [CONTROL ROOM LEVEL] knob.



The level indication can be switched between the setting value of Nuendo (dB) and SPL value. To change this, select the MAIN page (page 38) in the CONTROL ROOM page shown on the [Multi function display]. You can set the SPL value in the “Setup Page” (page 29) shown on the [Multi function display]. This value changes, maintaining the difference with the value set in Nuendo.

6 [REF]

Sets the Control Room level to the Reference level. When this is on (lit), the level is reset to the Reference level. When you turn this is off (dim), the level is set back to the previous setting. The button goes dim when you change the level after turning this on.

When you press [REF] while holding down the appropriate button(s) in the “MODIFIER Section” (page 15), the function changes as follows.

Modifier button	Function
[ALT]	Resets the Reference level to the current Control Room level setting.

7 [DIM]

Turns “DIM” on (lit) or off (dim). When this is on, the Control Room level is lowered. When this is off, the previous level is restored. You can set the desired “DIM” level in Nuendo.

8 [SOLO CLEAR]

Turns off Solo or Listen for all channels. The button lights while it is being held down.


Lamp	Description
Flashing	One or more channels in Mixer have Solo or Listen turned on.
Off	Solo and Listen are already off for all channels.

9 [MUTE]

Turns Mute of the Control Room on (lit) and off (dim).

10 [CONTROL ROOM LEVEL knob]

Adjusts the Control Room level. However, when [PHONES] is on, you can adjust the Phones level with this knob. To adjust the level more finely (fine mode), simultaneously hold down the knob and turn it.

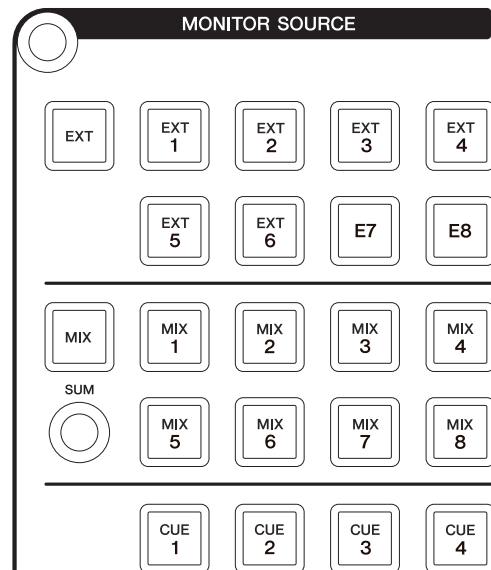
MONITOR SOURCE Section**Overview**

This section lets you select the source of the Control Room. To operate it, make sure that Control Room is turned on in Nuendo and the channels you need have been created, then configure the input/output routing for those channels.

The [EXT], [MIX], [CUE 1] – [CUE 4] buttons are for selecting the source of the Control Room. However, when [PHONES] (page 5) in the CONTROL ROOM section is on, you can select the source for Phones with these buttons. The [EXT 1] – [EXT 6] buttons are for selecting the “EXT” source, and [MIX 1] – [MIX 8] are for selecting the “MIX” source.

If you have configured multiple DAW software programs and operate them by selecting the “DAW SELECT Section” (page 24), this section will always operate the Control Room of DAW A. In other words, the Control Room section is not affected by the DAW software selection.

Controls and Functions

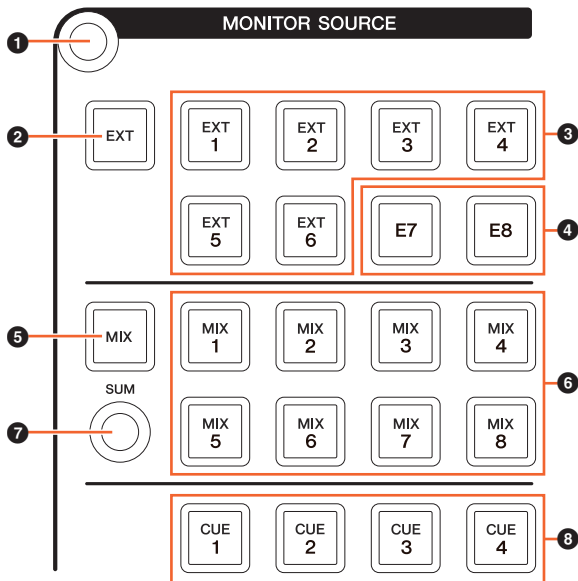

1 [Display access]

Calls up the “MONITOR SOURCE Page” (page 40) in the [Multi function display].

2 [EXT]

Switches to the “EXT” Control Room sources. However, when [PHONES] (page 5) in the CONTROL ROOM section is on, you can set the Phones source to “EXT” with this button.

Lamp	Description
Lit	The source is set to “EXT.”
Dim	One or more sources have been set to “EXT.”
Off	No sources have been set to “EXT” yet.

3 [EXT 1] – [EXT 6]

Selects the specific sources for “EXT.”

Lamp	Description
Lit	The source for “EXT” has been selected.
Dim	The source for “EXT” has not been selected.
Off	The source of the Control Room has not been configured to “EXT” yet.

4 [E7]/[E8]

Not applicable.

5 [MIX]

Switches to the “MIX” Control Room sources. However, when [PHONES] (page 5) in the CONTROL ROOM section is on, you can set the Phones source to “MIX” with this button.

Lamp	Description
Lit	The source is set to “MIX.”
Dim	One or more sources have been set to “MIX.”
Off	No sources have been set to “MIX” yet.

6 [MIX 1] – [MIX 8]

Selects the specific sources for “MIX.”

Lamp	Description
Lit (green)	The source has been assigned as an input source of “MIX.”
Dim (green)	The source has not been assigned as an input source of “MIX.”
Lit (orange)	The source has been assigned as an output or group source of “MIX.”
Dim (orange)	The source has not been assigned as an output or group source of “MIX.”
Off	The source for “MIX” has not been configured yet.

7 [SUM]


Switches between multiple selection (lit) or single selection (dim) when the source of “MIX” has been specified to [MIX 1] – [MIX 8].

8 [CUE 1] – [CUE 4]

Sets the source of the Control Room to “CUE.” However, when [PHONES] (page 5) in the CONTROL ROOM section is on, you can set the Phones source to “CUE” with this button.

Lamp	Description
Lit	The source is set to CUE.
Dim	The source is not set to CUE.
Off	CUE has not been set.

CUES Section

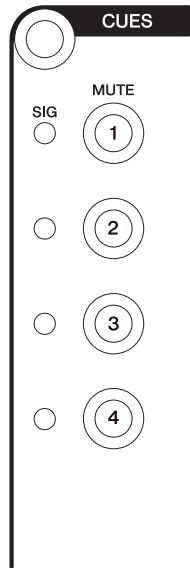


Overview

This section is for turning Mute of CUE 1 – CUE 4 in the Control Room on and off. To operate it, make sure that Control Room is turned on in Nuendo and the channels you need have been created, then configure the input/output routing for those channels.

If you have configured multiple DAW software programs and operate them by selecting the “DAW SELECT Section” (page 24), this section will always operate the Control Room of DAW A. In other words, the Control Room section is not affected by the DAW software selection.

Controls and Functions

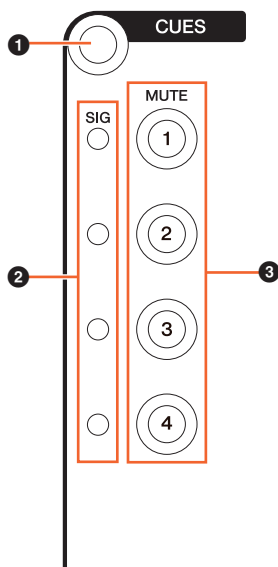

❶ [Display access]

Calls up the “CUES Page” (page 40) in the [Multi function display].

❷ [SIG Indicators]

Roughly indicates the CUE 1 – CUE 4 levels.


Lamp	Description
Lit (red)	Overload
Lit (orange)	-18 dB or more, but less than 0 dB
Lit (green)	-40 dB or more, but less than -18 dB
Off	Less than -40 dB

❸ [MUTE 1] – [MUTE 4]

Turns Mute of CUE 1 – CUE 4 on and off.

Lamp	Description
Lit	Mute of CUE is turned on.
Dim	Mute of CUE is turned off.
Off	CUE has not been configured yet.

COMMUNICATION Section

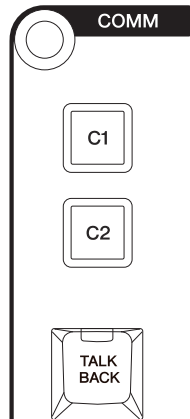


Overview

This section is for using Control Room's Talkback feature and for executing assigned functions. To operate it, make sure that Control Room is turned on in Nuendo and the channels you need have been created, then configure the input/output routing for those channels.

Press the [TALK BACK] button to turn Talkback on and off.

If you have configured multiple DAW software programs and operate them by selecting the "DAW SELECT Section" (page 24), this section will always operate the Control Room of DAW A. In other words, the Control Room section is not affected by the DAW software selection.

Controls and Functions

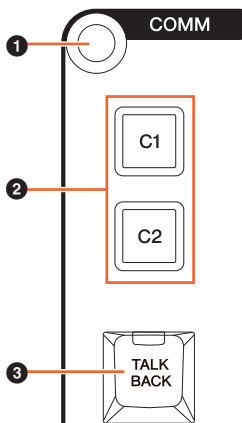

1 [Display access]

Calls up the "COMMUNICATION Page" (page 41) in the [Multi function display].

2 [C1]/[C2]


Executes the assigned function. The button lights while held down. To assign the function, edit it from the "Communication Page" (page 45) in NUAGE MASTER Setup.

Lamp	Description
Dim	The function has been assigned.
Off	The function has not been assigned yet.

3 [TALK BACK]

Turns "Talkback" on (lit) and off. Each short press (of about 0.2 seconds) toggles this function on or off. Holding down the button keeps it in the "on" state until released.


TRANSPORT Section

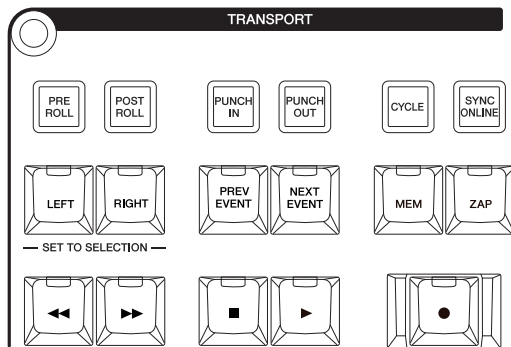

Overview

This section is for operating the transport functions.

Controls and Functions

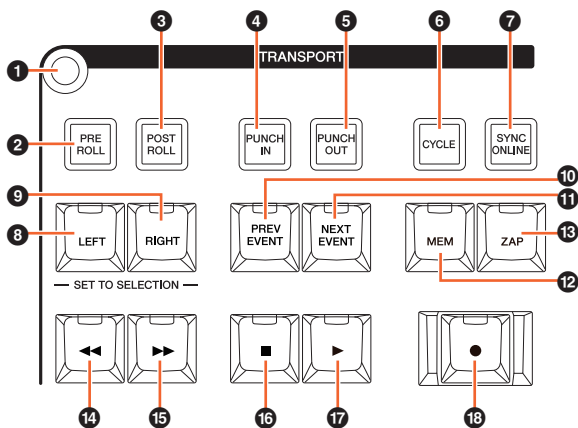

1 [Display access]

Calls up the “TRANSPORT Page” (page 41) in the [Multi function display]. When the TRANSPORT Page is shown, you can toggle among the tabs of the TRANSPORT Page.

2 [PRE ROLL]

Turns “Pre-roll” on (lit) and off (dim).

3 [POST ROLL]

Turns “Post-roll” on (lit) and off (dim).

4 [PUNCH IN]

Turns “Punch In” on (lit) and off (dim).

5 [PUNCH OUT]

Turns “Punch Out” on (lit) and off (dim).

6 [CYCLE]

Turns “Cycle” on (lit) and off (dim).

7 [SYNC ONLINE]

Turns Synchronization on and off.

Lamp	Description
Lit	Synchronization is on.
Dim	Synchronization is off.
Flash	Synchronization is on; however, Nuendo has not yet received external time code or clock.

8 [LEFT]

Moves the Project Cursor to the Left Locator position.

To set the current Project Cursor position to the Left Locator position, press [LEFT] while the pop-up window for the Set mode is shown after you’ve pressed [SET] (page 20) in the NUMERIC PAD section.

To move the Left Locator position, simultaneously hold down [LEFT] and turn the [Jog wheel] (page 13) in the JOG WHEEL section.

To set the selected area or range of the selected event to the Right and Left Locators position, press [SET] (page 20) in the NUMERIC PAD section to call up the pop-up window for the Set mode in [Multi function display], then simultaneously press [LEFT] and [RIGHT].

9 [RIGHT]

The same as [LEFT], except that the target is the Right Locator.

10 [PREV EVENT]

Moves the Project Cursor to the start position of the event under the Project Cursor, or the end position of the event previous to the Project Cursor in the selected channels. To move the Project Cursor continuously, hold down [PREV EVENT].

11 [NEXT EVENT]

Moves The Project Cursor to the end position of the event under the Project Cursor, or the start position of the event next to The Project Cursor in the selected channels. To move the Project Cursor continuously, hold down [NEXT EVENT].

12 [MEM]

Whenever pressed (for 0.5 seconds or longer), this button will store the current display condition of the Project Window. The lamp will turn on when a display condition is stored. Only one view can be memorized to this button. You can recall the memorized view by pressing [ZAP].

13 [ZAP]

Recalls the memorized Project Window view, set by [MEM]. Pressing it again restores the view to the previous one. The button lights while being held down.

Lamp	Description
Dim	The memorized Project Window view can be recalled.
Off	The Project Window view has not been memorized to [MEM] yet.

14 [◀◀] (fast rewind)

Operates Fast Rewind.

15 [▶▶] (fast forward)

Operates Fast Forward.

16 [■] (stop)


Operates Stop.

17 [▶] (play)


Operates Play. If pressed with a range or event selected and [ALT] held down, playback will begin from the start of the range or event.

18 [●] (record)

Operates Record.

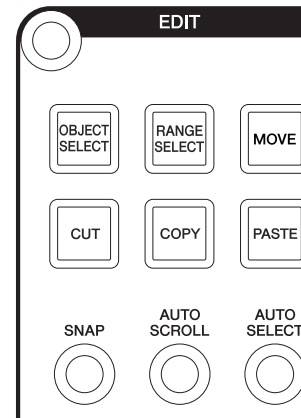EDIT Section**Overview**

This section contains Edit and Tools operations.

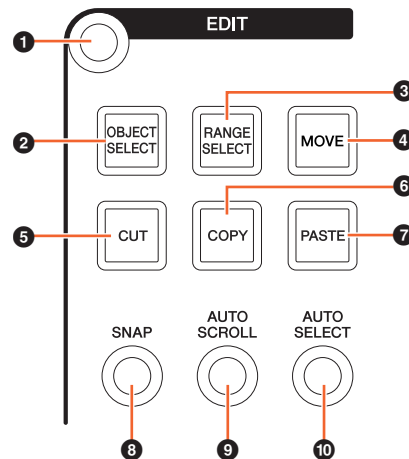Controls and Functions**1 [Display access]**

Calls up the “EDIT Page” (page 43) in the [Multi function display]. When the EDIT Page is shown, you can toggle among the banks of the EDIT Page.

2 [OBJECT SELECT]

Selects the Object Selection Tool. To change the resizing type, press the button repeatedly.

3 [RANGE SELECT]

Selects the Range Selection Tool. Pressing the button toggles between “Range Selection A” and “Range Selection B.”

4 [MOVE]

Refer to [MOVE] (page 13) in the JOG WHEEL section.

5 [CUT]

Executes the Cut operation. The button lights while held down.

Lamp	Description
Dim	The Cut operation can be executed.
Off	No events have been selected yet.

6 [COPY]

Executes the Copy operation. The button lights while held down.

Lamp	Description
Dim	The Copy operation can be executed.
Off	No events have been selected yet.

7 [PASTE]

Executes the Paste operation. The button lights while held down.

Lamp	Description
Dim	The Paste operation can be executed.
Off	No events have been selected yet.

8 [SNAP]


Turns Snap on (lit) and off (dim).

9 [AUTO SCROLL]

Turns Auto-Scroll on (lit) and off (dim).

10 [AUTO SELECT]

Turns Auto Select Events Under Cursor on (lit) and off (dim).

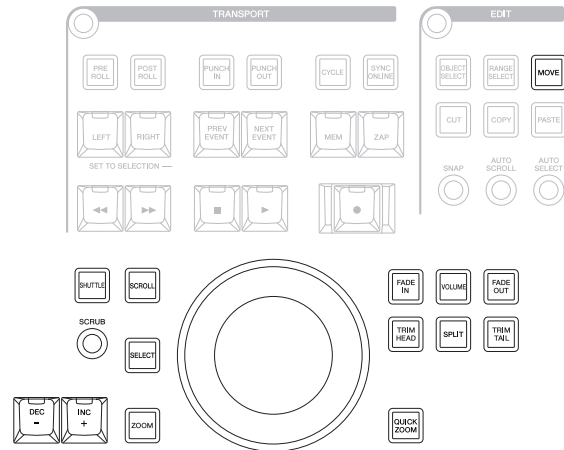JOG WHEEL Section**Overview**

This section is for using the [Jog wheel] to operate various parameters. The particular parameter which [Jog wheel] affects changes depending on the mode or function of the [Jog wheel].

[Jog wheel] has the following modes. The buttons used for selecting the respective modes are indicated in parentheses.

- Jog mode
- Shuttle mode ([SHUTTLE])
- Scroll mode ([SCROLL])
- Zoom mode ([ZOOM])
- Level mode ([VOLUME])
- Move mode ([MOVE])


The initial, default mode of the [Jog wheel] is the Jog mode, in which the wheel can be used to move the Project Cursor. When the Jog mode is enabled, the lamps of the buttons for selecting the mode are dim. To change the mode, press and release the desired mode button (the lamp lights). When you press a lit button, the lamp goes dim and the mode changes back to the Jog mode. You can temporarily select a different mode by holding down the button (the mode changes), and return to the previous mode by releasing the button.

The [Jog wheel] has the following functions. The buttons used for selecting the respective functions are indicated in parentheses.

- Select function ([SELECT])
- Fade In function ([FADE IN])
- Fade Out function ([FADE OUT])
- Trim Head function ([TRIM HEAD])
- Split function ([SPLIT])
- Trim Tail function ([TRIM TAIL])
- Quick Zoom function ([QUICK ZOOM])

For details on a particular mode or function, refer to the description of the corresponding button for operating the function and selecting the mode.

Controls and Functions

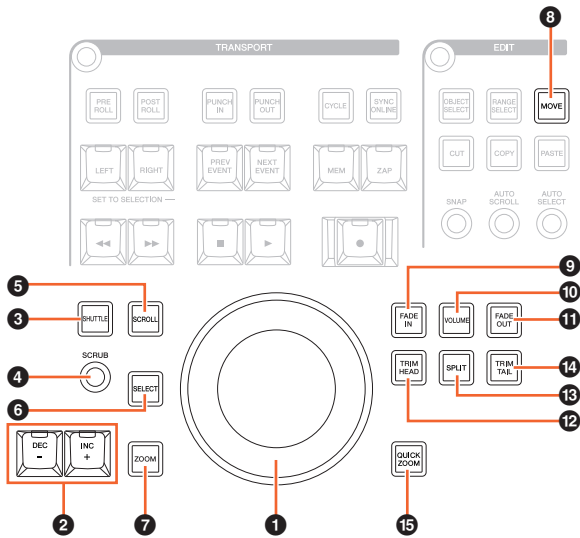

1 [Jog wheel]

Operates various parameters. The particular parameter which [Jog wheel] affects changes depending on the mode or function of the [Jog wheel].

2 [INC +]/[DEC -]

Increases or decreases the [Jog wheel]-controlled parameter incrementally. Holding down [INC +]/[DEC -] continuously increases/decreases the parameter.

3 [SHUTTLE]

Switches [Jog wheel] operation to the Shuttle mode. While the Shuttle mode is active, Scrubbing is always on. Keep in mind that the Shuttle mode cannot be selected during recording. In the Shuttle mode, you can use the [Jog wheel] to change playback speed from a complete stop to four times faster. The [Jog wheel] is an "infinite" controller with no defined positions. When enabled, the current wheel position is at 0 or stop. Turning it roughly 135 degrees to the right fast-forwards playback by four times normal; turning it 135 degrees to the left fast-reverses by four times. Between these two positions, playback speed can be continuously and smoothly adjusted.

4 [SCRUB]

Turns Scrubbing on (lit) and off (dim).

5 [SCROLL]

Switches [Jog wheel] operation to the Scroll mode. In the Scroll mode, you can scroll through the current Project by using the [Jog wheel].

6 [SELECT]

Operates the Select function. The operation of the Select function differs depending on the selected Tools, Object Selection or Range Selection. To switch between Object Selection and Range Selection, use [OBJECT SELECT] (page 11) and [RANGE SELECT] (page 11) in the EDIT section, or do this within Nuendo, etc.

When the Object Selection Tool is selected, you can select the event under the Project Cursor position in the selected channel.

When the Range Selection Tool is selected, you can select the range with the [Jog wheel]. The following steps illustrate by example.

1. **Select the channel(s) for which you want to specify the range.**
2. **Press [RANGE SELECT] in the Edit section to switch to the Range Selection Tool.** [RANGE SELECT] lights.
3. **Select the desired start position and press [SELECT] to fix it.** [SELECT] lights.
4. **Turn the [Jog wheel] to set the end position.** In this condition, you can set the end position by turning the [Jog wheel] clockwise, or set the start position (to before the position specified in step 3 above) by turning the [Jog wheel] counter-clockwise.
5. **Press [SELECT] to select the range.**

When you press [ZOOM] in step 3, the [Jog wheel] operates Zoom In and Zoom Out temporarily. When you press [ZOOM] again, the [Jog wheel] function returns back to the previous one. Also, when you press [PREV EVENT] or [NEXT EVENT] in step 3, the Project Cursor moves to the start position or end position of the range.

7 [ZOOM]

Switches [Jog wheel] operation to the Zoom mode. In the Zoom mode, you can control Zoom In and Zoom Out by using the [Jog wheel].

8 [MOVE]

Switches [Jog wheel] operation to the Move mode. In the Move mode, you can move the selected events or range by using the [Jog wheel].

9 [FADE IN]

Operates the Fade In function. The following steps illustrate by example.

- 1. Select the desired event for applying Fade In.**
- 2. Move the Project Cursor to the desired end, and press [FADE IN] to set it to that point.**
- 3. Set the Fade In position by pressing [FADE IN].**

In step 3 above, you can adjust the Fade In position more finely or to a different position by simultaneously holding down [FADE IN] and turning the [Jog wheel].

10 [VOLUME]

Switches [Jog wheel] operation to the Level mode. In the Level mode, you can adjust the entire level of the selected events by using the [Job wheel].

11 [FADE OUT]

Operates the Fade Out function. To adjust the length of the Fade Out, simultaneously hold down [FADE OUT] and use the [Jog wheel]. The operating procedure is the same as [FADE IN].

12 [TRIM HEAD]

Operates the Trim Head function. Pressing this once sets the Start position of the selected events or selected range (depending on whether the Object Selection Tool or Range Selection Tool has been enabled) to the current cursor position. To adjust this point, simultaneously hold down [TRIM HEAD] and use the [Jog wheel].

Lamp	Description
Dim (green)	The Object Selection Tool is enabled.
Dim (orange)	The Range Selection Tool is enabled.

13 [SPLIT]


Operates the Split function. When you press [SPLIT], the selected events will be split at the Project Cursor position.

14 [TRIM TAIL]

The same as [TRIM HEAD]. However, this button is for adjusting the End position.


15 [QUICK ZOOM]

Operates the Quick Zoom function. When you press [QUICK ZOOM] (lit), you can zoom in at the Project Cursor position. When you press [QUICK ZOOM] again (dim), the zoom status reverts to the previous one.

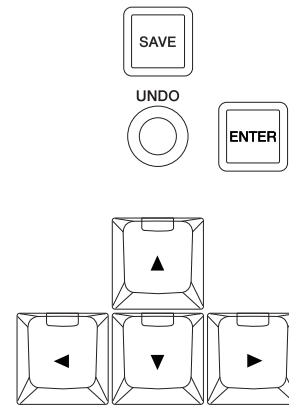GENERAL CONTROL Section**Overview**

This section is for file saving operations, the Undo function, and cursor movement.

The [SAVE] button is for saving a Project File as a new file, and adds an incremental number to the file name. The [▲]/[◀]/[▼]/[▶] buttons let you move the cursor or select the pages. The [ENTER] button is used in essentially the same way as a (left) mouse click: for fixing or executing an entered value or selected item, and also for focusing on a parameter before inputting a value. The [▲]/[◀]/[▼]/[▶] and [ENTER] buttons operate the same as the [Arrow keys] and [Enter] on the computer keyboard.

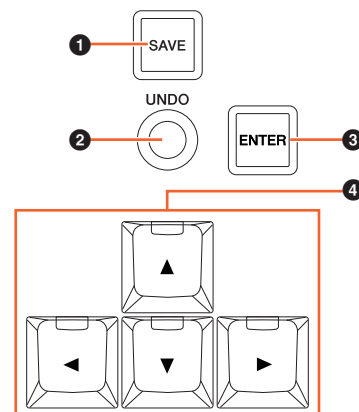Controls and Functions**1 [SAVE]**

Operates Save New Version. This button is for saving a Project File as a new file, and adds an incremental number to the file name. The button lights while held down.

2 [UNDO]

Executes Undo. The button lights while held down.

To execute Redo, simultaneously hold down [SHIFT] (page 15) in the MODIFIER section and press [UNDO]. The button lights while held down.

Lamp	Description
Dim (green)	Undo can be executed.
Dim (orange)	Redo can be executed (when [SHIFT] is pressed).
Off	Neither Undo nor Redo can be executed.

3 [ENTER]


For fixing or executing an entered value or selected item, and also for focusing on a parameter before inputting a value.

4 [▲]/[◀]/[▼]/[▶] (up/left/down/right)

Selects the channel or event, or moves the selected range. When you hold down one of the [▲]/[◀]/[▼]/[▶] buttons, the channel or event/selected range will be selected/moved continuously.

MODIFIER Section**Overview**

This section contains the modifier buttons. The buttons are used in the same way as [Shift], [Ctrl]/[Command], and [Alt]/[Option] on the computer keyboard.

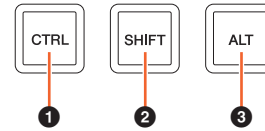Controls and Functions**1 [CTRL]**

Operates the Ctrl/Command function.


2 [SHIFT]

Operates the Shift function.

3 [ALT]

Operates the Alt/Option function.

NUMERIC PAD Section

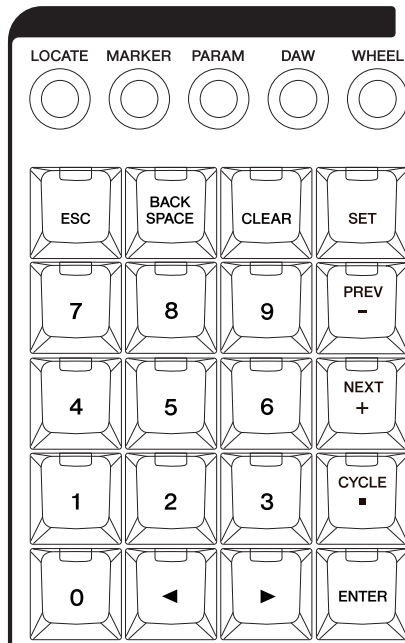


Overview

This section is for inputting various parameters by the [Input keys] — which include [0] – [9], [ENTER], [NEXT +], etc. The input parameter changes depending on the selected [Input keys] mode, all of which are listed below. The buttons used for selecting the respective modes are indicated in parentheses.

- Locate mode ([LOCATE])
- Marker mode ([MARKER])
- Parameter mode ([PARAM])
- DAW mode ([DAW])
- Wheel mode ([WHEEL])
- Set mode ([SET])

For details on a particular mode or function, refer to the description of the corresponding button for operating the function and selecting the mode.

Controls and Functions

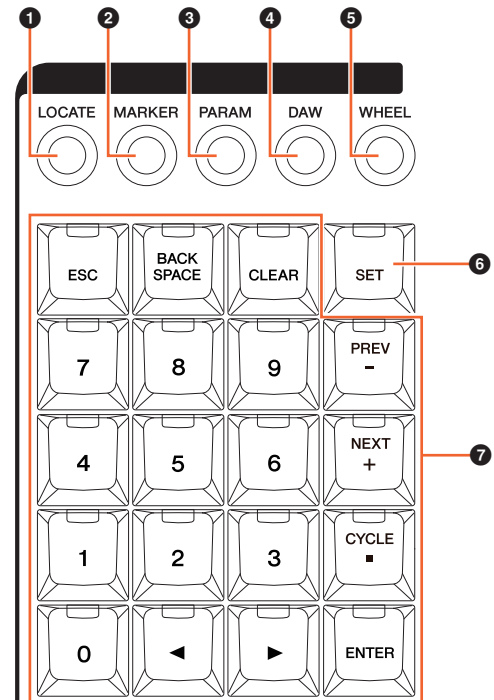

1 [LOCATE]


Sets the [Input keys] mode to Locate. In the Locate mode, you can set the Project Cursor position by using the [Input keys]. The time format of the Project Cursor position changes depending on the Nuendo configuration.

The Locate mode has the following three functions.

- Locate function ([page 16](#))
- Subtraction function ([page 17](#))
- Addition function ([page 17](#))

Locate Function

In the Locate function, you can set the Project Cursor position by inputting the desired number. When you press any one of the buttons [0] – [9], [◀]/[▶], [BACK SPACE], [CLEAR], [CYCLE .], and [ENTER] in the Locate mode, the pop-up window for the Locate function is shown on the [Multi function display].

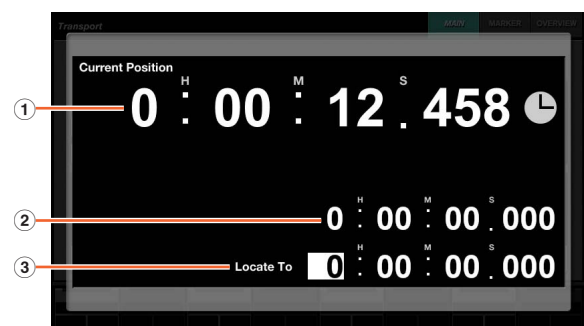

1 Current Position

Displays the current Project Cursor position.

② Offset for addition/subtraction function

Not applicable.

③ Locate To


Inputs Project Cursor position.

When the pop-up window for the Locate function is shown, the [Input keys] have the following functions.

[Input keys]	Function
[0] – [9]	For inputting numbers to the input position.
[◀]/[▶]	Moves the input digit right and left.
[BACK SPACE]	Deletes the number at the input position.
[CLEAR]	Deletes all input numbers.
[SET]	Selects the Set mode (the button lights).
[PREV -]	Selects the Subtraction function (the button lights).
[NEXT +]	Selects the Addition function (the button lights).
[CYCLE .]	If a number is present at the input position, moves the input digit right. If no number is present at the input position, sets the number to 0 and moves the input digit right.
[ESC]	Cancels the input then closes the pop-up window.
[ENTER]	Determines the input then closes the pop-up window.

Subtraction Function

In the Subtraction function, you can set the Project Cursor position by inputting a subtraction value. When you press [PREV -] in Locate mode, the pop-up window for the Subtraction function is shown on the [Multi function display].

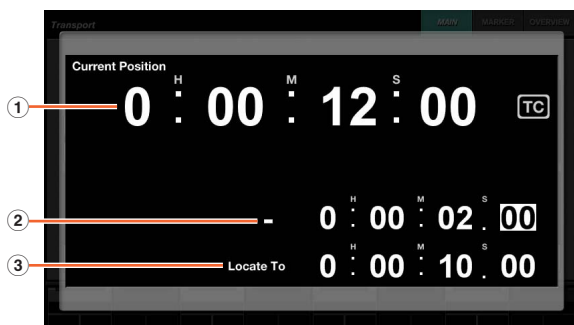

① Current Position

Displays the current Project Cursor position.

② Offset for subtraction function

Inputs the subtraction value.

③ Locate To


Displays the Project Cursor position including the subtraction value.

When the Subtraction function pop-up window is shown, the [Input keys] have the following functions.

[Input keys]	Function
[0] – [9]	For inputting numbers to the input position.
[◀]/[▶]	Moves the input digit right and left.
[BACK SPACE]	Deletes the number at the input position.
[CLEAR]	Deletes all input numbers.
[SET]	Selects the Set mode (the button lights).
[PREV -]	Sets the Project Cursor position by inputting the subtraction value. To adjust the value continuously, hold down the button.
[NEXT +]	Selects the Addition function (the button lights).
[CYCLE .]	Moves the input digit to the right.
[ESC]	Cancels the input then closes the pop-up window.
[ENTER]	Determines the input then closes the pop-up window.

Addition Function

In the Addition function, you can set the Project Cursor position by inputting an addition value. To call up the Addition function in the [Multi function display], press [NEXT +] in the Locate mode.

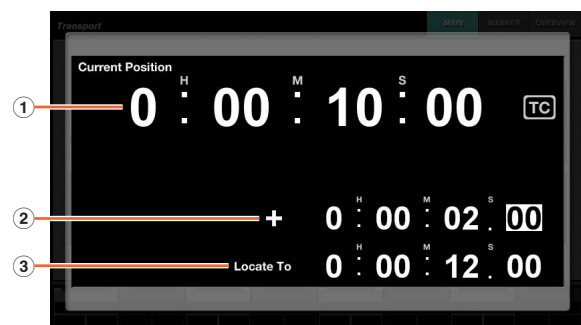

① Current Position

Displays the current Project Cursor position.

② Offset for addition function

Inputs the addition value.

③ Locate To

Displays the Project Cursor position including the addition value.

When the Addition function pop-up window is shown, the [Input keys] have the following functions.

[Input keys]	Function
[0] – [9]	For inputting numbers to the input position.
[◀]/[▶]	Moves the input digit right and left.
[BACK SPACE]	Deletes the number at the input position.
[CLEAR]	Deletes all input numbers.
[SET]	Selects the Set mode (the button lights).
[PREV -]	Selects the Subtraction function (the button lights).
[NEXT +]	Sets the Project Cursor position by inputting the addition value. To adjust the value continuously, hold down the button.
[CYCLE .]	Moves the input digit to the right.
[ESC]	Cancel the input then closes the pop-up window.
[ENTER]	Determines the input then closes the pop-up window.

② [MARKER]

Sets the [Input keys] to Marker mode. In the Marker mode, you can set the Project Cursor to the desired Marker position with the [Input keys].


The Marker mode has the following two functions.

- Marker Jump function ([page 18](#))
- Cycle Marker Jump function ([page 19](#))


Marker Jump Function

In the Marker Jump function, you can set the Project Cursor to the Marker position by inputting the Marker ID. When you press any one of the buttons [0] – [9], [BACK SPACE], [CLEAR], [PREV -], [NEXT +], [CYCLE .], and [ENTER] in the Marker mode, the pop-up window for the Marker Jump function is shown on the [Multi function display]. However, when the MARKER Page (page 42) in the TRANSPORT page is called up in the [Multi function display], the pop-up window is shown on the Label Pane area.

When a page other than MARKER is called up in the [Multi function display]

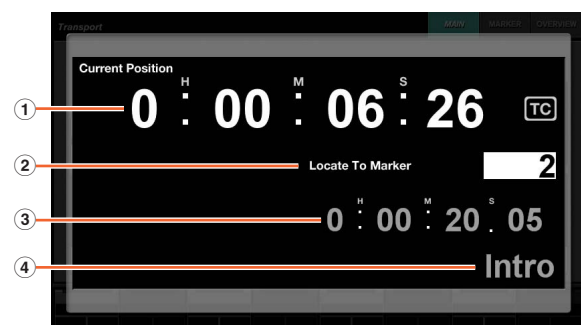

When the MARKER page is called up in the [Multi function display]

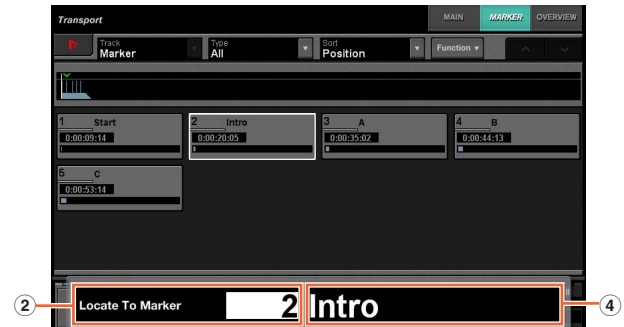

① Current Position

Displays the current Project Cursor position.

② Locate To Marker

Inputs the Marker ID.

③ Marker Position

Displays the Marker position of the Marker ID input to Locate To Marker.

④ Marker Name

Displays the Marker name of the Marker ID input to Locate To Marker.


When the Marker Jump pop-up window is shown, the [Input keys] have the following functions.

[Input keys]	Function
[0] – [9]	Inputs the Marker ID to the input position.
[◀]/[▶]	When the Marker window is open, moves the marker selection.
[BACK SPACE]	Deletes the Marker ID from the input position.
[CLEAR]	Deletes all input Marker IDs.
[SET]	Selects the Set mode (the button lights).
[PREV -]	Adds -1 to the input Marker ID.
[NEXT +]	Adds +1 to the input Marker ID.
[CYCLE .]	Selects the Cycle Marker Jump function (the button lights).
[ESC]	Cancel the input then closes the pop-up window.
[ENTER]	Determines the input then closes the pop-up window.


Cycle Marker Jump Function

In the Cycle Marker Jump function, you can set the Project Cursor to the Cycle Marker position by inputting the Marker ID of the Cycle Marker. When you press [CYCLE .] in the Marker mode, [CYCLE .] is lit, and the Cycle Marker Jump pop-up window is shown on the [Multi function display]. However, when the MARKER Page (page 42) in the TRANSPORT page is called up in the [Multi function display], the pop-up window is shown on the Label Pane area.

When a page other than MARKER is called up in the [Multi function display]

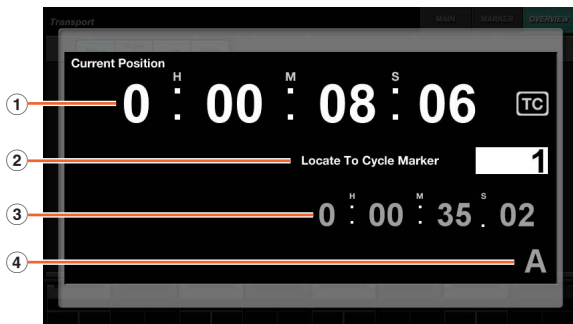

When the MARKER page is called up in the [Multi function display]

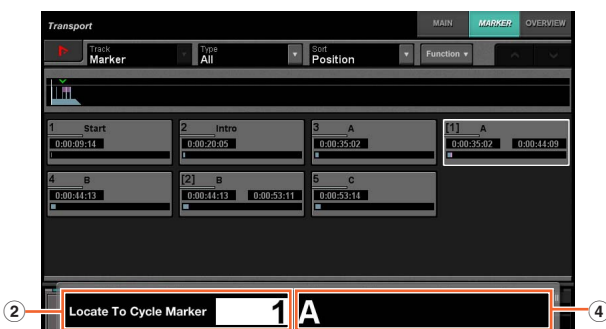

① Current Position

Displays the current Project Cursor position.

② Locate To Cycle Marker

Inputs the Marker ID.

③ Marker Position

Displays the Marker position of the Marker ID input to Locate To Cycle Marker.

④ Marker Name

Displays the Marker name of the Marker ID input to Locate To Cycle Marker.


When the Cycle Marker Jump pop-up window is shown, the [Input keys] have the following functions.

[Input keys]	Function
[0] – [9]	For inputting numbers to the input position.

[Input keys]	Function
[◀]/[▶]	When the Marker window is open, moves the marker selection.
[BACK SPACE]	Deletes the number at the input position.
[CLEAR]	Deletes all input numbers.
[SET]	Selects the Set mode (the button lights).
[PREV -]	Adds -1 to the input number.
[NEXT +]	Adds +1 to the input number.
[CYCLE .]	Selects the Marker Jump function (the button is unlit).
[ESC]	Cancels the input then closes the pop-up window.
[ENTER]	Determines the input then closes the pop-up window.

③ [PARAM]

Sets the [Input keys] mode to Parameter. In the Parameter mode, you can directly input a number value to the parameter in the page called up in the [Multi function display]. In the Parameter mode, the parameter is focused before inputting a value when you touch a valid parameter for editing. To input the parameter value, enter it with the [Input keys] then press [ENTER].

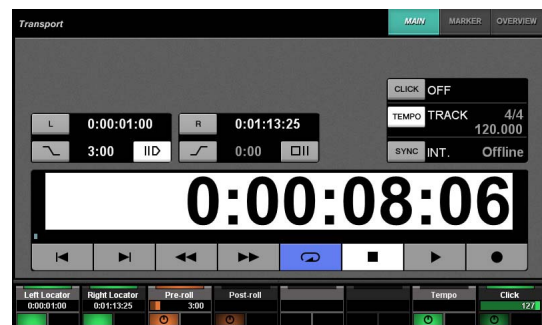

In the Parameter mode, the [Input keys] have the following functions.

[Input keys]	Function
[0] – [9]	For inputting numbers to the input position.
[◀]/[▶]	Moves the input digit right and left.
[BACK SPACE]	Deletes the number at the input position.
[CLEAR]	Deletes all input numbers.
[SET]	Selects the Set mode (the button lights).
[PREV -]	Inputs “-.”
[NEXT +]	Inputs “+.”
[CYCLE .]	Inputs a decimal point.
[ESC]	Cancels the input.
[ENTER]	Determines the input.

4 [DAW]

Sets the [Input keys] mode to DAW. In the DAW mode, you can input values to parameters on the DAW software, using the [Input keys] instead of the numeric keys on the computer keyboard.

In the DAW mode, the [Input keys] have the following functions.

[Input keys]	Function
[0] – [9]	Operates as [0] – [9].
[◀]/[▶]	Operates as [Arrow Key] (right/left).
[BACK SPACE]	Operates as [Backspace].
[CLEAR]	Operates as [Delete].
[SET]	Selects the Set mode (the button lights).
[PREV -]	Operates as [-].
[NEXT +]	Operates as [+].
[CYCLE .]	Operates as [.]
[ESC]	Operates as [Esc].
[ENTER]	Operates as [Enter].

5 [WHEEL]

Sets the [Input keys] mode to Wheel. In the Wheel mode, you can input values to parameters operated by using the [Jog wheel] (page 13) in the JOG WHEEL section. The input parameter changes depending on the mode or the function of [Jog wheel]. The following chart indicates the relation between the mode or the function of [Jog wheel] and the input parameter.

Mode or function of [Jog wheel]	Input parameter
Jog mode	Inputs the Project Cursor position.
Select mode	Inputs the start position of the selection.
Level mode	Inputs the volume value.
Move mode	Inputs the offset value of the selected event.
Fade In function	Inputs the Fade In end position.
Fade Out function	Inputs the Fade Out start position.
Trim Head function	Inputs the Trim Head position.
Trim Tail function	Inputs the Trim Tail position.


When you press any one of the buttons [0] – [9], [◀]/[▶], [BACK SPACE], [CLEAR], [PREV -], [NEXT +], [CYCLE .], [ENTER] in the Wheel mode, the pop-up window for inputting the parameter is shown on the [Multi function display]. However, in the case of the Fade In function, Trim Head function, etc., simultaneously hold down the relevant function's button and use the [0] – [9] buttons.

When the pop-up window is shown, the [Input keys] have the following functions.

[Input keys]	Function
[0] – [9]	For inputting numbers to the input position.
[◀]/[▶]	Moves the input digit right and left.
[BACK SPACE]	Deletes the number at the input position.
[CLEAR]	Deletes all input numbers.?
[SET]	Selects the Set mode (the button lights).
[PREV -]	Inputs "-."
[NEXT +]	Inputs "+."
[CYCLE .]	Inputs ".".
[ESC]	Cancels the input then closes the pop-up window.
[ENTER]	Determines the input then closes the pop-up window.

6 [SET]

Sets the [Input keys] mode to the Set mode. In the Set mode, you can set the Marker to the current Project Cursor position, and set the Cycle Marker to the current Left/Right Locator with the [Input keys]. When you press [SET], the pop-up window for setting the Marker or Cycle Marker is shown on the [Multi function display].

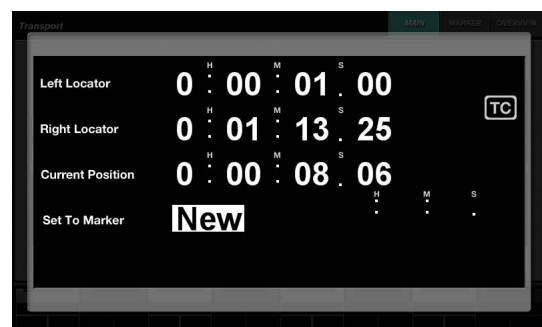

Touch the desired number (field) on the pop-up window to select it for editing.

When the pop-up window is shown, the [Input keys] have the following functions.


[Input keys]	Function
[0] – [9]	For inputting numbers to the input position.
[◀]/[▶]	Moves the input digit to right and left.
[BACK SPACE]	Deletes the number at the input position.
[CLEAR]	Deletes all input numbers.
[SET]	Cancel the input then closes the pop-up window.
[PREV -]	Adds -1 to the input number.
[NEXT +]	Adds +1 to the input number.
[CYCLE .]	Selects the type of Marker to be set. When off, this indicates Marker, and when lit indicates Cycle Marker.
[ESC]	Cancel the input then closes the pop-up window.
[ENTER]	Determines the input then closes the pop-up window.

You can set the locator position by [SET] and [LEFT]/[RIGHT] in the TRANSPORT section. For details, refer to the description of [LEFT] (page 10) in the TRANSPORT section.

7 [Input keys]

Inputs the parameter. The input parameter changes depending on the [Input keys] mode. For details, refer to the description of the buttons for changing the mode, such as [LOCATE], [MARKER], etc.


USER ASSIGNABLE Section

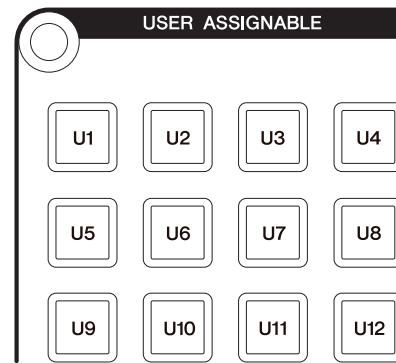

Overview

This section is used to execute assigned functions. For details on assigning functions, see “User Assignable Settings” (page 44) in NUAGE FADER Hardware Setup.

Controls and Functions

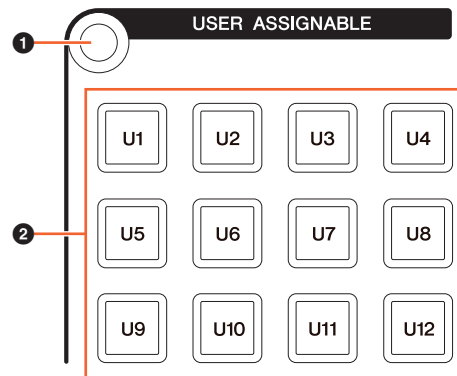

1 [Display access]


Calls up the “USER ASSIGNABLE Page” (page 38) in the [Multi function display]. When the USER ASSIGNABLE Page is shown, you can toggle among the banks of the USER ASSIGNABLE Page.

2 [U1] – [U12]

Executes the assigned function. The button lights while held down.

Lamp	Description
Dim	A function can be used.
Off	A function cannot be used.

AUTOMATION Section

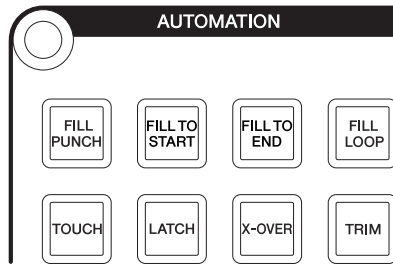


Overview

This section is for operating Automation.

The function assignments of the buttons can be changed to other Automation functions as desired. For details on changing the function assignments, see "Automation window" (page 45) in NUAGE MASTER Setup.

Controls and Functions

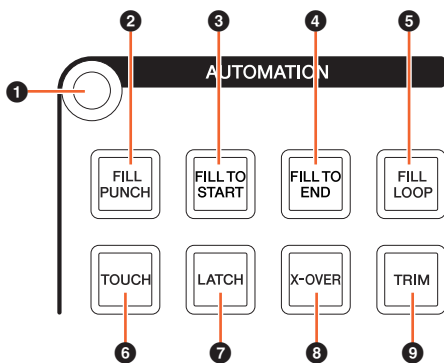

1 [Display access]

Calls up the "AUTOMATION Page" (page 37) in the [Multi function display].

2 [FILL PUNCH]

Turns Fill To Punch on (lit) and off (dim).

3 [FILL TO START]

Turns Fill To Start on (lit) and off (dim).

4 [FILL TO END]

Turns Fill To End on (lit) and off (dim).

5 [FILL LOOP]

Turns Fill Loop on (lit) and off (dim).

6 [TOUCH]

Selects the Touch mode.

7 [LATCH]

Selects the Auto-Latch mode.


8 [X-OVER]

Selects the Cross-Over mode.

9 [TRIM]

Turns Trim on (lit) and off (dim).

MULTI FUNCTION DISPLAY Section

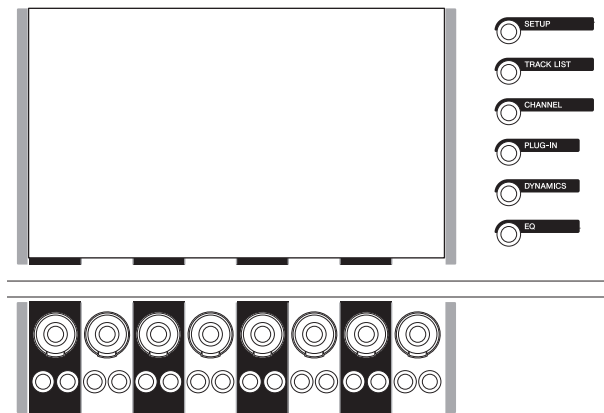

Overview

This section is for displaying and editing the section and channel parameters.

The [Multi function display] is a touch screen for displaying the page for editing the section and channel parameters. You can select and edit certain parameters on the page by touching it.

NOTICE


Never use a sharp or pointed object such as your fingernail to operate the touch screen. Doing so may scratch the screen and render the touch screen inoperable

To open the page displayed on the [Multi function display], press [Display access] at the upper left of the section or the right side of the [Multi function display].


[Display access] at upper left of section



[Display access] at right side of the [Multi function display]

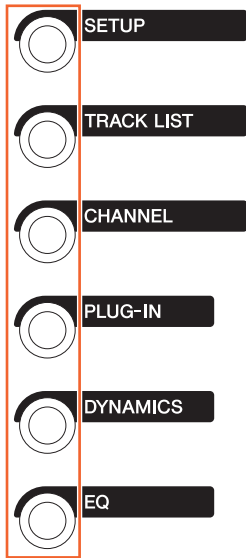

The [Multi function knobs] are touch-sensitive knobs for adjusting various parameters.

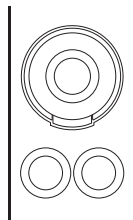


The [Multi function knob] has four separate control operations: touching (which brightens the corresponding parameter indication), turning, pressing, and simultaneously holding down and turning. The [Multi function A and B buttons] are directly below each [Multi function knob]. These buttons are for turning functions on and off or for selecting the controllable parameters of the [Multi function knobs].

The controllable parameters of the [Multi function knobs] change depending on the page shown on the [Multi function display]. The parameter information of the [Multi function knobs] appears on the Label Pane area at the bottom of the page shown on the [Multi function display].



The following chart indicates the relation between the “Label Pane” and the controllable parameters of the [Multi function knob].

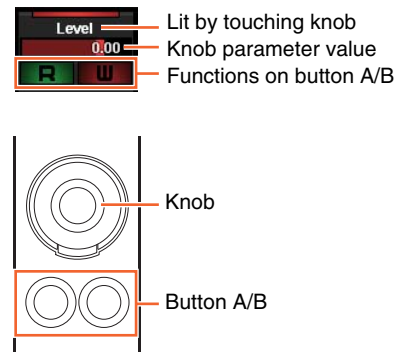

Depending on the page shown on the [Multi function display], the [Multi function knob] has the following functions.


Operation	Function
Touching	<ul style="list-style-type: none"> Highlights the parameter. Shows the pop-up window.
Turning	<ul style="list-style-type: none"> Adjusts the parameter. Selects the parameter. Moves the cursor.
Pressing	<ul style="list-style-type: none"> Shows the pop-up window. Sets the selected parameter. Opens and closes the folder.
Simultaneously holding down and turning	Adjusts the parameter finely (fine mode).

When you operate the [Multi function knob] while holding down the appropriate button(s) in the “MODIFIER Section” (page 15), the function changes as follows.

Operation	Function
Simultaneously holding down [SHIFT] and turning knob	Adjusts the parameter finely (fine mode).
Simultaneously holding down [CTRL] and pressing knob	Resets the parameter to the default value.

For details on the various pages of the [Multi function display], refer to “Pages Shown on the Multi Function Display” (page 28) in the description of the software programs.

Controls and Functions

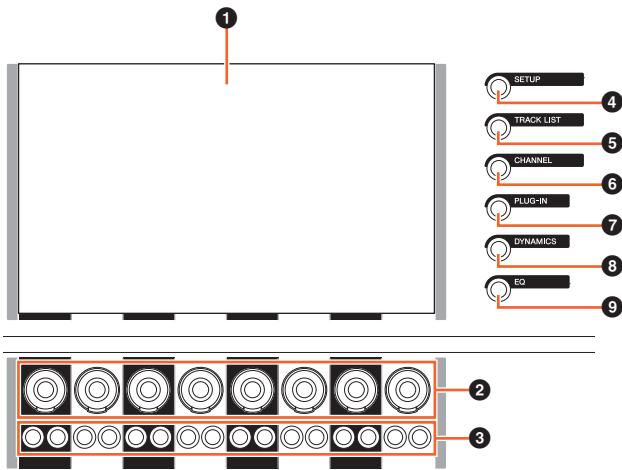

1 [Multi function display]

Displays pages for editing parameters in various sections, or pages for editing channel parameters.

2 [Multi function knob]

Adjusts the various parameters. The color of the LED on the [Multi function knob] changes depending on the type of the controllable parameter.

3 [Multi function button A]/[Multi function button B]

Selects and turns on/off the controllable parameters of the [Multi function knobs].

4 [SETUP]

Calls up the “SETUP Page” (page 29) in the [Multi function display].

5 [TRACK LIST]

Calls up the “TRACK LIST Page” (page 30) in the [Multi function display]. When the TRACK LIST page is shown, you can select one of the tabs of the TRACK LIST page.

6 [CHANNEL]

Calls up the “CHANNEL CONTROL Page” (page 32) to the [Multi function display]. When the CHANNEL CONTROL page is shown, you can select one of the tabs of the CHANNEL CONTROL page.

7 [PLUG-IN]

Calls up the “PLUG-IN Page” (page 36) to the [Multi function display].

8 [DYNAMICS]

Calls up the “DYN Page” (page 34) to the [Multi function display].

9 [EQ]

Calls up the “EQ Page” (page 34) to the [Multi function display].


DAW SELECT Section



Overview

This section is for selecting the target DAW software for operation. This section allows you to select the particular DAW software when you have connected and configured multiple DAW software programs. For details on connecting and settings, refer to the NUAGE Workgroup Manager manual (page 46; PDF).

Controls and Functions

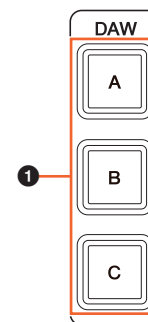

1 [DAW A] – [DAW C]

Selects the target DAW software for operation.

Lamp	Description
Lit	The DAW software has been selected.
Dim	The DAW software has not been selected yet.
Dark	The DAW software has not been configured yet.


TALKBACK MIC Section



Overview

This is a section for the talkback microphone.


Controls and Functions



❶ [TALKBACK microphone]

Microphone for Talkback operation. The audio signal input to the [TALKBACK microphone] is output from the [TALKBACK OUT +4dBu] jack ([page 27](#)) on the rear panel.

Front Panel

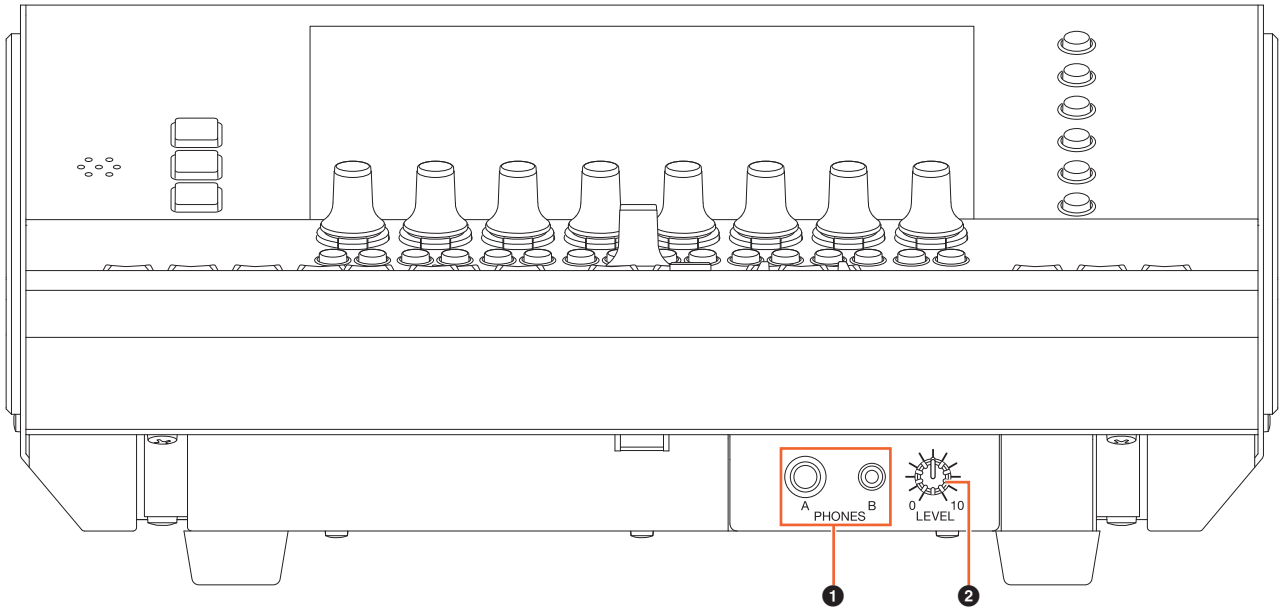


❶ [PHONES A/B]

For connection to headphones. Audio input via [TO PHONES L/R] (page 27) on the rear panel is output here.

❷ [LEVEL]

Adjusts the output signal level of [PHONES A/B].

Rear Panel

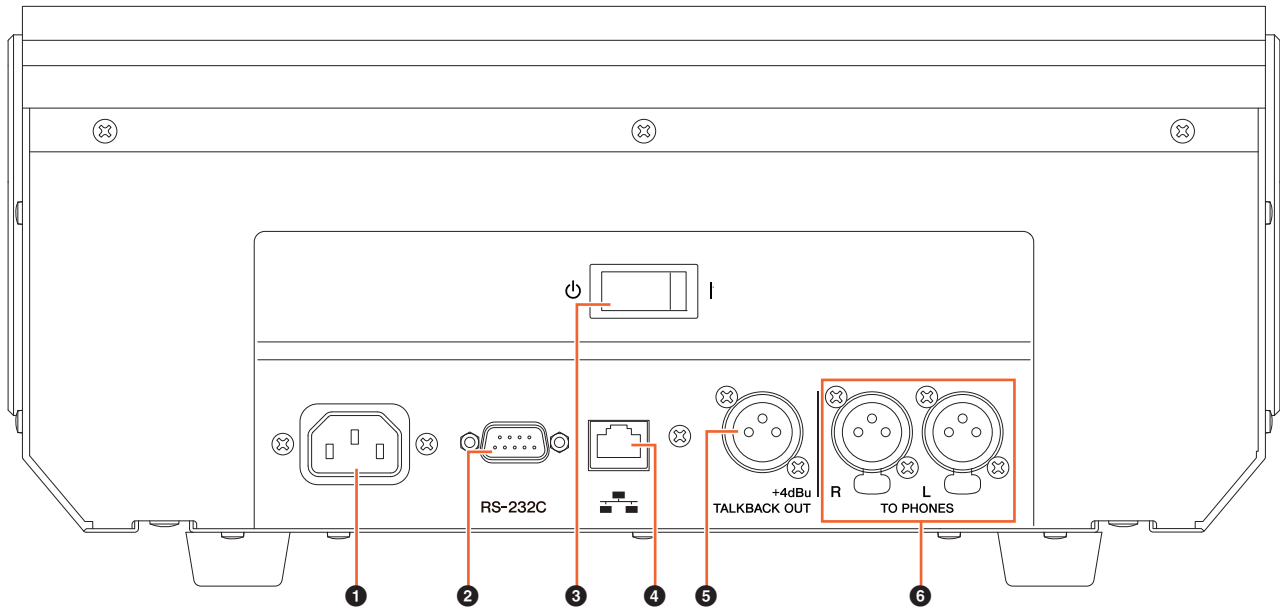

1 [AC IN]

For connection to the power cable.

2 [RS-232C]

For connection to an RS-232C cable. Connect this port to the RS-232C port on the KVM switch. When you switch between multiple DAW applications using the DAW SELECT section with KVM switches connected and the data to be sent to them configured in NUAGE Workgroup Manager, the display content, active keyboard, and active mouse will also change accordingly. For details, refer to the PDF manual of NUAGE Workgroup Manager ([page 46](#)).

3 [Power switch]

Turns the power on (I) and off (O).

NOTICE

Rapidly turning the unit on and off in succession can cause it to malfunction. After turning the unit off, wait for at least 6 seconds before turning it on again.

4 [Network]

For connecting an Ethernet cable.

5 [TALKBACK OUT +4dBu]

This jack outputs the signal from the [TALKBACK microphone] ([page 25](#)) on the top panel.

6 [TO PHONES L/R]



The signal input to [TO PHONES L/R] is output from [PHONES A/B] ([page 26](#)) on the front panel.

Description of the Software Programs

Pages Shown on the Multi Function Display



NOTE

The icon () at the side of the button name or area name indicates that you can control the corresponding button or area by touching it. Also, the icon ( [PARAM]) at the side of the parameter name indicates that you can input number values to the corresponding parameter by touching it (if you've turned on [PARAM] (page 19) in the NUMERIC PAD section).

Overview

The following pages are shown on the [Multi function display].

- SETUP page (page 29)
- TRACK LIST page (page 30)
- CHANNEL CONTROL page (page 32)
 - MAIN page (page 33)
 - EQ page (page 34)
 - DYN page (page 34)
 - SENDS page (page 34)
 - CUES page (page 35)
 - PAN page (page 35)
 - INSERT page (page 36)
 - PLUG-IN page (page 36)
- AUTOMATION page (page 37)
- USER ASSIGNABLE page (page 38)
- CONTROL ROOM page (page 38)
 - MAIN page (page 38)
 - SPEAKER CONTROL page (page 39)
- CUES page (page 40)
- MONITOR SOURCE page (page 40)
- COMMUNICATION page (page 41)
- TRANSPORT page (page 41)
 - MAIN page (page 41)
 - MARKER page (page 42)
 - OVER VIEW page (page 42)
- EDIT page (page 43)

To select the pages, press [Display access] in each section, or press the buttons at the right side of the MULTI FUNCTION DISPLAY section (page 22), or touch the tabs or buttons at the top of the pages.

Each page has the following four areas.



The page title and the tabs for selecting other pages are shown on the Title area. Buttons unique to the selected page or buttons for selecting the page views are shown on the Tool area. The parameters or the configuration windows are shown on the Main area. The parameter currently assigned for control with the [Multi function knob] is indicated on the Label Pane area.

When you touch the top border of the Label Pane area in certain pages, the window for selecting parameters (in banks or groups of eight) for control with the [Multi function knob] appears.



A single horizontal row indicates a bank. When you touch a bank, the controllable parameters of the [Multi function knobs] change to the corresponding bank, and then the window closes.

To input parameter values (which allow number input) in the page, use the Parameter mode in the NUMERIC PAD section (page 16). To do this:

1. Press [PARAM] (page 19) in the NUMERIC PAD section to select the Parameter mode.
2. Touch the parameter (which allows number input) shown on the [Multi function display] to select it.
3. Input the number with the [Input keys] (page 21) in the NUMERIC PAD section.

SETUP Page




Overview

This page is for configuring general settings, such as touch sensitivity or LED brightness. To open it, press [SETUP] (page 24) in the MULTI FUNCTION DISPLAY section.

Touching a column in this page enables that column's parameter for control with the [Multi function knob].

Controls and Functions

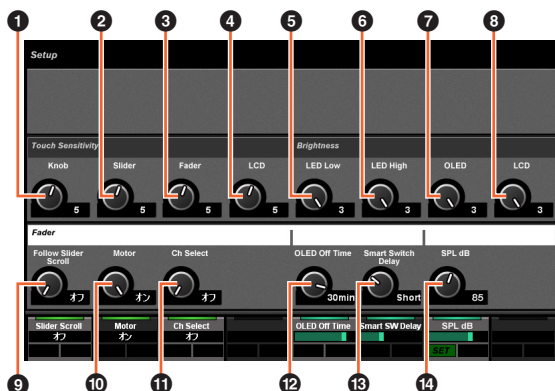

1 Knob

Adjusts the touch sensitivity of the [Multi function knob]. The larger the number, the higher the sensitivity.

2 Slider

Adjusts the touch sensitivity of the [Touch slider bar]. The larger the number, the higher the sensitivity.

3 Fader

Adjusts the touch sensitivity of the [Fader] on Nuage Fader. The larger the number, the higher the sensitivity.

4 LCD

Adjusts the touch sensitivity of the [Multi function display]. The larger the number, the higher the sensitivity.

5 LED Low

Adjusts the brightness of the LEDs on the buttons or knobs (when dimmed). The larger the value, the brighter the LED.

6 LED High

Adjusts the brightness of the LEDs on the buttons or knobs (when fully lit). The larger the value, the brighter the LED.

7 OLED

Adjusts the brightness of the [CONTROL ROOM display] and the [Channel name display] on Nuage Fader. The larger the value, the brighter the LED.

8 LCD

Adjusts the brightness of the [Multi function display]. The larger the number, the brighter the display.

9 Follow Slider Scroll

Turns on and off the function which causes the [Fader] position on Nuage Fader to follow scrolling through the channels when you use the [Touch slider bar] on Nuage fader. When this function is off, the [Fader] position changes only after you stop scrolling.

10 Motor

Turns the motor power of [Fader] on Nuage Fader on and off.

11 Ch Select

Turns on and off the function which allows you to select channels by touching [Fader] on Nuage Fader.

12 OLED Off Time

Configures the period of time that elapses before the [CONTROL ROOM display] and the [Channel name display] on Nuage Fader are automatically darkened.

13 Smart Switch Delay

When you press then release the following buttons, the lamps of the buttons turn on when they are pressed. This control adjusts the time that elapses before the buttons light.

- [SHUTTLE] (JOG WHEEL section)
- [SCROLL] (JOG WHEEL section)
- [SELECT] (JOG WHEEL section)
- [ZOOM] (JOG WHEEL section)
- [MOVE] (JOG WHEEL section)


- [VOLUME] (JOG WHEEL section)
- [CYCLE] (TRANSPORT section)
- [●] (record) (TRANSPORT section)
- [TALK BACK] (COMMUNICATION section)

When you set this to off, lighting of the buttons while they are held is disabled.

14 SPL dB

Sets "SPL dB." By adjusting the value using the [Multi function knob] and then pressing [Multi function button A] (SET), you can set the value.

TRACK LIST Page

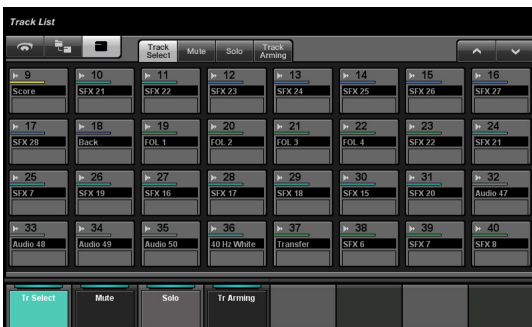

Overview

This page is for operating the Select, Mute, Solo/Listen, and Record Enable functions for the tracks. To open this page, press [TRACK LIST] (page 24) in the MULTI FUNCTION DISPLAY section.

The TRACK LIST page has the following views.


- Track Select view (page 31)
- Mute view (page 31)
- Solo view (page 32)
- Track Arming view (page 32)

To select the view, touch the corresponding tabs at the middle of the Tool area, or touch the buttons in the Label Pane area, or press the [Multi function knob].

The tabs at the middle of the Tool area:



The buttons in the Label Pane area:



To scroll through the view of the Main area, touch "Λ"/"∇" on the Tool area.



The TRACK LIST page has the following three display styles.


- Overview display
- Stratum display
- Track display

To select the display style, touch the buttons at the left side of the Tool area.



Overview Display

The Overview display shows up to twelve blocks, each of which represent a group of thirty-two different tracks.

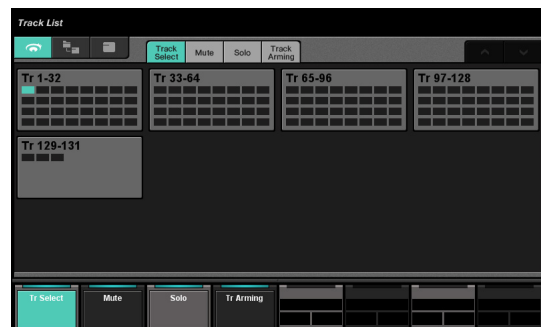


When you touch a block, the tracks in the block are shown in the Track display. Please note that in the Overview display, you cannot operate the Select, Mute, Solo/Listen, and Record Enable functions for the tracks.

Stratum Display

The Stratum display shows up to thirty-two tracks and folder tracks contained in the selected stratum.




When you touch the upper left of a folder track icon, the window changes to show the contents of the folder track.

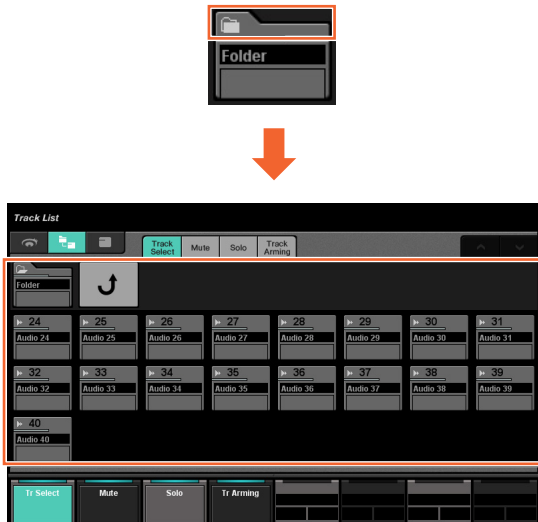

In the first column, the selected folder track and a "Return" control is shown. Touching "Return" changes back to the previously selected window.



The tracks in the folder track (up to a maximum of twenty-four) are shown below the second column.

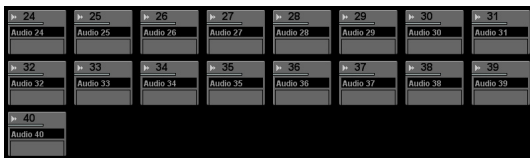

Track Display

In the Track display, a maximum of thirty-two tracks are shown.



Controls and Functions

Track Select View

This view is for selecting tracks.



1 Tracks

For selecting the tracks. You can select multiple tracks by simply dragging across the tracks.

When you touch "Track" while holding down the appropriate button(s) in the "MODIFIER Section" (page 15), the function changes as follows.

Modifier button	Function
-----------------	----------

[ALT]	Selects only the last channel touched.
-------	--

Mute View

This view is for operating "Mute" for the tracks.



1 Track

Turns "Mute" on (lit) and off. You can turn Mute on/off for multiple tracks by simply dragging across the tracks.


When you touch "Track" while holding down the appropriate button(s) in the "MODIFIER Section" (page 15), the function changes as follows.

Modifier button	Function
-----------------	----------

[ALT]	Turns Mute on for only the last channel touched.
-------	--

Solo View

This view is for operating Solo or Listen for the tracks.

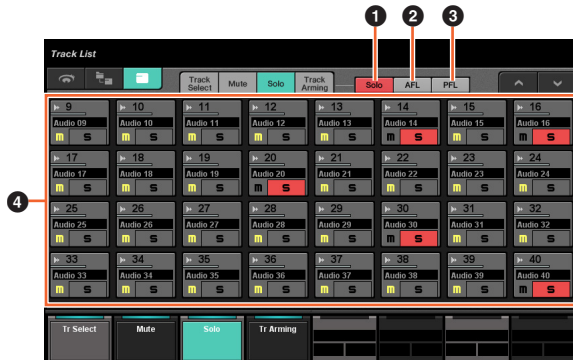

1 Solo

Selects Solo.

2 AFL

Selects Listen of AFL.

3 PFL

Selects Listen of PFL.

4 Track


Turns Solo or Listen on (lit) and off. You can turn Solo or Listen on/off for multiple tracks by simply dragging across the tracks.

When you touch “Track” while holding down the appropriate button(s) in the “MODIFIER Section” (page 15), the function changes as follows.

Modifier button	Function
[ALT]	Turns Solo or Listen on for only the last channel touched.

Track Arming View

This view is for enabling recording of the tracks.

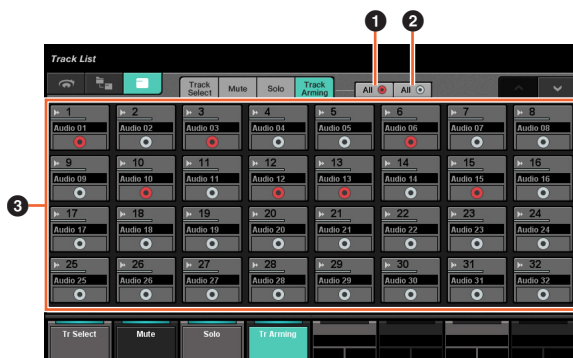

1 All

Turns Record Enable on (lit) for all tracks.

2 All

Turns Record Enable off for all tracks.

3 Track

Turns Record Enable on (lit) and off. You can turn Record Enable on/off for multiple tracks by simply dragging across the tracks.

When you touch “Track” while holding down the appropriate button(s) in the “MODIFIER Section” (page 15), the function changes as follows.

Modifier button	Function
[ALT]	Turns Record Enable on for only the last channel touched.

CHANNEL CONTROL Page



Overview

This page is for operating the functions EQ, Dynamics, Sends, Cues, Pan, and Insert for the selected channel. To open this page, press [CHANNEL] (page 24) in the MULTI FUNCTION DISPLAY section.

The CHANNEL CONTROL page has the following pages.

- MAIN page (page 33)
- EQ page (page 34)
- DYN page (page 34)
- SENDS page (page 34)
- CUES page (page 35)
- PAN page (page 35)
- INSERT page (page 36)
- PLUG-IN page (page 36)

To select the desired page, touch the corresponding tab in the Title area, or press [CHANNEL] in the MULTI FUNCTION DISPLAY section.



To open the PLUG-IN page, touch “e” in the SENDS page or the INSERT page.

To select the selected channel, touch “Channel information” in the Title area.




When you touch “Channel information,” the channel selection window is shown.



To scroll through the window, touch “^” or “v.” When you touch the channel, the channel is selected and the window closes.

When you touch “◀◀” in the Title area, the window indicating the output level of the selected channel is shown.

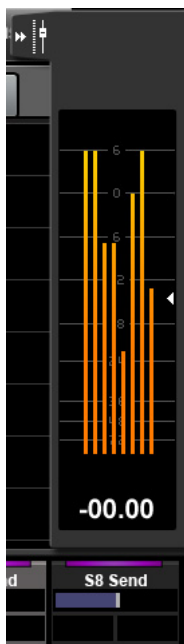

In this condition, you can adjust the output level by the rightmost [Multi function knob]. To close the window, touch “▶▶.”


By touching “Nuendo” in the Tool area, you can open the channels configuration window on the screen. However, in the PLUG-IN page, the plug-in effect window is opened. Touch again to close.



Controls and Functions

MAIN Page

This page is for operating Routing, Phase, Low Cut, etc. for the selected channel.

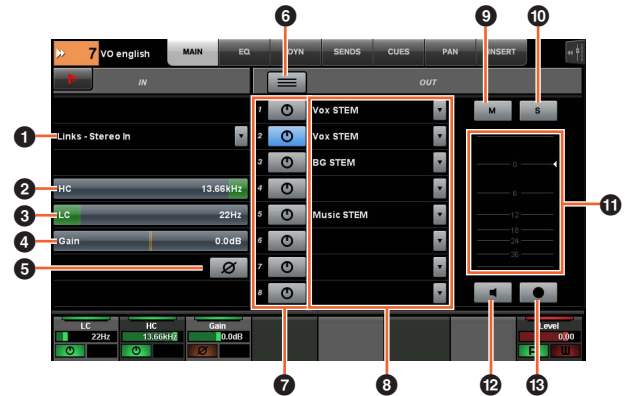

1 Input Routing

Calls up the Input Routing pull-down menu, letting you select the port.

2 HC [PARAM]

Adjusts the frequency of High Cut.

3 LC [PARAM]

Adjusts the frequency of Low Cut.

4 Gain [PARAM]

Adjusts Input Gain.

5 Phase

Turns phase inversion on (lit) and off.

6 Summing Mode

Turns Summing Mode on (lit) and off. When this is on, you can output the audio signal of multiple ports at the same time.

7 On/Off

Turns Direct Routing on (lit) and off.

8 Direct Routing

Selects the port for Direct Routing.

9 M

Turns Mute on (lit) and off.

10 S or L

Turns Solo or Listen on (lit) and off.

11 Level Meter

Displays the channel level.

12 Mon

Turns Monitor on (lit) and off.

13 Rec

Turns Record Enable on (lit) and off.

EQ Page

This page is for operating EQ for the selected channel. Touching a column in the Label Pane area enables that column's parameter for control with the [Multi function knob].



1 EQ Graph

Displays the parameters as a graph.

2 BYP

Turns Bypass on (lit) and off.

3 Preset


Opens the preset selection window.

4 Level Meter

Displays the channel level.

DYN Page

This page is for operating Dynamics for the selected channel.

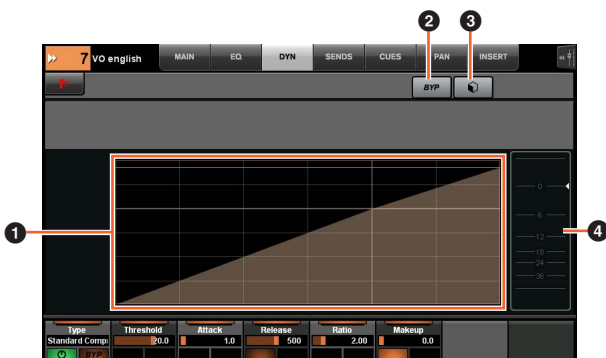

1 Dynamics Graph

Displays the parameters as a graph.

2 BYP

Turns Bypass on (lit) and off.

3 Preset

Opens the preset selection window.

4 Level Meter

Displays the channel level.

SENDS Page

This page is for controlling the Sends of the selected channel.



1 Send Level [PARAM]

Adjusts the send level.

2 On/Off

Turns Send on (lit) and off.

3 PRE

Turns Pre Fader on (lit) and off.

4 e (edit)

Opens the "PLUG-IN page" (page 36). The plug-in effect which is opened is the one assigned to the first slot in the channel routed to "Send routing."

5 Send Routing


Selects the Send Routing port.

6 BYP

Turns Bypass on (lit) and off.

CUES Page

This page is for controlling the Cues of the selected channel.

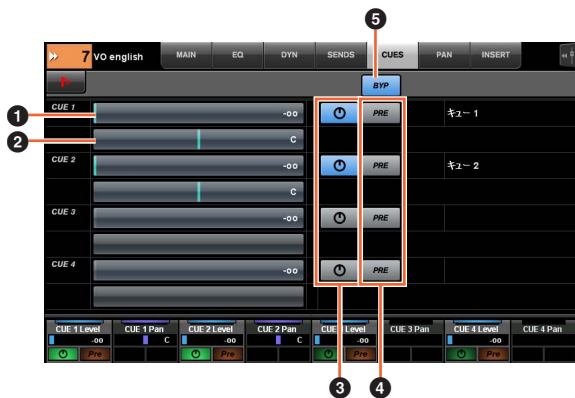

1 Cue Send Level [PARAM]

Adjusts the Cue send level.

2 Cue Send Pan [PARAM]

Adjusts the Cue send pan.

3 On/Off

Turns Cue on (lit) and off.

4 PRE

Turns Pre Fader on (lit) and off.

5 BYP


Turns Bypass on (lit) and off.

PAN Page

This page is for controlling Pan for the selected channel. The view of the Main area in this page changes depending on the particular channel selected.

- Surround channel
- Mix Convert
- Stereo channel


When a Surround channel is selected

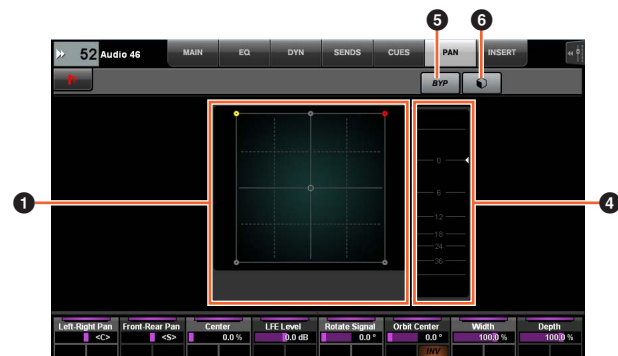

When Mix Convert is selected



When a Stereo channel is selected

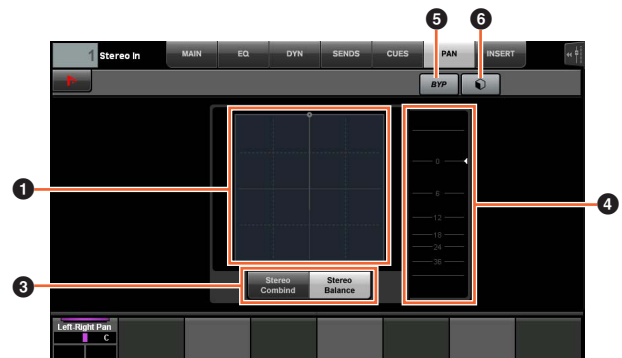

1 Pan Graph

Displays the parameters as a graph.

2 Mix Convert

Operates Mix Convert.

3 Stereo Mode

Selects the Pan mode: Stereo Combine Pan and Stereo Balance Pan.

4 Level Meter

Displays the channel level.

5 BYP


Turns Bypass on (lit) and off.

6 Preset

Opens the preset selection window.


INSERT Page

This page is for controlling Inserts for the selected channel.

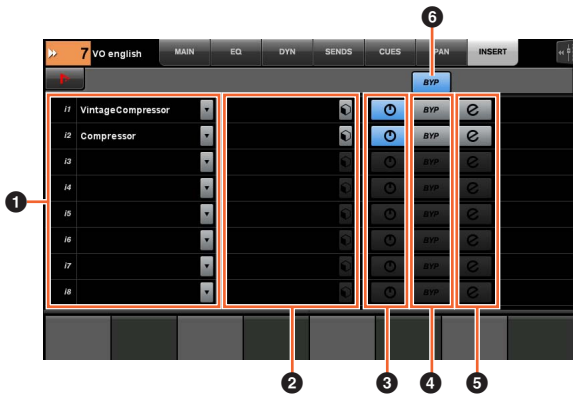

1 Insert

Displays the assigned plug-in effects. When you touch this, the plug-in selection window is opened.

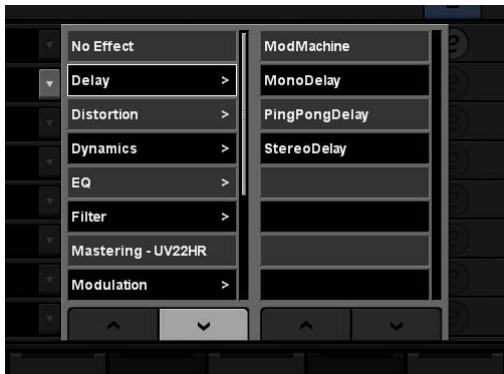

To scroll through the window, touch “^” or “v.”

2 Preset

Opens the preset selection window.

3 On/Off

Turns “Insert” on (lit) and off.

4 BYP

Turns “Bypass” on (lit) and off.

5 e (edit)

Selects the “PLUG-IN Page” (page 36) corresponding to the Insert-assigned plug-in effect.

6 BYP (All)

Turns Bypass on (lit) and off all Insert effects.

PLUG-IN Page

This page is for controlling the plug-in effect parameters.

In the PLUG-IN page, you can assign and lock a specific plug-in effect parameter to a [Multi function knob]. To do this:

1. Touch the desired parameter in the Main area to select it.


The parameter is temporarily assigned to an “empty” [Multi function knob] (one which does not yet have a locked parameter).

NOTE

If a parameter has already been locked, press the corresponding [Multi function button B] to unlock it.

2. Press [Multi function button B] of the desired [Multi function knob] to lock the parameter.

The locked parameters are memorized for other plug-ins as well. To unlock the parameter, press [Multi function button B] again.

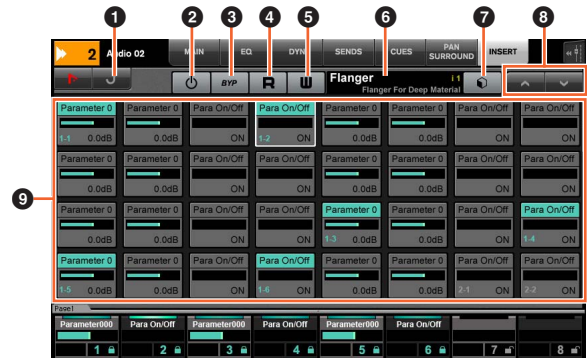

1 Return

Changes back to the previously selected window.

2 On/Off

Turns the plug-in effect on (lit) and off.

3 BYP

Turns Bypass on (lit) and off.

4 R

Turns Read Automation on (lit) and off.

5 W

Turns Write Automation on (lit) and off.

6 Preset Name

Displays the selected preset.

7 Preset

Opens the preset selection window.

8 ^/v

Scrolls through the window.

9 Parameter

Selects the parameter. Can be pressed while [PARAM] (page 19) from the NUMERIC PAD section is in order to enter parameter values.

AUTOMATION Page




Overview

This page is for controlling the Automation features. The functions of this page are the same as in the Nuendo Automation Panel. To open this page, press the AUTOMATION [Display access] button ([page 22](#)).

Touching the “Nuendo” icon in the Tool area calls up the Automation Panel within Nuendo. Touching once again closes it.



Controls and Functions

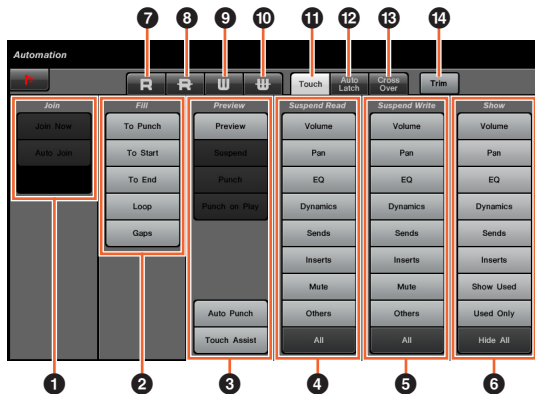

1 Join

Operates Join function.

2 Fill

Operates Fill function.

3 Preview

Operates Preview function.

4 Suspend Read

Operates Suspend Read function.

5 Suspend Write

Operates Suspend Write function.

6 Show

Operates Show function.

7 R

Turns on Read Automation for all tracks.

8 R

Turns off Read Automation for all tracks.

9 W

Turns on Write Automation for all tracks.

10 W

Turns off Write Automation for all tracks.

11 Touch

Sets Automation Mode to “Touch.”

12 Auto Latch

Sets Automation Mode to “Auto Latch.”

13 Cross Over

Sets Automation Mode to “Cross Over.”

14 Trim

Operates Trim.


USER ASSIGNABLE Page



Overview

This page is used to execute assigned functions. To open this page, press the USER ASSIGNABLE [Display access] button (page 21). To assign the function, configure it in “NUAGE MASTER Setup” (page 44).

To select the desired bank, touch “BANK 1” – “BANK 4” in the Title area, or the USER ASSIGNABLE [Display access] button.




Each bank has twenty-four buttons, for a total of ninety-six.

By touching “Nuendo” in the Tool area, you can open “NUAGE MASTER Setup” window (page 44) on the Nuendo screen. Touch again to close.



Controls and Functions

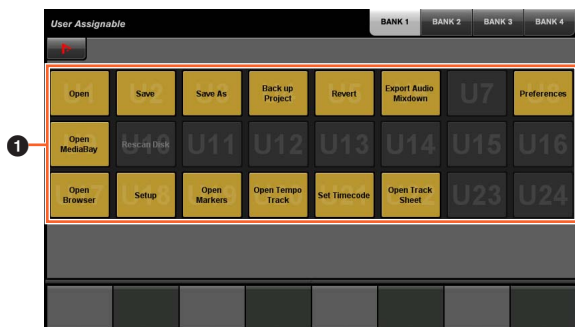

1 U1 – U24

Executes the assigned function.

CONTROL ROOM Page



Overview

This page is for operating the Control Room functions. To open this page, press the CONTROL ROOM [Display access] button (page 5).

The CONTROL ROOM page has the following pages.

- MAIN page (page 38)
- SPEAKER CONTROL page (page 39)

To select the desired page, touch the corresponding tab in the right side of the Title area, or press the CONTROL ROOM [Display access] button.




If you have configured multiple DAW software programs and operate them by selecting the DAW SELECT Section (page 24), this section will always operate the Control Room of DAW A. In other words, the Control Room section is not affected by the DAW software selection.

Controls and Functions

MAIN Page

This page is for operating the general functions in the Control Room.

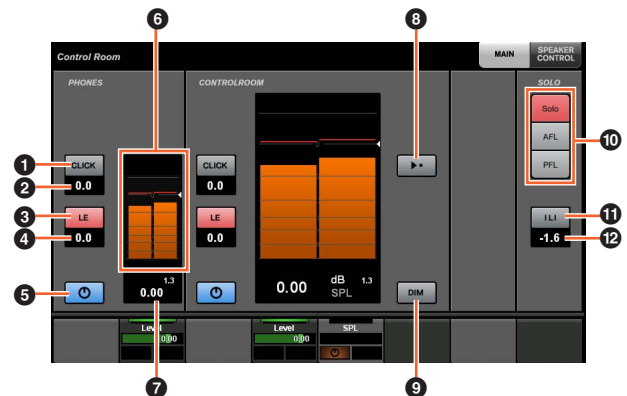

1 CLICK

Turns Metronome on (lit) and off.

2 CLICK Level [PARAM]

Adjusts Metronome level. Adjusts Metronome level.

3 LE 

Turns Listen on (lit) and off.

4 LE Level  [PARAM]

Adjusts Listen level.

5 On/Off 

Turns the channel on (lit) and off.

6 Level Meter

Displays the channel level.

7 Level Indicator  [PARAM]

Displays the channel level.

8 Reference Level 

When turned on (lit), this resets the Control Room level to the Reference level. When this is off (dim), the previous level setting is restored. The button goes dim when you change the level after turning this on.

When you touch Reference Level while holding down the appropriate button(s) in the “MODIFIER Section” (page 15), the function changes as follows.

Modifier button	Function
[ALT]	Resets the Reference level to the current Control Room level setting.

9 DIM 

Turns Dim on (lit) and off (dim). When this is on, the Control Room level is lowered. When this is off, the previous level is restored. You can set the Dim level on Nuendo.

10 SOLO 

Selects Solo or Listen of AFL, and Listen of PFL.

11 Listen Active/Deactive All Listen 


Lights if Solo or Listen is on for one or more channels. Touching this while it is lit turns Solo or Listen off for all channels.

12 Listen Dim Level  [PARAM]

Adjusts the level of the Main Mix or Monitor Source when you use Listen.

SPEAKER CONTROL Page

This page is for operating the Speaker Controls in Control Room.

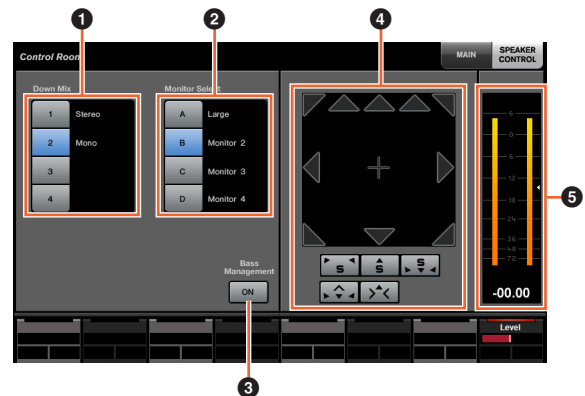**1 Down Mix** 

Selects the Downmix preset.

2 Monitor Select 

Selects Monitor.

3 Bass Management 

Turns Bass Management on (lit) and off. This function is available when connecting a Nuage I/O unit and creating a surround output bus (such as 5.1 channels) in the Nuendo menu “Devices” → “VST Connection.” Also, make sure to assign the ports in one Nuage I/O to the ports of this output bus.


4 Mix Convert 

Operates Mix Convert. To turn the output on and off, touch the speaker icon.

5 Level Meter

Displays the channel level.


CUES Page

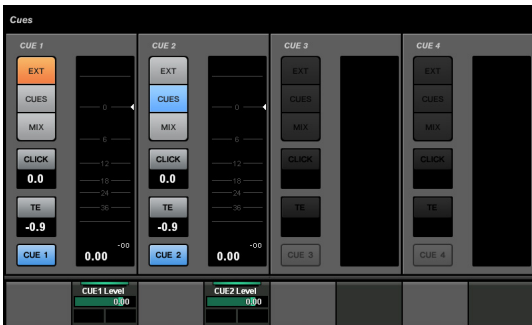

Overview


This page is for operating Cue functions in the Control Room. To open this page, press the CUES [Display access] button ([page 8](#)).

Controls and Functions

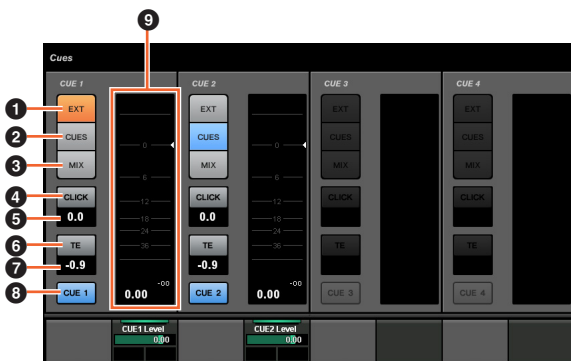

- 1 EXT** Sets the source to "EXT."
- 2 CUES** Sets the source to "CUES."
- 3 MIX** Sets the source to "MIX."
- 4 CLICK** Turns the Metronome on (lit) and off.
- 5 CLICK Level** [PARAM] Adjusts Metronome level.
- 6 TE** Enables (lit) or disables (off) the Talkback function.
- 7 TE Level** [PARAM] Adjusts the Talkback level.
- 8 Activate Monitor** Turns the channel on (lit) and off.
- 9 Level Meter** Displays the channel level.


MONITOR SOURCE Page

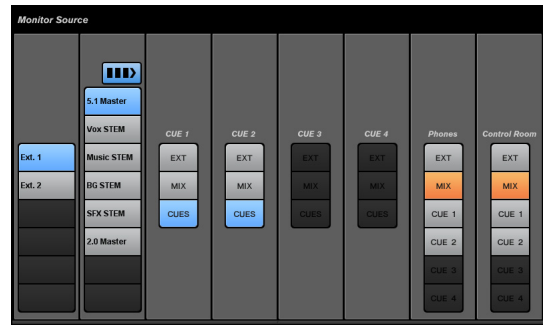

Overview

This page is for operating Monitor Source in the Control Room. To open this page, press the MONITOR SOURCE [Display access] button ([page 7](#)).

Controls and Functions

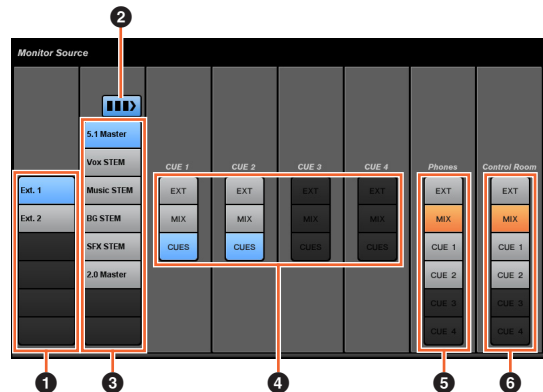

- 1 External Input Source** Selects the source of the external inputs.
- 2 Multiple Monitor Source** Switches between multiple selection (lit) and single selection (off) when you select the monitor source.
- 3 Monitor Source** Selects the monitor source.
- 4 CUE** Selects the source of the CUE.
- 5 Phones** Selects the source of the Phones.
- 6 Control Room** Selects the source of the Control Room.

COMMUNICATION Page



Overview

This page is for operating the communication functions in the Control Room. To open this page, press the COMMUNICATION [Display access] button (page 9).

By touching “Nuendo” in the Tool area, you can open “NUAGE MASTER Setup” window (page 44) on the Nuendo screen. Touch again to close.



Controls and Functions



1 Function Button

Executes the assigned function. To assign the function, configure it from the “Communication Window” (page 45) in “NUAGE MASTER Setup.”

2 Talk Back Enable

Enables (lit) or disables (off) the Talkback function.

3 Talk Back

Touching this turns Talkback on.

TRANSPORT Page



Overview

This page is for operating the Transport functions. To open this page, press the TRANSPORT [Display access] button (page 10).

The TRANSPORT page has the following pages.

- MAIN page (page 41)
- MARKER page (page 42)
- OVER VIEW page (page 42)

To select the desired page, touch the corresponding tab in the right side of Title area, or press the TRANSPORT [Display access] button.



Controls and Functions

MAIN Page

This page is for operating the Transport related functions.



1 Left Locator [PARAM]

Sets the Left Locator position (“Pre Roll,” “Auto Punch In,” etc.).

2 Right Locator [PARAM]

Sets the Right Locator position (“Post Roll,” “Auto Punch Out,” etc.).

3 CLICK

Turns the Metronome on (lit) and off.

4 TEMPO 

Selects the Tempo mode.

5 SYNC 

Turns Synchronization on (lit) and off.

6 Time Display  [PARAM]


Sets the Project Cursor position.

7 Transport 

Operates the basic Transport functions.

MARKER Page

This page is for operating the Marker Track functions.

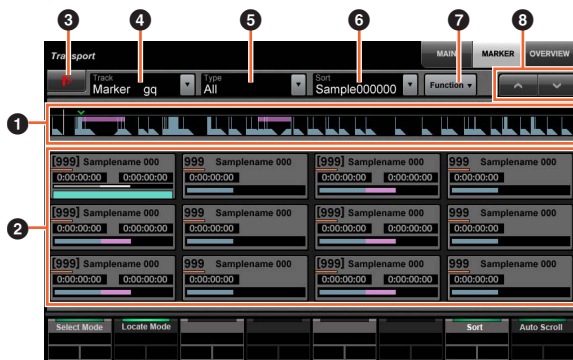


1 Marker Overview

Displays the Marker Track overview. The “▼” arrow indicates the selected Marker. The white line indicates the Project Cursor.

2 Marker 

Displays the Marker information. The information includes the ID, name, position, and bar graph. You can select Marker or move the Project Cursor to the Marker position by touching it. To switch this function, touch the buttons in the Label Pane area or press the [Multi function knob].



3 Nuendo 

Opens the Marker Track in the Nuendo window.

4 Track 

Selects the active Marker Track.

5 Type 

Selects the type of Marker shown.

6 Sort 

Sorts the Markers.

7 Function 


Operates the Marker functions from the Marker window.

8 ^/V 

Scrolls through the Main area view.

OVER VIEW Page

This page is for operating the Overview functions.

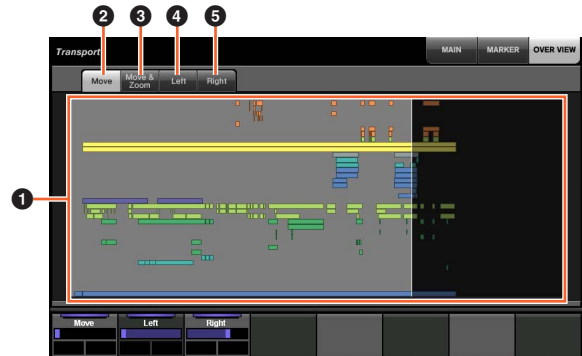


1 Overview

Displays the overview of the project. The blue area indicates the range which is shown in the Project Window.

2 Move 

Lets you move the displayed area by dragging it.

3 Move & Zoom 

Lets you move the displayed area by dragging it right and left. You can Zoom In or Zoom Out the displayed area by dragging it up and down.

4 Left 

Lets you move the start position of the displayed area by dragging it.

5 Right 

Lets you move the end position of the displayed area by dragging it.

EDIT Page



Overview

This page is used to execute assigned functions. To open this page, press the EDIT [Display access] button (page 11). To assign the function, configure it from “EDIT window” (page 44) in “NUAGE MASTER Setup.”

To select the desired bank, touch “BANK 1” – “BANK 4” in the Title area, or press the EDIT [Display access] button.



Each bank has twenty-four buttons, for a total of ninety-six.

When selecting an event, information from “Info Line” in Nuendo is displayed in the Label Pane area. Parameters can be adjusted using [Multi function knobs] at this time.

By touching “Nuendo” in the Tool area, you can open “NUAGE MASTER Setup” window (page 44) on the Nuendo screen. Touch again to close.



Controls and Functions





① E1 – E24

Executes the assigned function.

NUAGE MASTER Setup

Controls and Functions

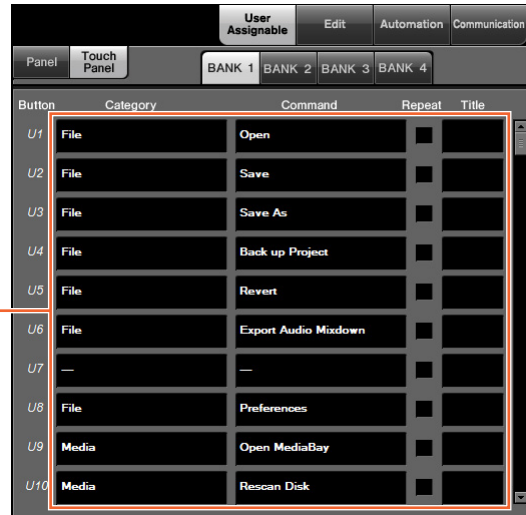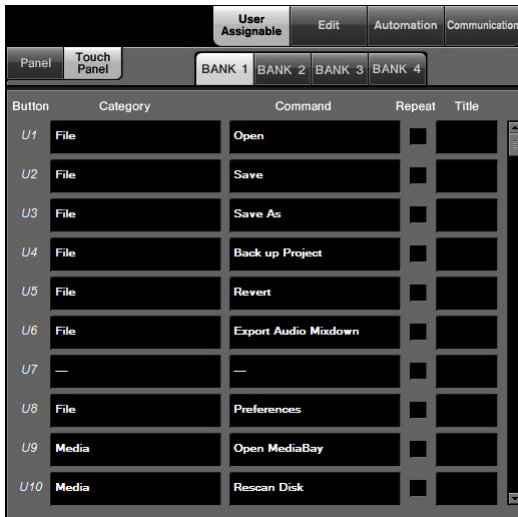

Overview

This software is for configuring the general settings of Nuage Master from Nuendo. You can configure settings such as the user assignable buttons on the device or "USER ASSIGNABLE page" (page 38). To open this window, click the Nuendo menu "Devices" → "NUAGE MASTER Setup."

NUAGE MASTER Setup has the following windows.

- User Assignable window (page 44)
- Edit window (page 44)
- Automation window (page 45)
- Communication window (page 45)

To select the desired window, click the corresponding tab on the upper side of the window.



1 User Assignable Settings

Assigns functions to the buttons. First, click "Category" to select the category. Next, click "Command" to select the command. When you check the "Repeat" box for the function, the corresponding function will operate continuously by holding down the button. You can input the desired function name to "Title."

Edit Window

Overview

This window is for configuring the function of the buttons in the "EDIT page" (page 43).

To select the desired bank, click one of "BANK 1" – "BANK 4."



User Assignable Window

Overview

This window is for configuring the function of the buttons in the "USER ASSIGNABLE section" (page 21) or "USER ASSIGNABLE page" (page 38).


To configure the buttons in the USER ASSIGNABLE section, click "Panel." To configure the buttons on the USER ASSIGNABLE page, click "Touch panel."



To select the desired bank when selecting "Touch panel," click one of "BANK 1" – "BANK 4."



Controls and Functions

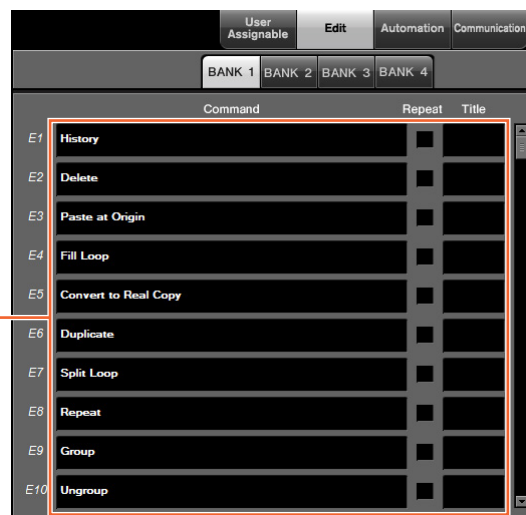

1 Edit Settings


Assigns functions to the buttons. Click “Command” to select the command. When you check the “Repeat” box for the function, the corresponding function will operate continuously by holding down the button. You can input the desired function name to “Title.”

Automation Window

Overview

This window is for configuring the function of the buttons in the “AUTOMATION section” (page 22).

Controls and Functions

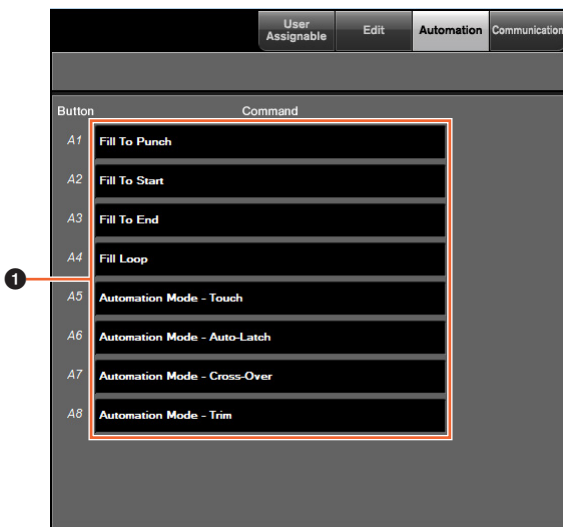

1 Automation Settings


Configures the function of the buttons. Click “Command” to select the command.

Communication Window

Overview

This window is for configuring the function of the buttons in the “COMMUNICATION section” (page 9) or “COMMUNICATION page” (page 41).


Controls and Functions

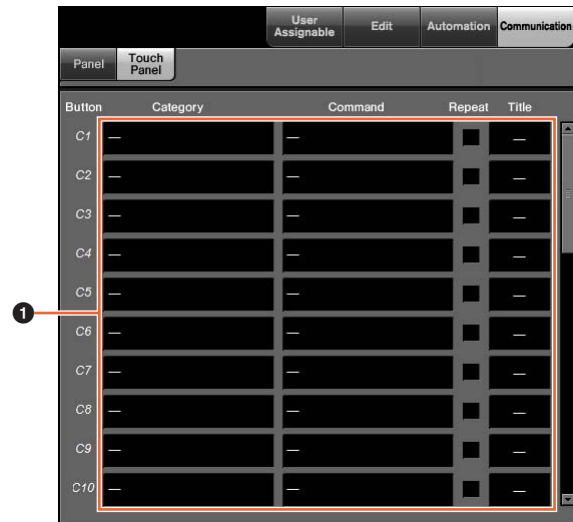

1 Communication Settings

Configures the functions of the buttons. First, click “Category” to select the category. Next, click “Command” to select the command. When you check the “Repeat” box for the function, the corresponding function will operate continuously by holding down the button. You can input the desired function name to “Title.”

NUAGE Workgroup Manager

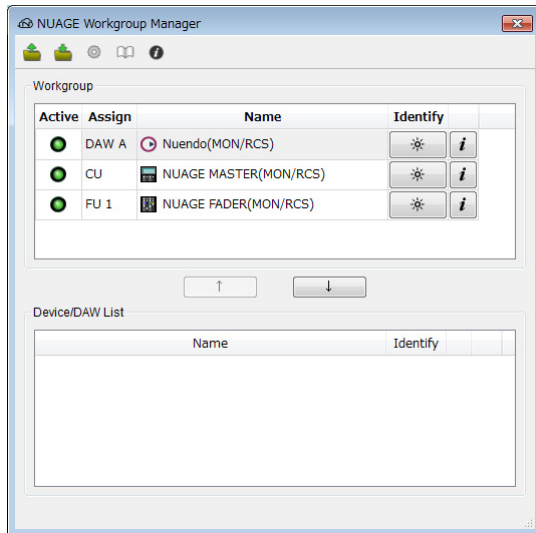

Overview

NUAGE Workgroup Manager is an application that allows control over devices and DAW software programs as a Workgroup on a NUAGE system.

For details on NUAGE Workgroup Manager, refer to the NUAGE Workgroup Manager manual (PDF).

NOTE

To open the NUAGE Workgroup Manager manual, double-click the NUAGE Workgroup Manager icon on the task tray (Windows) or menu bar (Mac) for opening the window, then click the "Manual" icon.

Troubleshooting (in operation)

A connection cannot be established with Pro Tools.

- Ensure that the steps described in “Settings for Pro Tools” ([page 48](#)) have been completed.
- If using a wireless LAN adaptor, try turning it off.

Values cannot be entered by touching parameters shown on the [Multi function display].

- Ensure that [PARAM] ([page 19](#)) from the NUMERIC PAD section has been turned on for the parameters in question.

Appendix

Contents of the Getting Started Manual

PRECAUTIONS

NOTICE
Information

Introduction

A Message from the Development Team
Included Accessories
Items to Have Ready
How to Read the Manual

Setup

Overall Process
Setting and Connecting
Setting up the Power Supply
Installing TOOLS for NUAGE
Configuring the Workgroup on NUAGE

Troubleshooting (in setting up)

Appendix

Contents of the Operation Manual
Firmware Updates
Adjusting the Touch Sensitivity
Specifying the Brightness
Calibrating Detection Point of the Touch Screen
Resetting to the Factory Default Condition
Dimensions
Specifications

Replacing Square-button Labels

The labels from the square buttons can easily be replaced. These replacements can be made by cutting a transparent or semi-transparent sheet into 10 x 10 mm pieces. To install, simply remove the button's cap, swap out the current label, and replace the cap.

Pro Tools Control

Introduction

In addition to Nuendo and Cubase, Nuage Fader and Nuage Master devices can also be used to control Pro Tools (Mac only; basic functions only).

NOTE

- When working with Pro Tools, up to two Nuage Faders together with an optional Nuage Master can be connected.
- Nuendo must also be used in order to control Pro Tools. In addition, Nuendo must be set as the main DAW (i.e., DAW A) using NUAGE Workgroup Manager.

The following sections will describe the connections and settings that must be made in order to control Pro Tools, in addition to the functions of the various buttons. For the purpose of these descriptions, it is assumed that the Nuage Fader and Nuage Master devices and Nuendo have already been fully set up.

Making Connections

Connect the Mac computer running Pro Tools to the network containing the Nuage Fader and Nuage Master devices to be used.

NOTE

If the Mac computer in question is equipped with multiple Ethernet ports, use the first one to connect to the network.


Settings

Installing NUAGE PT Bridge

NUAGE PT Bridge is an application that makes it possible to control Pro Tools (Mac only) using Nuage Fader and Nuage Master devices. This application should be installed on the Mac running Pro Tools. It can be selected for installation as part of the TOOLS for NUAGE package. If necessary, download TOOLS for NUAGE from the following web site and use it to install NUAGE PT Bridge.
<http://www.yamahaproaudio.com/downloads/>

Setting Pro Tools MIDI Controllers

1. Start up Pro Tools.
2. Choose “Setup” → “Peripherals” to open the “Peripherals” dialog.
3. Click the “MIDI Controllers” tab.
4. Set the parameters on the “MIDI Controllers” window as shown below.

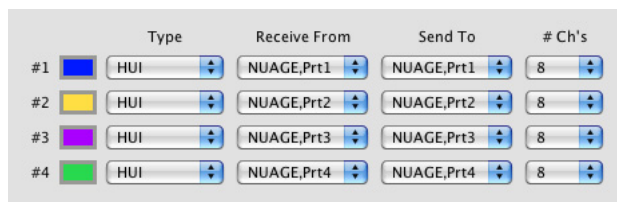

Only “#1” should be set for the following configuration:

- One Nuage Master only

“#1” and “#2” should be set for the following configurations:

- One Nuage Fader only
- One Nuage Fader and one Nuage Master

“#1” through “#4” should be set for the following configurations:

- Two Nuage Faders
- Two Nuage Faders and one Nuage Master

Adding to NUAGE Workgroup Manager

When MIDI ports have been set correctly as described above, Pro Tools will appear in NUAGE Workgroup Manager. Add Pro Tools to the same Workgroup as Nuendo.

This completes the setup procedure for controlling Pro Tools. The buttons in the DAW SELECT section of the Nuage Fader and Nuage Master devices can be used to select the DAW application to be controlled. The following section describes the functions performed by Nuage Master buttons when controlling Pro Tools.

Button Functions

CONTROL ROOM Section

[Display access]	These controllers are used to operate the DAW A Nuendo. ^{*1}
[REF]	
[SOLO CLEAR]	
[MUTE]	
[DIM]	
[DOWNMIX 1] – [DOWNMIX 4]	
[MONITOR A] – [MONITOR D]	
[PHONES]	
[CONTROL ROOM LEVEL knob]	
[CONTROL ROOM display]	

MONITOR SOURCE Section

[Display access]	These controllers are used to operate the DAW A Nuendo. ^{*1}
[EXT]	
[MIX]	
[SUM]	
[CUE 1] – [CUE 4]	
[EXT 1] – [EXT 6]	
[E7]/[E8]	These buttons are not used.
[MIX 1] – [MIX 8]	These controllers are used to operate the DAW A Nuendo. ^{*1}

CUES Section

[Display access]	These controllers are used to operate the DAW A Nuendo. ^{*1}
[MUTE 1] – [MUTE 4]	
[SIG indicator]	

COMMUNICATION Section

[Display access]	These controllers are used to operate the DAW A Nuendo. ^{*1}
[C1]/[C2]	
[TALK BACK]	

TRANSPORT Section

[Display access]	This button is used to open and close the Transport window. Its indicator lights up while the Transport window is open.
[PRE ROLL]	This button is used to turn on and off pre-roll.
[POST ROLL]	This button is used to turn on and off post-roll.
[PUNCH IN]	This button is used to turn quick punch on and off (same as the Quick Punch command in the Options menu). Its indicator lights up when quick punch is on.
[PUNCH OUT]	Same as above.
[CYCLE]	This button is used to turn loop playback on and off (same as the Loop Playback command in the Options menu). Its indicator lights up when loop playback is on.
[SYNC ONLINE]	This button is used to take Pro Tools online and offline (same as the Online command in the Options menu). When taken online, the button's indicator will flash until a synchronization signal is received. Once a signal has been received, it will stay lit.
[LEFT]	This button is used to set in points during playback.
[RIGHT]	This button is used to set out points during playback.
[PREV EVENT]	Not applicable.
[NEXT EVENT]	
[MEM]	
[ZAP]	
[◀◀] (fast rewind)	This button rewinds from the current cursor position (it's non-latching).
[▶▶] (fast forward)	This button fast forwards from the current cursor position (it's non-latching).
[■] (stop)	This button stops playback and recording.
[▶] (play)	This button starts playback from the current cursor position.
[●] (record)	This button arms Pro Tools for recording ([REC] button indicator flashing), recording is started by pressing the [PLAY] button ([REC] button indicator lit continuously).

EDIT Section

[Display access]	This button is used to switch between the Edit and Mix windows. It is lit when the Edit window is active and is dim when the Mix window is active.
[SNAP]	Not applicable.
[AUTO SCROLL]	
[AUTO SELECT]	
[OBJECT SELECT]	This button is used to switch the Edit mode.
[RANGE SELECT]	Not applicable.
[MOVE]	This button is used to separate the selection into a new region or regions.
[CUT]	This button is used to cut the selection to the clipboard (same as Cut from the Edit menu).
[COPY]	This button is used to copy the selection to the clipboard (same as Copy from the Edit menu).
[PASTE]	This button is used to paste from the clipboard to the selection (same as Paste from the Edit menu).

JOG WHEEL Section

[SCRUB]	This button is used to select the Scrub modes. This button is mutually exclusive with the [PUNCH IN], [PUNCH OUT], and [CYCLE] buttons. Also, the cursor in the window on the computer monitor disappears.
[SHUTTLE]	This button is used to select the Shuttle modes. This button is mutually exclusive with the [PUNCH IN], [PUNCH OUT], and [CYCLE] buttons. Also, the cursor in the window on the computer monitor disappears.
[SCROLL]	Not applicable.
[SELECT]	
[ZOOM]	This button is used to select the following cursor modes: Navigation, Zoom, and Select.
[QUICK ZOOM]	Same as above.
[FADE IN]	Not applicable.
[FADE OUT]	
[SPLIT]	
[VOLUME]	
[TRIM HEAD]	
[TRIM TAIL]	
[INC +]	
[DEC -]	

[Jog wheel]	This wheel is used for shuttling and scrubbing. It's also used for making fine adjustments to the selected region.
-------------	--

GENERAL CONTROL Section

[▲]/[◀]/[▼]/[▶] (up/left/down/right)	These buttons can be used to scroll the Mix and Edit windows, navigate the Edit window, zoom waveforms, and to make fine adjustments to the selected region. Their exact operation depends on the currently selected cursor mode.
[ENTER]	This button works the same as the Enter key on your computer keyboard. Pressing it opens the New Memory Location dialog box. While a dialog box is open, pressing it performs the same action as clicking the OK button.
[UNDO]	This button is used to undo and redo the last operation. Its indicator lights up when the last operation can be undone, and it flashes when the last operation can be redone. A redo is performed by pressing the button with the [SHIFT] and [ALT] buttons held down.
[SAVE]	This button is used to save the current session (same as Save command in the File menu). Its indicator lights up when there are unsaved changes, and goes out when there are no unsaved changes. When pressed, the indicator flashes and you can press it again to go ahead and save the current session, or press [ESC] to cancel.

MODIFIER Section

[CTRL]	This button is used in conjunction with other buttons to modify function operation. This corresponds to the Control modifier key found on Mac keyboards.
[SHIFT]	This button is used in conjunction with other buttons to modify function operation. This corresponds to the Shift modifier key found on Mac keyboards.
[ALT]	This button is used in conjunction with other buttons to modify function operation. This corresponds to the Command modifier key found on Mac keyboards.

NUMERIC PAD Section

[LOCATE]	Not applicable.
[MARKER]	
[PARAM]	
[DAW]	
[WHEEL]	
[0] – [9]	These buttons correspond to keys [0] to [9] found on Mac keyboards.
[CLEAR]	This button corresponds to the [Clear] key found on Mac keyboards.
[CYCLE .]	This button corresponds to the [.] key found on Mac keyboards.
[PREV -]	This button corresponds to the [-] key found on Mac keyboards.
[NEXT +]	This button corresponds to the [+] key found on Mac keyboards.
[BACK SPACE]	Not applicable.
[ENTER]	This button works the same as the Enter key on your computer keyboard. Pressing it opens the New Memory Location dialog box. While a dialog box is open, pressing it performs the same action as clicking the OK button.
[ESC]	For the most part, this button works the same as the Esc key on your computer keyboard. While a dialog box is open, pressing it performs the same action as clicking the Cancel button.
[◀]/[▶] (left/right)	Not applicable.
[SET]	

USER ASSIGNABLE Section

[Display access]	Not applicable.
[U1] – [U12]	

AUTOMATION Section

[Display access]	Not applicable.
[FILL PUNCH]	
[FILL TO START]	
[FILL TO END]	
[FILL LOOP]	
[TOUCH]	
[LATCH]	
[X-OVER]	
[TRIM]	

MULTI FUNCTION DISPLAY Section

[Multi function display]	These controllers are used to operate the DAW A Nuendo.* ¹
[SETUP]	
[TRACK LIST]	Not applicable.
[CHANNEL]	
[PLUG-IN]	
[DYNAMICS]	
[EQ]	
[Multi function knob]	These controllers are used to operate the DAW A Nuendo.* ¹
[Multi function button A] / [Multi function button B]	

DAW SELECT Section

[DAW A] – [DAW C]	These buttons perform the same tasks as when working with Nuendo.
-------------------	---

TALKBACK MIC Section

[TALKBACK microphone]	These controllers are used to operate the DAW A Nuendo.* ¹
-----------------------	---

*1: Control Room functions normally control Nuendo as the main DAW (i.e., DAW A). In order, therefore, to output Pro Tools audio signals from the Nuage system, the Pro Tools audio interface's outputs must be connected to the Nuage system audio interface's inputs, and the appropriate input and output settings must be made on Nuendo's VST Connections window (selected from the Devices menu).

Added functions in NUAGE V2.0

Added support for remote operation of the MMP1 (Nuage Fader, Nuage Master, and NUAGE Workgroup Manager)	53
Settings (Preparations).....	53
Selecting a monitor source or a cue output (Nuage Master)	55
Displaying the status and adjusting the Cue outputs or Studio Speaker outputs (Nuage Master)	57
Monitor Control (Nuage Fader, Nuage Master).....	59
Talkback on or off (Nuage Master).....	62
Added support for Elevation Pattern selection (Nuage Fader).....	63
Added support for cursor operation outside the Project Window (Nuage Master)	64


Added support for remote operation of the MMP1 (Nuage Fader, Nuage Master, and NUAGE Workgroup Manager)

Certain MMP1 functions can be controlled from the Nuage series.

Settings (Preparations)

Set the control source to Nuage Fader and/or Nuage Master and the control target to MMP1 with the NUAGE Workgroup Manager.

1. Open NUAGE Workgroup Manager.
2. Click “Setup.”

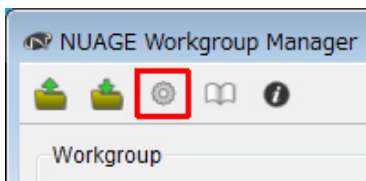


3. Set the IP address.

To control MMP1 from the Nuage Fader and/or Nuage Master, the IP address of the Nuage Fader and/or the Nuage Master must be set in the same subnet as MMP1.


For details about IP address settings of the MMP1, refer to the MMP1 Getting Started and MMP1 Operation Manual documents.

Click the desired tab of the Nuage Fader or Nuage Master as a control source, and then set the IP settings.

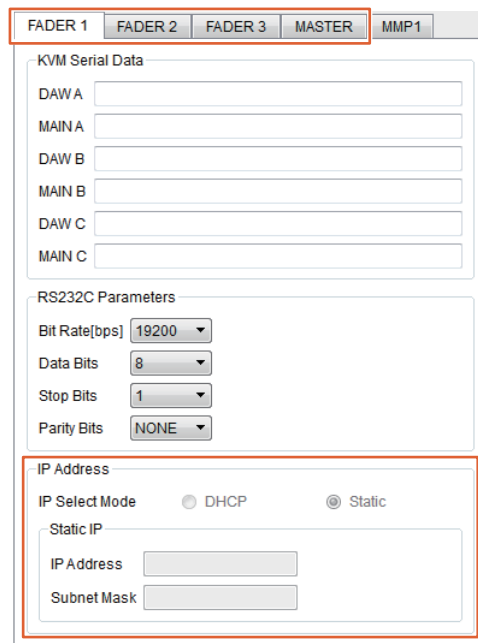

IP address settings for the Nuage Fader and Nuage Master depend on the IP address settings of the MMP1.

4. Select a MMP1 you will control remotely.

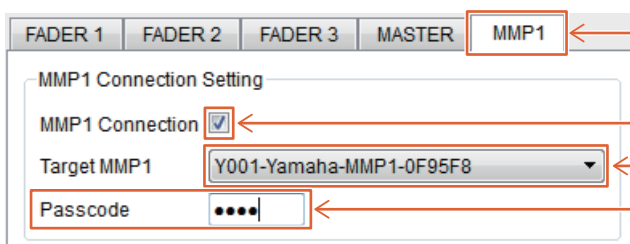


- 1 Select the “MMP1” tab,
- 2 Check the check box,
- 3 Select an MMP1 to control.
- 4 When a Passcode is set for the MMP1, enter the Passcode.

NOTE

When you remove the check mark in step 2, the keys on the Nuage Fader and Nuage Master return to conventional behavior.

5. Confirm the connection between the MMP1 and Nuage device.

When the MMP1 and Nuage device is connected correctly, the MMP1 indicator will light up in green.

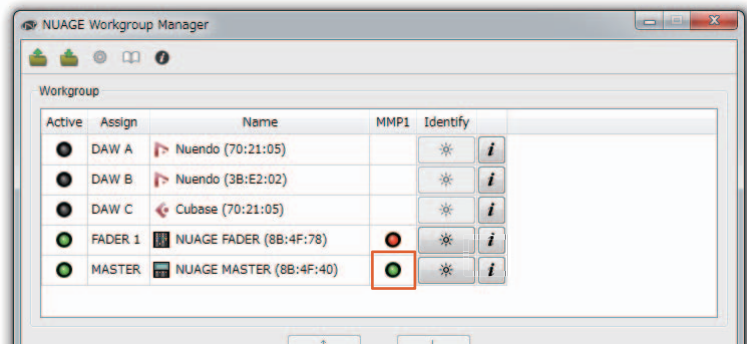

When the MMP1 indicator lights up in red (this means connection failure), the possible causes are as follows:


- The IP address is incorrect.
- The Passcode is incorrect.

Please check the IP address settings and the Passcode.

Selecting a monitor source or a cue output (Nuage Master)

Using the MONITOR SOURCE section of Nuage Master, you can select an audio source or cue output for monitoring.

MONITOR SOURCE Section

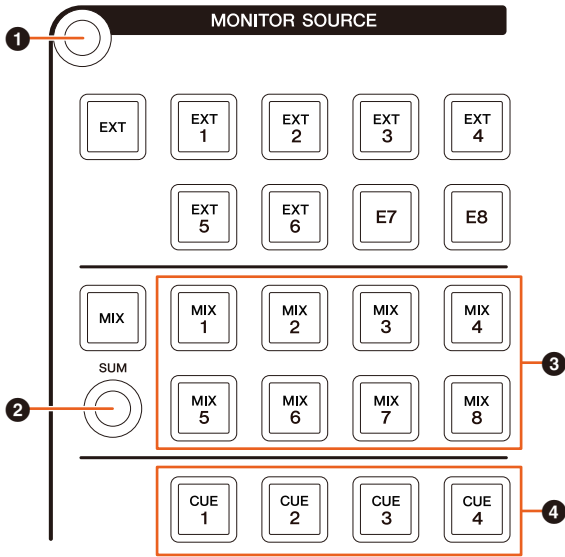

- 1 Displays the “Monitor Source” page on the [Multi function display].
- 2 When turned on (lit), multiple Monitor Sources can be selected at the same time.
- 3 Select an audio source to be monitored from Monitor Source 1-8.
- 4 Select an audio source to be monitored from Cue output 1-4.


Monitor Source page




- 1 Switches the operable controls between Main Monitor output and Headphone output.
- 2 When turned On (lit), multiple Monitor Sources can be selected at the same time.
- 3 Select an audio source to be monitored from Monitor Source 1-8.
- 4 Select an audio source to be monitored from Cue output 1-8.
- 5 Turns the Downmix audio output on (lit) or off. (Only when the Main Monitor output is selected.)
- 6 When the Monitor Source is selected, adjust each Monitor Source input level.
When the Cue output is selected, set the send level which sends from Cue Source 1-8 to the selected Cue output.

These controls are linked with MMP1 Editor controls and MMP1 Controller controls enclosed in the red frames.

MMP1 Editor — Main screen — Monitor Control tab

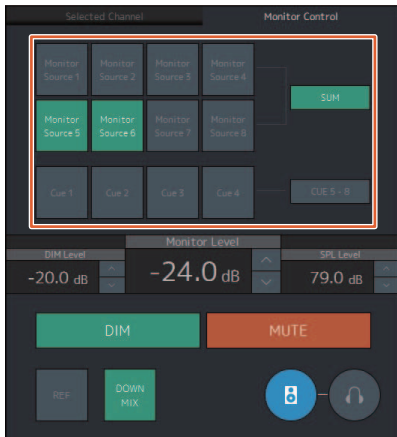

MMP1 Controller — Control view

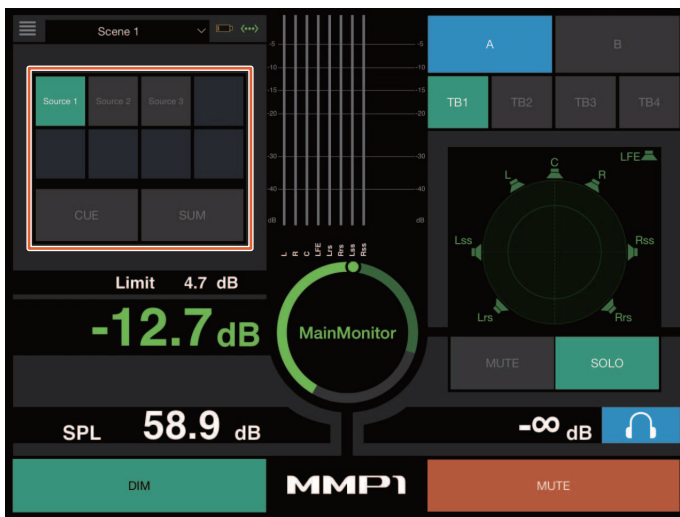


MMP1 Controller — Editor view — Main Monitor



Displaying the status and adjusting the Cue outputs or Studio Speaker outputs (Nuage Master)

Using the CUES section of Nuage Master, the status of the Cue outputs and Studio Speaker outputs of the MMP1 can be displayed, and the output levels can be adjusted.

CUES section

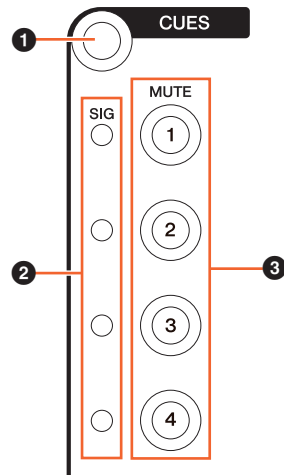

- ❶ Displays the “CUES” page on the [Multi function display].
- ❷ Displays the status of Cue outputs 1-4.
Output levels of less than -40 dB are dark, from -40 dB to less than -20 dB are displayed in green, from -20 dB to less than -0 dB are displayed in orange, and clipping is displayed in red.
- ❸ Indicates the mute status of Cue outputs 1-4: on (lit) and off (unlit).

Cues page



- ❶ Switches the operable controls between Main Monitor output and Headphone output.
- ❷ Indicates the output status of Cue outputs 1-8 or Studio Speaker outputs 1-8: on (lit) and off (unlit).
- ❸ Displays the meters of Cue outputs 1-8 or Studio Speaker outputs 1-8.
- ❹ For adjusting the levels of Cue outputs 1-8 levels or Studio Speaker outputs 1-8.

These controls are linked with MMP1 Editor controls enclosed in the red frames.

MMP1 Editor — Sub screen

The screenshot displays the MMP1 Editor Sub screen interface. The top navigation bar includes tabs for Main, Monitor Matrix, Speaker Matrix, Speaker Management, Patch, Settings, Information, and a menu icon. The main area is divided into several functional sections:


- Monitor Section:**
 - Monitor Source Trim:** Eight knobs for channels 1-8, each with a -24.0 dB setting.
 - Cue Source Trim:** Eight knobs for channels 1-8, each with a -24.0 dB setting.
 - Cue Output Trim:** Eight knobs for channels 1-8, each with a -24.0 dB setting. Below each knob is a MUTE button.
 - Studio Speaker Output Trim:** Eight knobs for channels 1-8, each with a 0.0 dB setting. Below each knob is a MUTE button.
 - Lip Sync Delay:** A knob set to 50.00 ms and two ON buttons for LFE Trim and LFE Filter.
- Oscillator Section:**
 - Frequency selection: 50Hz, 100Hz, 400Hz, 1kHz (highlighted), 10kHz.
 - Options: Pink Noise (500Hz-2kHz), Pink Noise (20Hz-20kHz).
 - Oscillator Trim: A knob set to -20.0 dB.
- Snapshot Section:**

No.	Name	Store	Recall
1	Initialize	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
2	Snapshot 1	<input type="checkbox"/>	<input type="checkbox"/>
3	Snapshot 2	<input type="checkbox"/>	<input type="checkbox"/>
4			
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
- Talkback Section:**
 - Talkback Dest 1, Talkback Dest 2, Talkback Dest 3, Talkback Dest 4, Talkback Dest 5, Talkback Dest 6, Talkback Dest 7, Talkback Dest 8.
 - Trim: Four knobs for 1-1, 1-2, 2-1, 2-2, each with a -24.0 dB setting.

Monitor Control (Nuage Fader, Nuage Master)

Using the CONTROL ROOM section of the Nuage Fader and Nuage Master, you can control the Downmix, Dimmer on and off, and monitor output levels.

Nuage Fader — CONTROL ROOM section

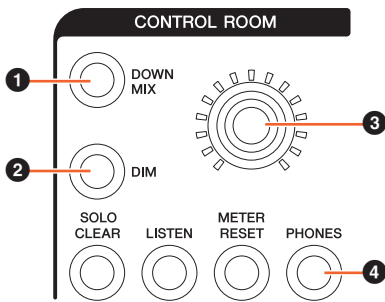

- 1 Turns the Downmix audio output on (lit) or off (unlit).

NOTE

When the Headphone output is selected for control, this button is disabled.

- 2 Turns the dimmer on (lit) or off (unlit).


NOTE

When the Headphone output is selected for control, this button is disabled.

- 3 Set Main Monitor output level or Headphone output level.

- 4 Switches the operable controls between Headphone output (lit) and Main Monitor output (unlit).

Nuage Master — CONTROL ROOM section

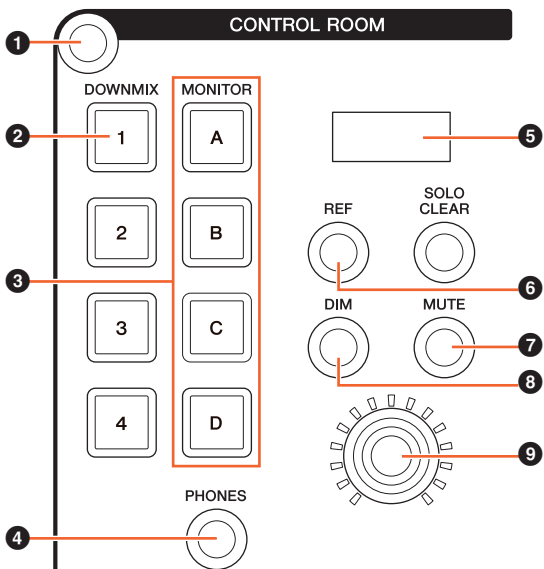

- 1 Displays the “Control Room” page on the [Multi function display].

- 2 Turns the Downmix audio output on (lit) or off (unlit).

NOTE

When the Headphone output is selected for control, this button is disabled.

- 3 Select a Speaker Set from Speaker Set A-D.

- 4 Switches the operable controls between Headphone output (lit) and Main Monitor output (unlit).

- 5 Displays the Monitor Level or the Headphone Monitor Level, and SPL Level.

- 6 Changes the Monitor Level value to the reference level value. Holding this down for at least two seconds (until the indicator flashes) stores the current Monitor Level value as the reference level.

NOTE

When the Headphone output is selected for control, this button is disabled.

- 7 Turns mute for the Main Monitor output or Headphone output on (lit) or off (unlit).

- 8 Turns the dimmer on (lit) or off (unlit).

NOTE

When the Headphone output is selected for control, this button is disabled.

- 9 Set Main Monitor output level or Headphone output level.


Control Room page




- ❶ Turns the Main Monitor output on (lit) or off (unlit).
- ❷ Displays the Monitor Level.
- ❸ Turns the dimmer on (lit) or off (unlit).
- ❹ Changes the Monitor Level value to the reference level.
Holding this down for at least two seconds (until the indicator flashes) stores the current Monitor Level value as the reference level.
- ❺ Select the speakers which switches between SOLO and MUTE.
- ❻ Turns the Headphone output on (lit) or off (unlit).
- ❼ Displays the Monitor Level.
- ❽ Touch MUTE to mute the speaker selected in (❺). Touch SOLO to output audio from the speaker selected in (❺).
- ❾ Control the Headphone Monitor Level, DIM Level, Monitor Level, SPL, LFE Filter, LFE Trim Level, and Lip Sync Delay.

These controls are linked with MMP1 Editor controls and MMP1 Controller controls enclosed in the red frames.


MMP1 Editor — Main screen — Monitor Control tab

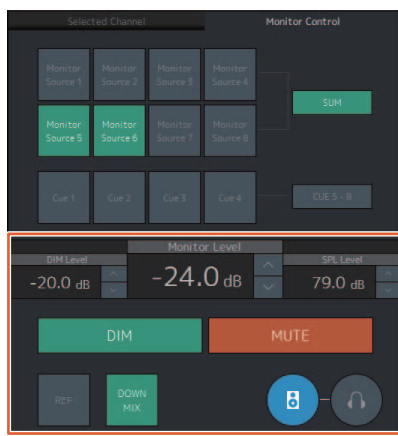


MMP1 Editor — Sub screen — Monitor section

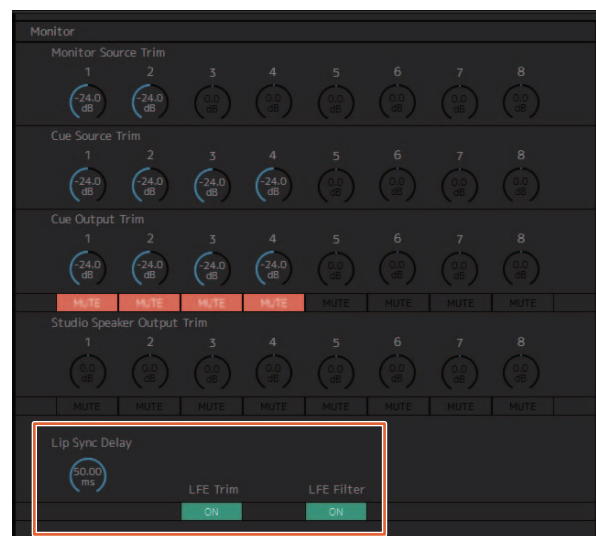


MMP1 Editor — Settings screen — Scene tab/MISC/Audio

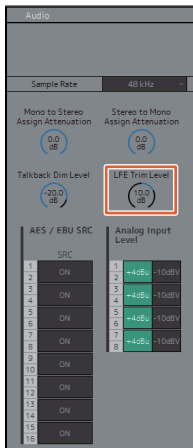

MMP1 Controller — Control view

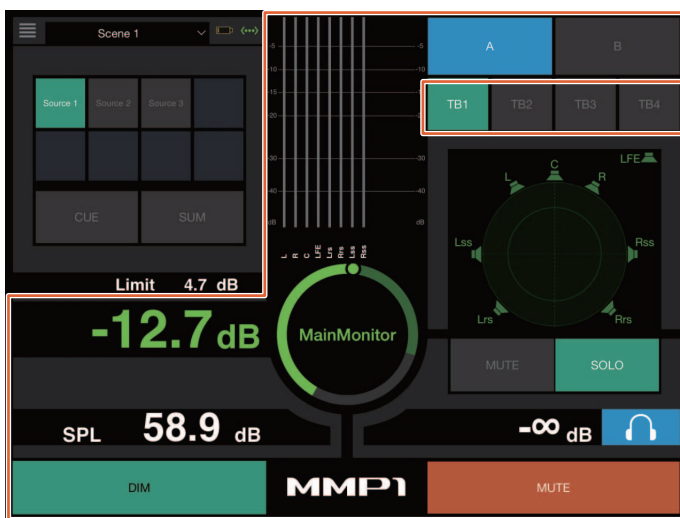

MMP1 Controller — Editor view — Main Monitor

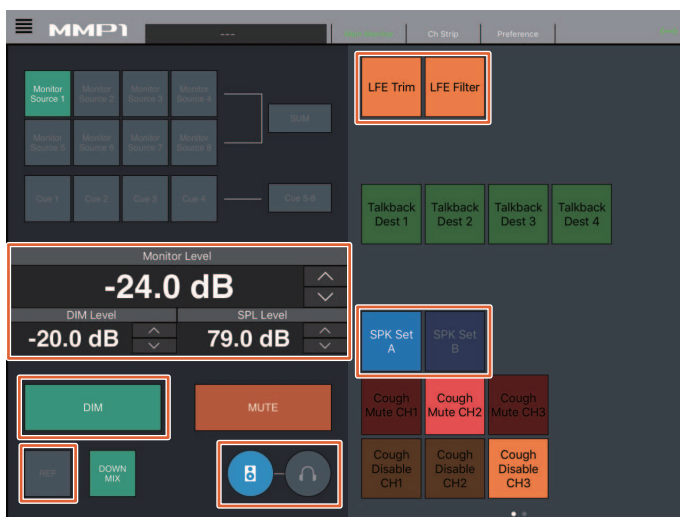


NOTE

The User Assignable functions that are displayed depend on the settings you've made.

Talkback on or off (Nuage Master)

Using the COMMUNICATION section of Nuage Master, you can turn Talkback on or off.

COMMUNICATION section

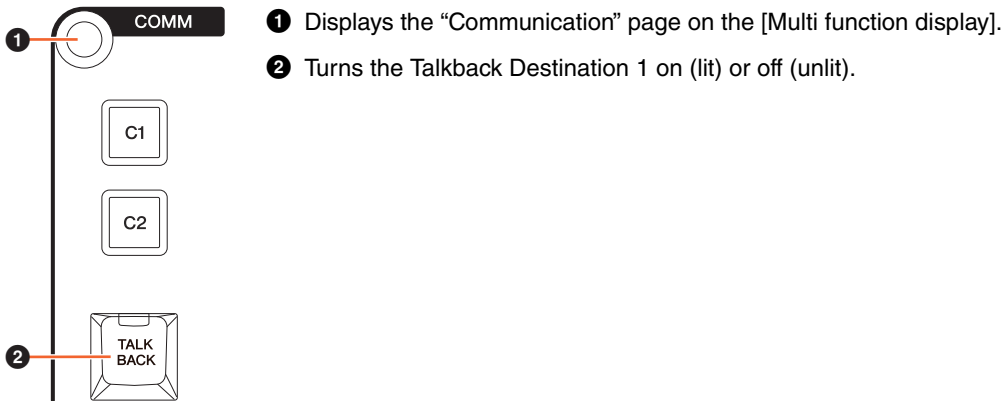

Communication page



- 1 Turns the Talkback Destination 1-8 on (lit) or off (unlit).
- 2 Adjust the mic input level used for Talkback.
- 3 Choose the "Talkback Button Behavior."
 - Latch: Toggles between on and off when pressed.
 - Momentary: Turns on while the button is held down, and turns off when the button is released.

These controls are linked with MMP1 Editor controls and MMP1 Controller controls enclosed in the red frames.

MMP1 Editor — Sub screen — Talkback section




MMP1 Controller — Control view



Added support for Elevation Pattern selection (Nuage Fader)

The Elevation Patterns of the VST MultiPanner plug-in available on Nuendo 7.1 or later can be selected on the Nuage Fader. The Elevation Patterns are displayed in the Label Pane when you select the VST MultiPanner on the Nuendo. You can switch the Elevation Pattern with the corresponding [Multi function button].

Channel Strip

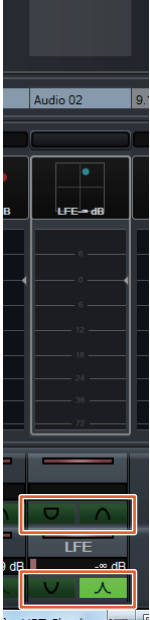

Channel Setting Mode




Added support for cursor operation outside the Project Window (Nuage Master)

The operation target window when [▲]/[◀]/[▼]/[▶] buttons are pressed can be selected from the Project Window or the window displayed in the foreground.

Operation

Numbers in the illustration below correspond to the instruction steps.

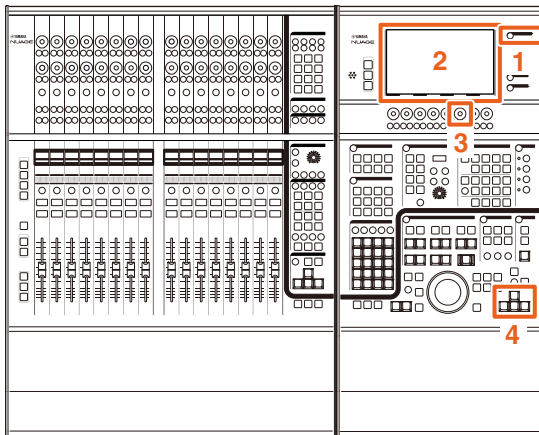

1. Press [SETUP] in the MULTI FUNCTION DISPLAY section.
 2. In the [Multi function display], touch the "PAGE 3" tab.
 3. Select the target of cursor operation using the [Multi function knob] that corresponds to "PC KBD Emu Mode."
-
- | | |
|-----|---|
| Off | Targets the "Project Window" for operation. |
| On | Targets the window displayed in the foreground for operation. |
-
4. Operate the cursor using the [▲]/[◀]/[▼]/[▶] buttons on the GENERAL CONTROL section.

Added functions in NUAGE V1.7


Channel Connection for VCA Fader (Nuage Fader)	66
Assignment Change for Keys in SECTION CONTROL Section (Nuage Fader)	66
Assignment Change for Keys in CHANNEL VIEW CONTROL Section (Nuage Fader) ..	67
Expanded CHANNEL VIEW Memory (Nuage Fader)	67
Display All Function for All Channel Types (Nuage Fader)	67
Expanding and Collapsing Folder Tracks (Nuage Master)	68
New Parameter Setting Method for Quick Controls (Nuage Fader, Nuage Master)	68
Expanded Adjustment Function for “Mixer” Window Width (Nuage Fader)	69
Support for GPIO (Nuage Master)	70
Setting Automation Mode for Each Track (Nuage Master)	72
Insert Operation for Control Room Channels (Nuage Master)	72
New Parameters in the CONTROL ROOM Page (Nuage Master)	73
New Settings for Saving Project Files (Nuage Master)	74
Support for Avid Pro Tools Shortcut Keys (Nuage Master)	74
Support for the Avid Pro Tools Insert (Nuage Fader)	75
Display Method for NUAGE PT Bridge Window (NUAGE PT Bridge)	78
Lock Function for the Dante Network Interface (Nuage I/O)	78
Initializing Direct Monitoring Settings (Nuage I/O)	79

Channel Connection for VCA Fader (Nuage Fader)

You can now use Nuage Fader to connect or disconnect channels for a VCA fader created in Nuendo (7 or later).

Operation

Numbers in the illustration below correspond to the instruction steps.

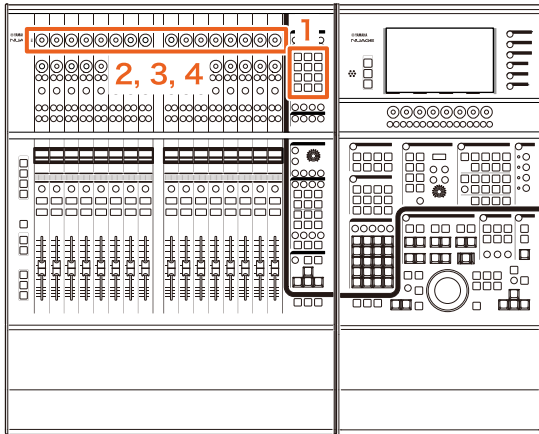


1. Press [VCA] in the SECTION CONTROL section.

NOTE

You must connect "VCA" to one of the buttons in the SECTION CONTROL section in advance (page 66).

2. Press the [Multi function knob] (upper) corresponding to the channel you want to connect to (or disconnect from) a VCA fader.

The pop-up window is displayed in "Mixer."

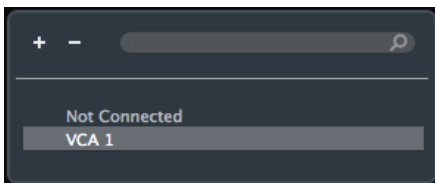

NOTE

If the VCA fader has not been created, only "Not Connected" is displayed.


3. Turn the [Multi function knob] (upper) to select the VCA fader for connection (or "Not Connected").

4. Press the [Multi function knob] (upper).

This connects the channel to the VCA fader (or, disconnects).

NOTE

If you press the [Multi function knob] (lower) that corresponds to the VCA fader, the pop-up window below is displayed and you can change the settings of the VCA fader.

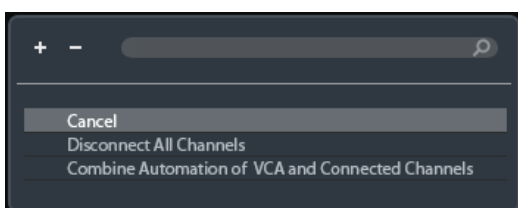


Assignment Change for Keys in SECTION CONTROL Section (Nuage Fader)

You can now change the assignment of keys in the SECTION CONTROL section.


Operation

Numbers in the screen shot below correspond to the instruction steps.

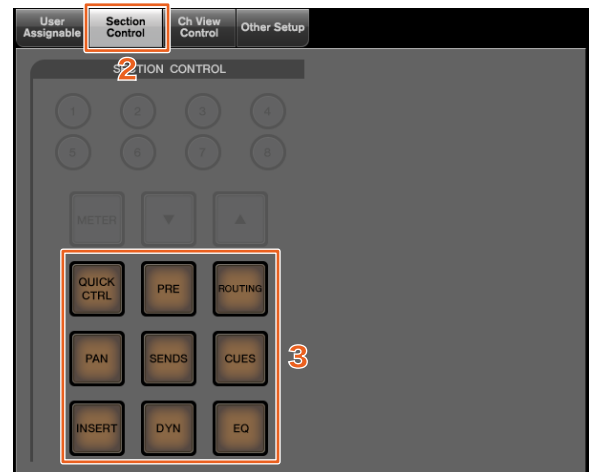

1. From the Nuendo or Cubase menu, click "Devices," then "NUAGE FADER Setup."
2. Click the "Section Control" tab.
3. Click the key for which you want to change the assignment.

Selectable functions are displayed in a pop-up list.

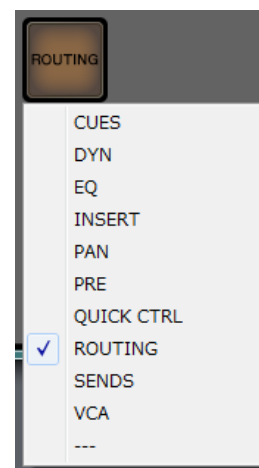

4. Select the function to be assigned to the key from the list.

NOTE


- Select "---" to release the assignment.
- In addition to changing the assignment, we recommend that you also change the key labels on the Nuage Fader. The keycaps on the Nuage Fader are removable.

Assignment Change for Keys in CHANNEL VIEW CONTROL Section (Nuage Fader)

You can now change the assignment of keys in the CHANNEL VIEW CONTROL section.


Operation

Numbers in the screen shot below correspond to the instruction steps.

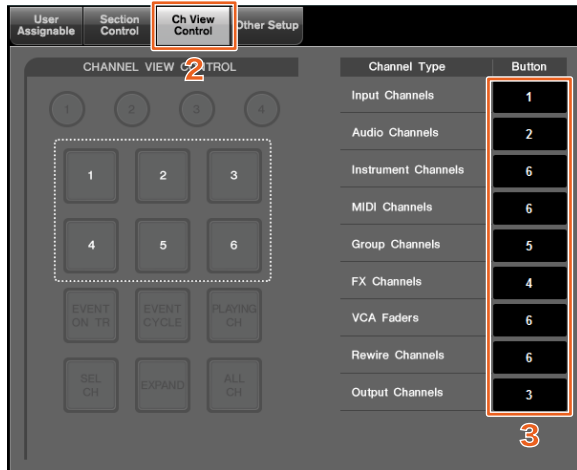

1. From the Nuendo or Cubase menu, click “Devices,” then “NUAGE FADER Setup.”
2. Click the “Ch View Control” tab.
3. Click the number in the “Button” section located next to the “Channel Type.”

The key numbers are displayed in a pop-up list.

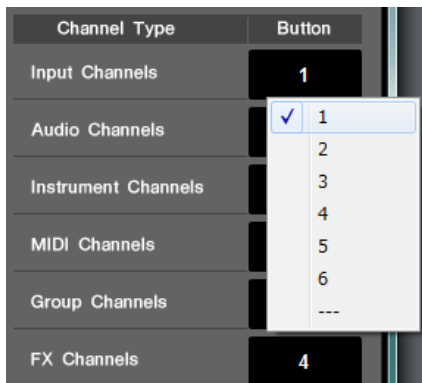

4. Select the number of the key to be assigned to the desired Channel Type.


NOTE

- You can assign multiple Channel Types to a key.
- In addition to changing the assignment, we recommend that you also change the key labels on the Nuage Fader. The keycaps on the Nuage Fader are removable.

Expanded CHANNEL VIEW Memory (Nuage Fader)

There are now eight save slots for CHANNEL VIEW memory that can be used for storing and recalling channel display statuses.

Operation

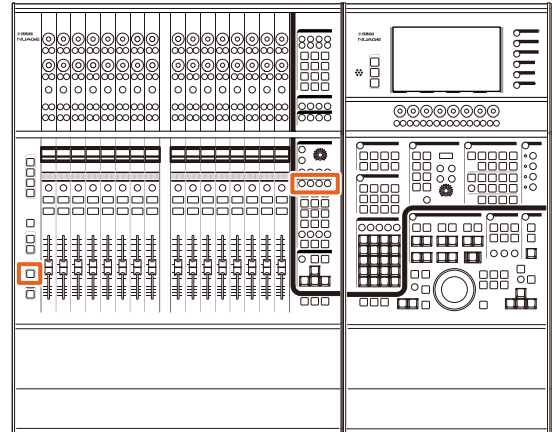


- There is no change to the operations for memory 1 to 4. Hold the key for two seconds or more to store the channel view, and press it quickly to recall the channel view.
- While holding down [SHIFT], press one of the keys from [CHANNEL VIEW memory 1] to [CHANNEL VIEW memory 4] to store or recall the channel view corresponding to memory 5 to 8.

Display All Function for All Channel Types (Nuage Fader)

You can now display all channel types that correspond to [INPUT], [AUDIO], [OUTPUT], [FX], [GROUP], or [OTHERS] in the CHANNEL VIEW CONTROL section.

Operation

Numbers in the illustration below correspond to the instruction steps.

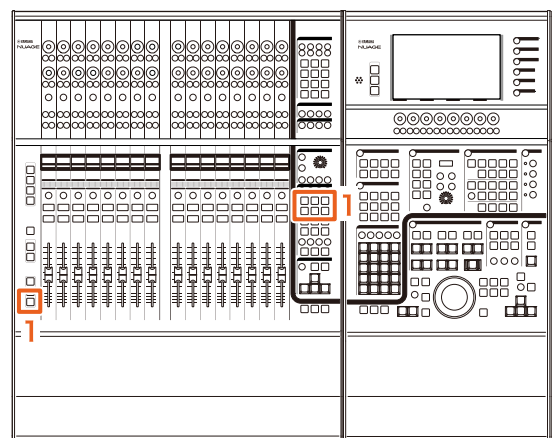


1. While pressing [ALT] in the MODIFIER section, press either [INPUT], [AUDIO], [OUTPUT], [FX], [GROUP], or [OTHERS].
All channel types that correspond to [INPUT], [AUDIO], [OUTPUT], [FX], [GROUP], or [OTHERS] are displayed.

Expanding and Collapsing Folder Tracks (Nuage Master)

You can now expand and collapse a folder track using Nuage Master when you have selected a folder track in the project window.

Operation

Numbers in the illustration below correspond to the instruction steps.

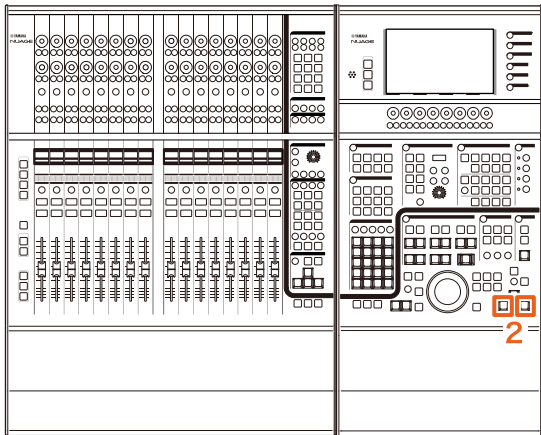


1. Select a folder track on the project window in Nuendo or Cubase.
2. Press [◀] and [▶] in the GENERAL CONTROL section simultaneously.
This expands the folder track when it is collapsed, and collapses it when it is expanded.

New Parameter Setting Method for Quick Controls (Nuage Fader, Nuage Master)


You can now set the parameter assignments for the “Quick Controls” from Nuage Fader or Nuage Master.

Operation (Nuage Fader)

Numbers in the illustration below correspond to the instruction steps.

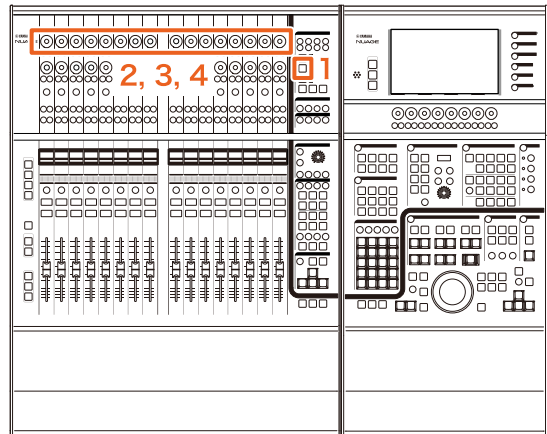


1. Press [QUICK CTRL] in the SECTION CONTROL section.
2. Press the [Multi function knob] (upper) for the parameter you want to change.
The pop-up window is displayed in the “Mixer.”

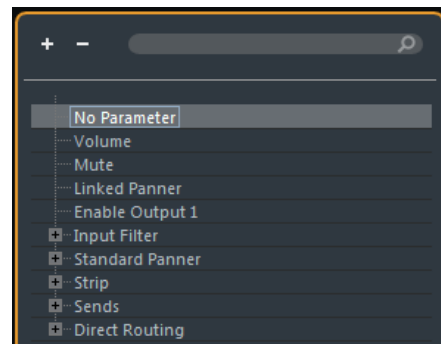

3. Turn the [Multi function knob] (upper) to select the parameter to be assigned.
4. Press the [Multi function knob] (upper).
This assigns the parameter to the [Multi function knob]. If you select “No Parameter,” the assignment is canceled.


Operation (Nuage Master)

Numbers in the illustration below correspond to the instruction steps.

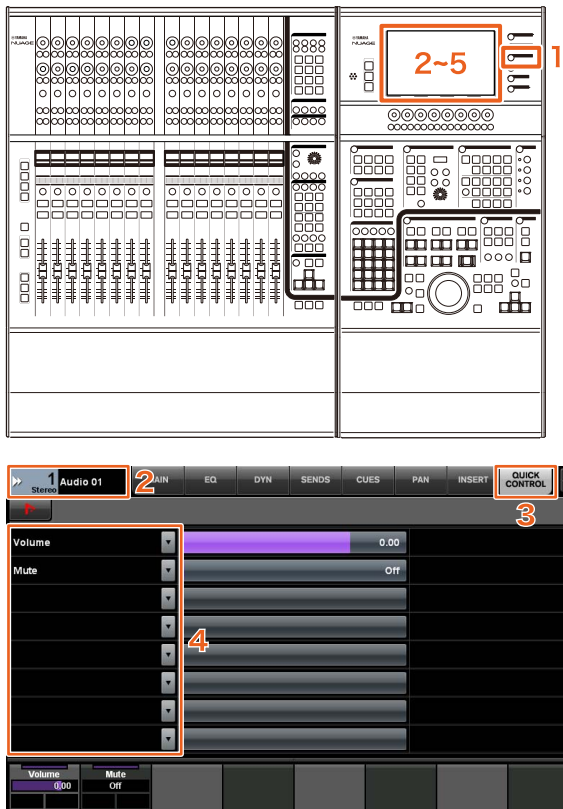

1. Press [CHANNEL] in the MULTI FUNCTION DISPLAY section.
2. In the [Multi function display], touch the “Channel information,” then select the channel for you want to change the “Quick Control” parameters.
3. In the [Multi function display], touch the “QUICK CONTROL” tab.
4. In the [Multi function display], touch the parameter of the [Quick control] to be changed.

The pop-up window is displayed.

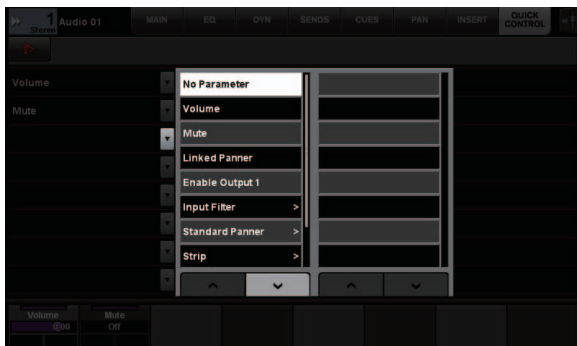


5. Touch the parameter to be assigned.

Expanded Adjustment Function for “Mixer” Window Width (Nuage Fader)

In addition to the conventional items, you can now also adjust the “Mixer” bottom positions.

Operation

Numbers in the illustration below correspond to the instruction steps.

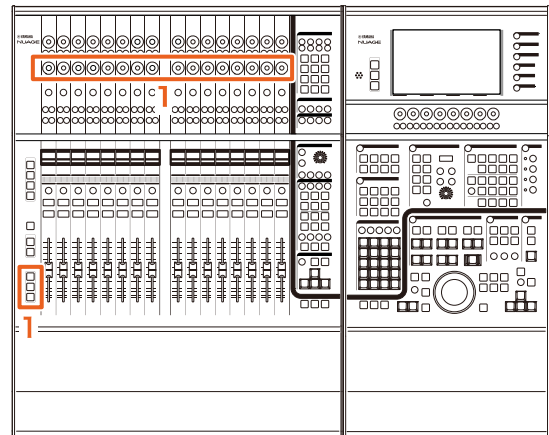

1. While pressing the [SHIFT], [CTRL], and [ALT] keys in the MODIFIER section at the same time, operate a [Multi function knob] (lower).

Depending on the [Multi function knob] you operate, you can adjust the positions of the left edge, right edge, bottom edge, or the meter length for the “Mixer.” Refer to the label area on the “Mixer” for which [Multi function knob] corresponds to which adjusted item.

NOTE

While pressing the [SHIFT], [CTRL], and [ALT] keys in the MODIFIER section at the same time, press an item from [Sub parameter 1] in the SECTION CONTROL section to [Sub parameter 4] to switch the display showing the “Mixer.”


Support for GPIO (Nuage Master)

You can now receive GPIO input in Nuage Master or output GPIO signals from Nuage Master via JL Cooper eBOX/eBOX GPI8.

NOTE

- Nuage Master plays the role as an eBOX client, so set all eBOX devices that communicate with Nuage Master to server mode.
- To ensure proper communication, turn off the eBOX password function.

Connection example

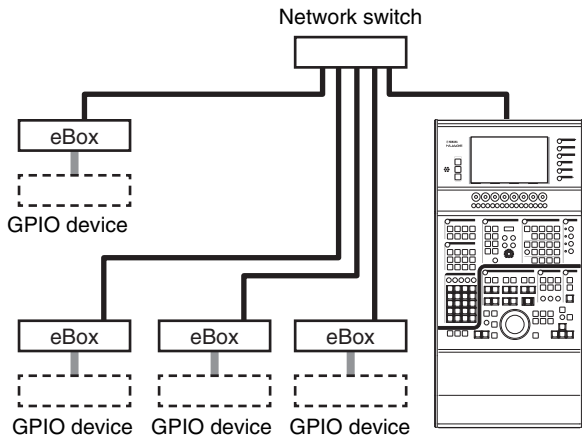


Operation

1. From the Nuendo or Cubase menu, click “Devices,” then “NUAGE MASTER Setup.”
2. Click the “GPIO” tab.
3. Perform the settings on each of the following pages.

Device page

Enables you to set whether to turn the GPIO function on or off, and perform basic settings for using the GPIO function.

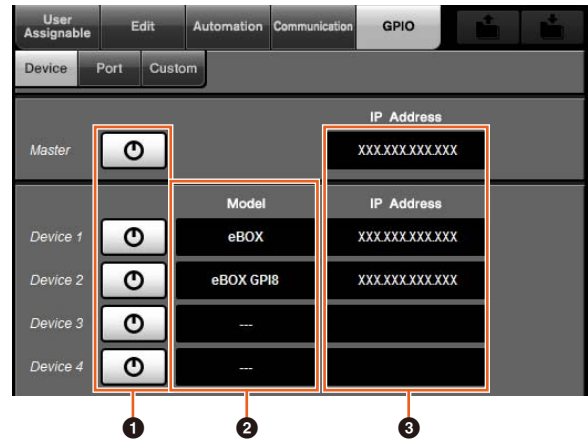


- 1 **On/Off**
Turns the GPIO function of Nuage Master and eBOX on (lit) or off (not lit).
- 2 **Model**
Enables you to select the type of eBOX connected to the GPIO device. You can connect up to four eBOX or eBOX GPI8 devices.
- 3 **IP Address**
Enables you to input the Nuage Master and eBOX IP addresses. Set the separate IP addresses for Nuage Master and each of the eBOX devices.

Example:

Nuage Master	192.168.254.103
eBOX1	192.168.254.102
eBOX2	192.168.254.104

Port page

Enables you to select the GPIO functions. You can select up to 32 functions for input and output, respectively.

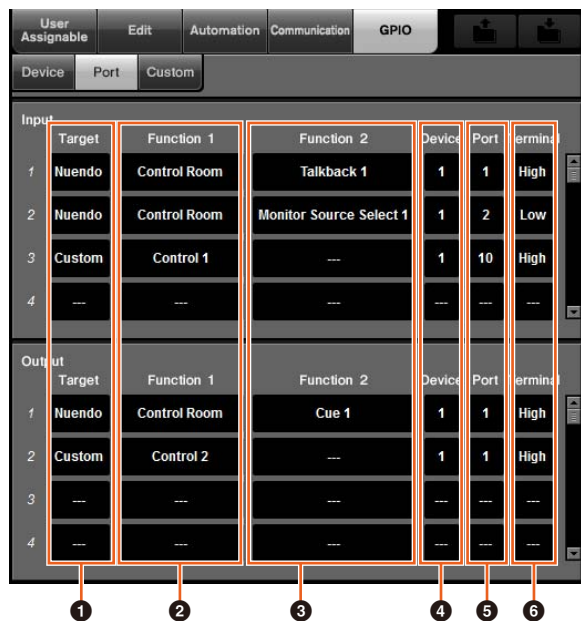

1 Target

Enables you to select either a DAW or “Custom” for the input and output targets. You can define the details of the “Custom” function on the Custom page.

2 Function 1

Enables you to select the GPIO functions. When a DAW is set to Target, then “Control Room” is selected automatically. When “Custom” is set to Target, then you can select from the functions defined on the Custom page.

3 Function 2

Enables you to select the GPIO functions. When a DAW is set to Target, you can select the function from the pop-up list displayed when you touch this item. When the “Custom” is set to Target, then “---” is selected automatically.

4 Device

Enables you to select the eBOX for the input and output targets. The numbers in this column correspond to Device 1 to Device 4 set on the Device page.

5 Port

Enables you to select the port (GPIO terminal pin) for the eBOX set in the Device column. Port 1 uses pin 2, port 24 uses pin 25. Refer to the eBOX manual for details.

6 Terminal


Defines the output port voltage and operation performed by the input port voltage.

High	For Input, this turns on when the input port voltage is High. For Output, the output port voltage is set to High when the function is on.
------	--

Low	For Input, this turns on when the input port voltage is Low. For Output, the output port voltage is set to Low when the function is on.
-----	--

Custom page

Enables you to define the GPIO functions. You can define up to 16 functions.

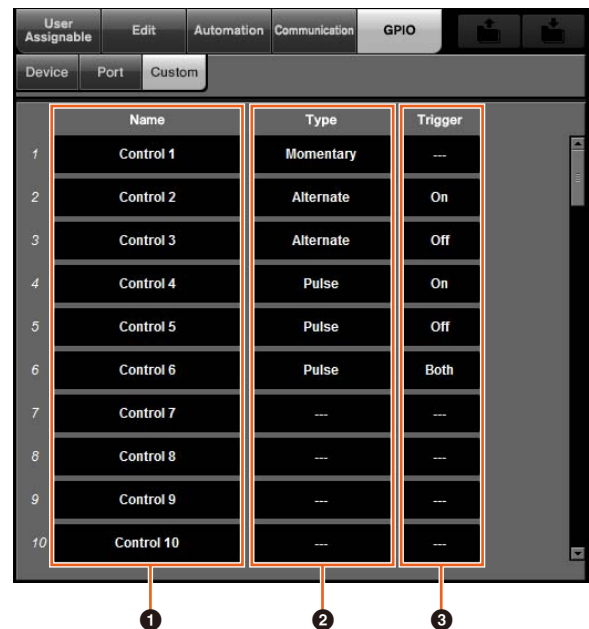

1 Name

Enables you to add a name for the GPIO function to be defined.

2 Type

Enables you to select “Momentary,” “Alternate,” or “Pulse” for the input/output signal type.

Momentary	Turns the function on while the related input port is on.
Alternate	Turns the function on or off each time the Trigger condition is met.
Pulse	Turns the function on for a set amount of time (approx. 250 ms) directly after the related input port meets the Trigger condition.

3 Trigger

Enables you to define the condition for turning output on or off. When “Type” is “Momentary,” this item does not need to be set.

When set to “Alternate,” output is inverted under the following conditions.

When set to “Pulse,” output turns on under the following conditions.


On (Alternate/Pulse)	Output is changed when the related input port changes from off to on.
Off (Alternate/Pulse)	Output is changed when the related input port changes from on to off.
Both (Only Pulse)	Output is changed when the related input port changes from on to off or off to on.

Setting Automation Mode for Each Track (Nuage Master)

You can now use the [Multi function display] to set the automation mode for each track.

Operation


Numbers in the illustration below correspond to the instruction steps.

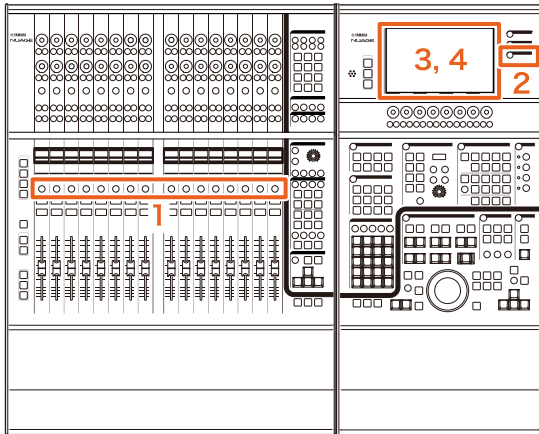

1. Press [SEL] in the SECTION CONTROL section to select the desired track for setting the automation mode.
2. Press [CHANNEL] in the MULTI FUNCTION DISPLAY section.
3. Touch the area enclosed in the red square in the window image below.



4. Touch the automation mode to be set to the track.

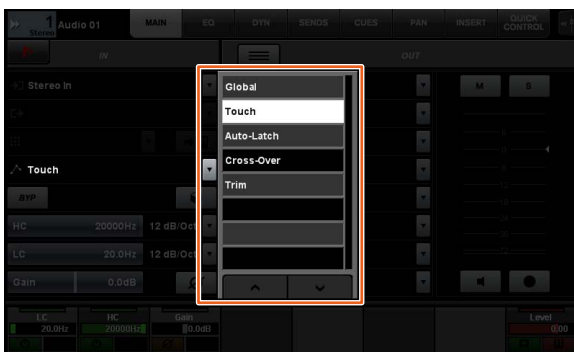


Insert Operation for Control Room Channels (Nuage Master)

You can now use the [Multi function display] to operate the "Insert" to each channel in the Control Room.

Operation

Numbers in the illustration below correspond to the instruction steps.

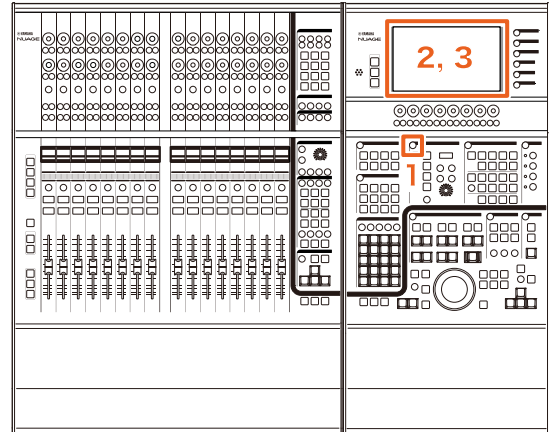

1. Press the [Display access] button in the CONTROL ROOM section.
2. In the [Multi function display], touch the "INSERT" tab.



3. Configure the "Insert" settings. Refer to the window description below for details.

Control Room – INSERT page



- 1 Control Room channel selection area**

Enables you to select the target channel for “Insert.”
- 2 Insert**

Displays the assigned plug-in effects. Touch the effect name to display the window for selecting the plug-in effect.
- 3 Preset**

Displays the selected presets. Touch the preset name to display the window for selecting the presets.
- 4 On/Off**

Turns the “Insert” on (blue) or off (silver).
- 5 BYP**

Turns the “Bypass” on (orange) or off (silver).
- 6 e (Edit)**


Displays the PLUG-IN page for the assigned plug-in effects.

New Parameters in the CONTROL ROOM Page (Nuage Master)

You can now operate the Click Level, Click Pan, Listen Level, and Listen Dim on the CONTROL ROOM page.

Operation

Numbers in the illustration below correspond to the instruction steps.

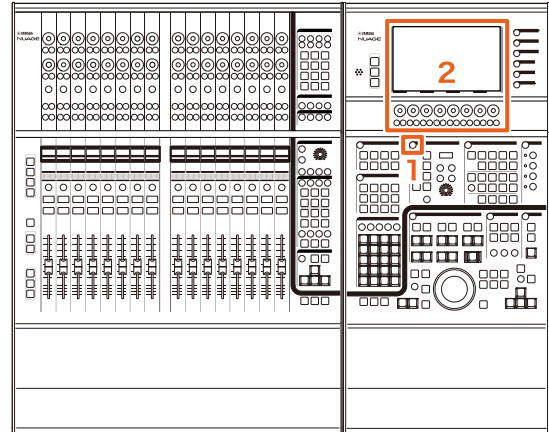

1. Press the [Display access] button in the CONTROL ROOM section.
2. Change the parameter using the [Multi function knob] corresponding to the display in the Label Pane area.



NOTE


Click Level and Click Pan can be switched using [Multi function button A] and [Multi function button B].

New Settings for Saving Project Files (Nuage Master)

You can now select whether to overwrite the project file or save as a new file when you press [SAVE] in the GENERAL CONTROL section.

Operation

Numbers in the illustration and screen shot below correspond to the instruction steps.

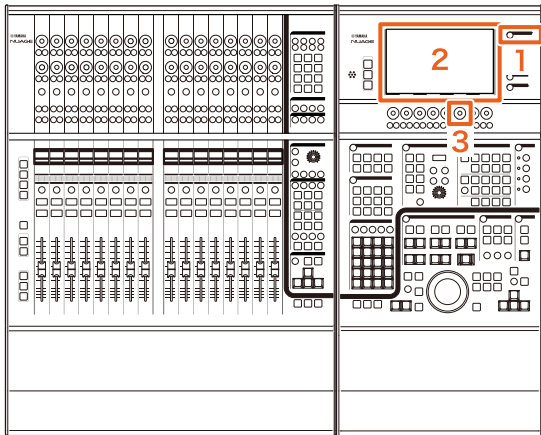

1. Press [SETUP] in the MULTI FUNCTION DISPLAY section.
2. In the [Multi function display], touch the "PAGE 3" tab.
3. Select the method for saving project files using the [Multi function knob] that corresponds to "Save Button Operation."

Save	Overwrites the project file.
Ver.	Saves the project file as a new file.

NOTE


The file name for a project file saved as a new file adds branch numbers such as "-01" and "-02" to the original file name.

Support for Avid Pro Tools Shortcut Keys (Nuage Master)

You can now assign Avid Pro Tools shortcut keys to Nuage Master's USER ASSIGNABLE keys.

Operation

Numbers in the screen shot below correspond to the instruction steps.

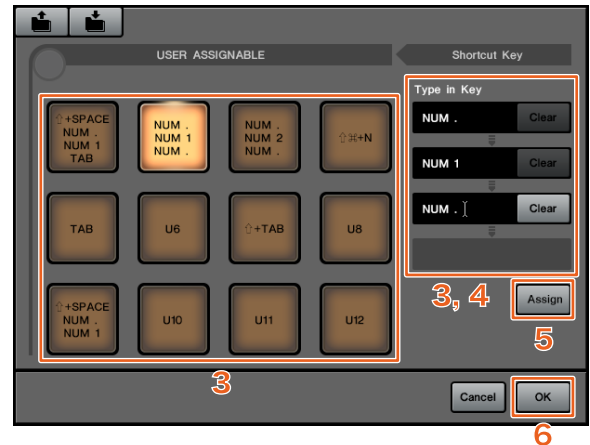

1. On a Mac with Avid Pro Tools, click  or  on the menu bar.

NOTE

If the icons are not displayed, install NUAGE PT Bridge in TOOLS for NUAGE.

2. Click "User Assignable Setup."
3. Click any USER ASSIGNABLE key on the window.
The shortcut key assigned to the key you clicked is displayed in the "Type in Key" section under "Shortcut Key" on the window. (A blank is displayed if a shortcut key is not assigned.)
4. Click a shortcut key (or blank) displayed in the Type in Key section, then press a key on the computer keyboard.

NOTE

- You can register up to four keys to a USER ASSIGNABLE key. For example, if you register "." (period), "1," and "." (period) to [U2], when you press [U2], it is recognized by the system that you pressed these three buttons in order, and memory location 1 will be called up.
- You can register keys such as ⌘ (Command), ^ (Control), and ⇧ (Shift) in combination with other keys.
- If you press a key that cannot be used as a shortcut key, "Not Available" will be displayed, and that key will not be registered.


5. Click the "Assign" button.

The change in the shortcut keys is reflected in the on-screen USER ASSIGNABLE key.

6. Click "OK."

The change in the shortcut keys is reflected in the Nuage Master USER ASSIGNABLE keys.

User Assignable Setup window

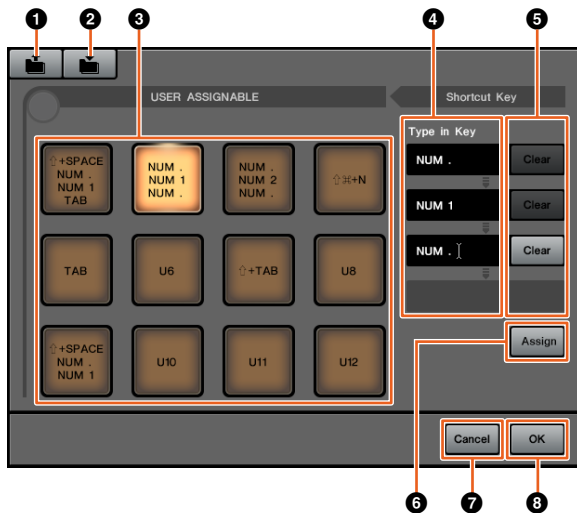


- 1 Open**
Reads the saved shortcut key assignments.
- 2 Save**
Saves the shortcut key assignment. The shortcut key assignment is saved as an “.NPTB” file.
- 3 U1 – U12**
Displays the assigned shortcut keys. Click the key to display the assigned shortcut keys in the Type in Key section.
NOTE
You can double-click this button to change the name of this button.
- 4 Type in Key**
Displays the shortcut keys assigned to the selected USER ASSIGNABLE key. Click a shortcut key (or blank) displayed in the Type in Key section, then press a key on the keyboard to register the shortcut key to be assigned. (The change is not reflected until you click the “Assign” button.)
- 5 Clear**
Clears the shortcut key assignment. (The change is not reflected until you click the “Assign” button.)
- 6 Assign**
Reflects the shortcut keys displayed in the Type in Key section to the on-screen USER ASSIGNABLE key. The display of the on-screen USER ASSIGNABLE key changes to the assigned shortcut keys when you click this button.
- 7 Cancel**
Discards the change in shortcut keys. The settings for the Nuage Master USER ASSIGNABLE keys are not changed.
- 8 OK**
Reflects the change in the shortcut keys in the Nuage Master USER ASSIGNABLE keys.



Support for the Avid Pro Tools Insert (Nuage Fader)


You can now use the “Insert” of Avid Pro Tools using Nuage Fader. You can use “Insert” on any channel and edit the “Insert” parameters.

Operation (Insert assignment)

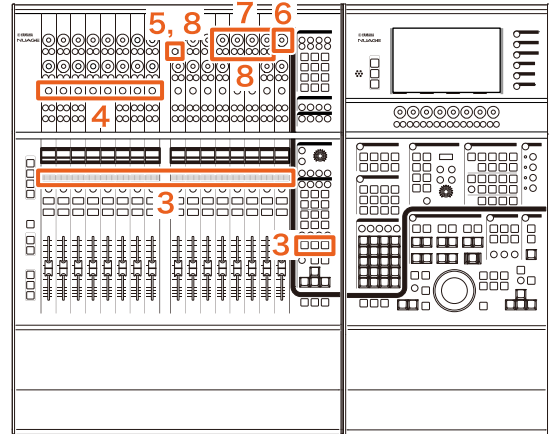
Numbers in the illustration below correspond to the instruction steps.




- 1. On the Mac with Avid Pro Tools, click  or  on the menu bar.**
NOTE
If the icons are not displayed, install NUAGE PT Bridge in TOOLS for NUAGE.
- 2. Click “Plug-in Panel.”**
- 3. Move the channel for which “Insert” is used to somewhere between 1 and 8 in the CHANNEL STRIP section of the Nuage Fader.**
NOTE
If you are using multiple Nuage Faders, use 1 to 8 in the CHANNEL STRIP section of the Nuage Fader on the far left.
- 4. Press [e] button of the moved channel for which “Insert” is used.**
- 5. Press the ninth [Multi function button A] from the left.**
“ASSIGN” will flash in red.

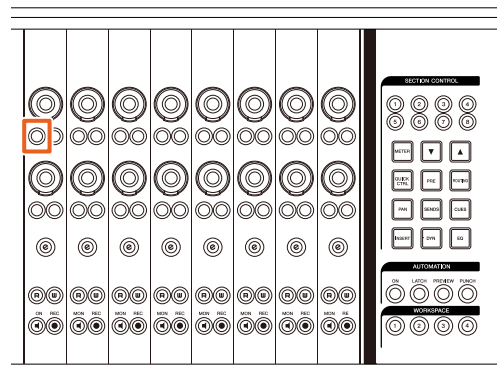


6. Turn the 16th [Multi function knob] from the left of the Nuage Fader CHANNEL STRIP section (the far right knob), then select from group A – D or E for which insert is used. “Insert 1 – 4” (A – D) or “Insert 5” (E) will be displayed on the Plug-in Panel window.

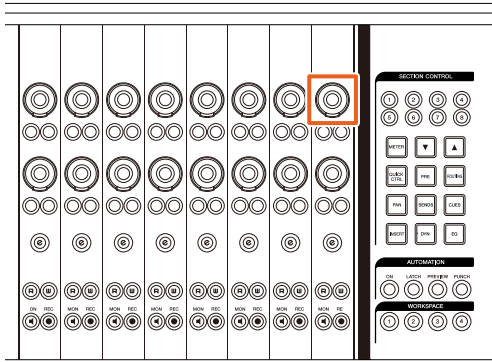

7. Turn the [Multi function knob] to select the insert. The [Multi function knob] to be operated varies depending on the target slot for “Insert.”

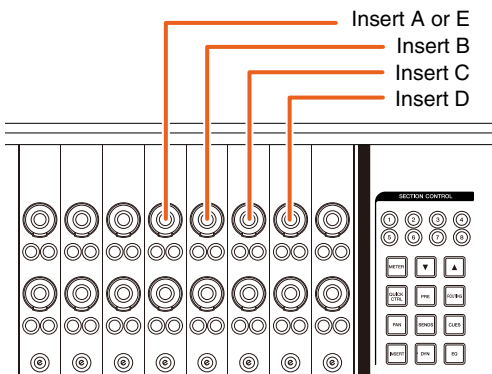


8. Press the ninth [Multi function button A] from the left or the one that corresponds to the channel with insert. The selected insert is assigned.

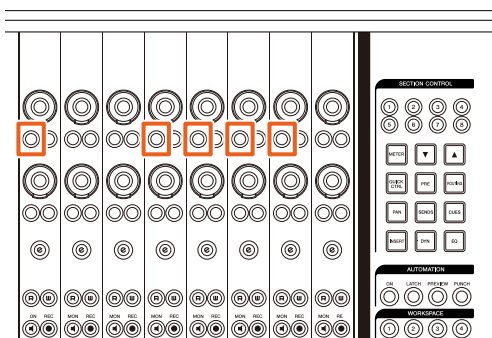

Operation (Parameter change)

Numbers in the illustration below correspond to the instruction steps.

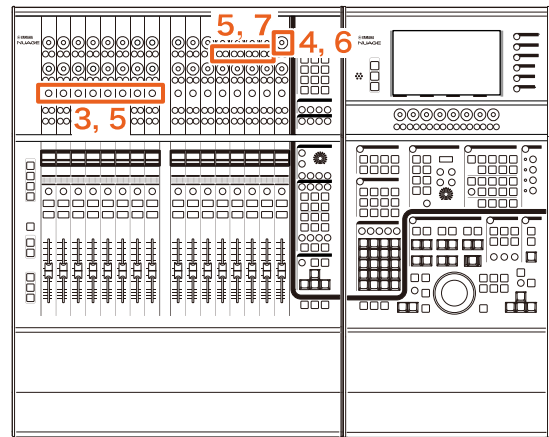

1. On a Mac with Avid Pro Tools, click  or  on the menu bar.

NOTE

If the icons are not displayed, install NUAGE PT Bridge in TOOLS for NUAGE.

2. Click “Plug-in Panel.”


3. Select the “Insert” for which you want to change the parameters on Avid Pro Tools.

NOTE


You can also select the corresponding channel using the [e] button for 1 to 8 in the CHANNEL STRIP section of the Nuage Fader.

4. Turn the 16th [Multi function knob] from the left of the Nuage Fader CHANNEL STRIP section (the far right knob), then select from group A – D or E depending on which insert is used.

“Insert 1 – 4” (A – D) or “Insert 5” (E) will be displayed on the Plug-in Panel window.

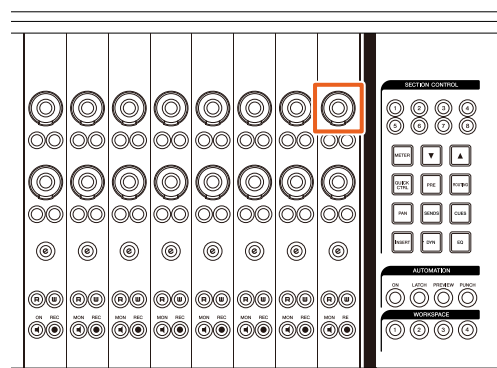

5. Press the [Multi function button A] that corresponds to the “Insert” you want to change the parameters of.

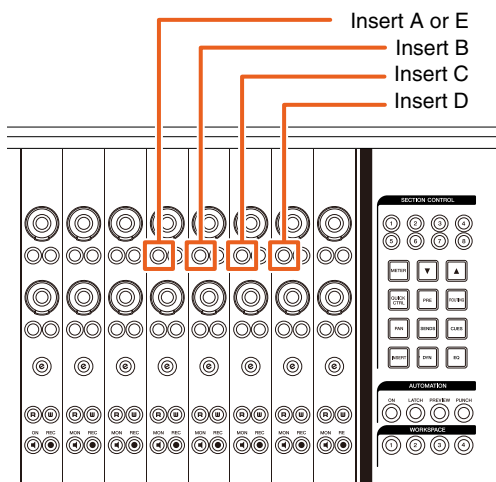


NOTE


Instead of steps 4 and 5, by quickly pressing the [e] button of 1 to 8 in the CHANNEL STRIP section of the Nuage Fader twice, you can call up the parameters of the plug-in being inserted to the corresponding channel. In this case, the selected insert will be switched each time you quickly press the [e] button twice.

6. Turn the 16th [Multi function knob] from the left of the Nuage Fader CHANNEL STRIP section (the far right knob), then select a parameter.

Four parameters will be displayed at the same time.

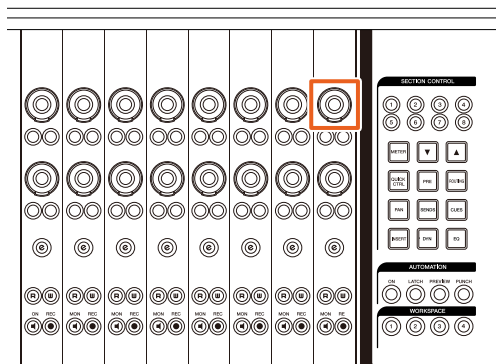

7. Turn the [Multi function knob] or press the [Multi function button] corresponding to the parameter and change the parameter’s value. The value you change to will immediately be applied.

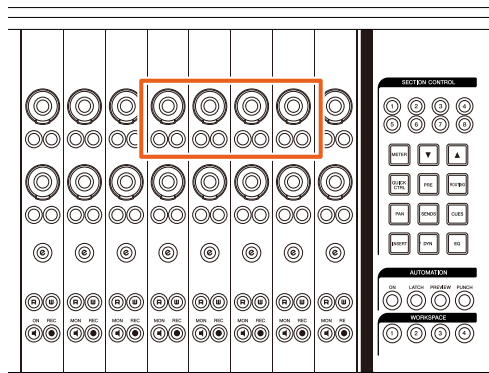


NOTE

- You can press the 10th [Multi function button A] from the left to compare it to the parameter before editing. Press the button again to return to the changed value.
- You can press the 11th [Multi function button A] from the left to bypass the “Insert.” Press the button again to return to turn the bypass off.

Display Method for NUAGE PT Bridge Window (NUAGE PT Bridge)

The procedures for displaying the following window, which was conventionally displayed in the computer's "System Preference," were added or changed.

Network window

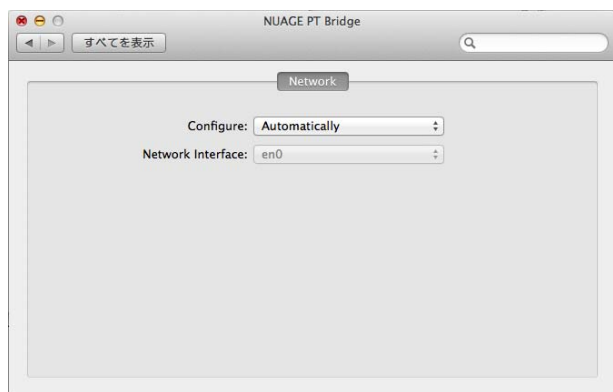

Operation

1. On a Mac with Avid Pro Tools, click  or  on the menu bar.

NOTE


If the icons are not displayed, install NUAGE PT Bridge in TOOLS for NUAGE.

2. Click "Network Setup."

NOTE

You can also display the window by selecting "System Preferences," then "NUAGE PT Bridge" as before.

About window

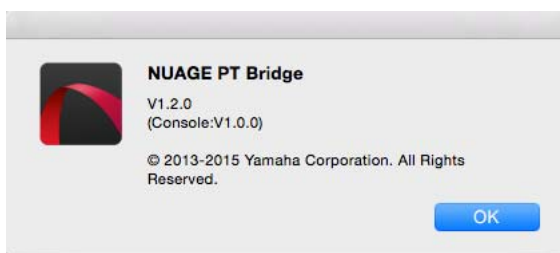

Operation

1. On a Mac with Avid Pro Tools, click  or  on the menu bar.

NOTE

If the icons are not displayed, install NUAGE PT Bridge in TOOLS for NUAGE.


2. Click "About."

Lock Function for the Dante Network Interface (Nuage I/O)

A lock function has been added so that the Dante network interface is not changed while Nuendo or Cubase is running.

NOTE

While Nuendo or Cubase is running, the list for Dante Controller interface selection turns gray and cannot be selected.

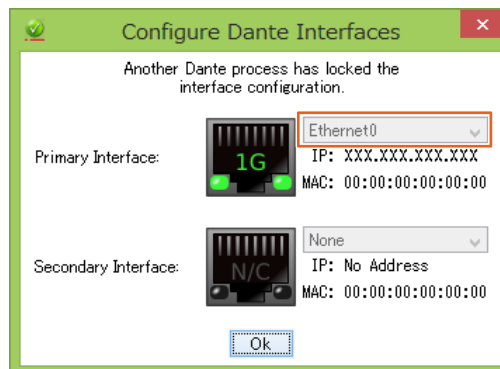


Initializing Direct Monitoring Settings (Nuage I/O)

You can now initialize the settings for direct monitoring in Nuage I/O.

Operation

Numbers in the screen shot below correspond to the instruction steps.

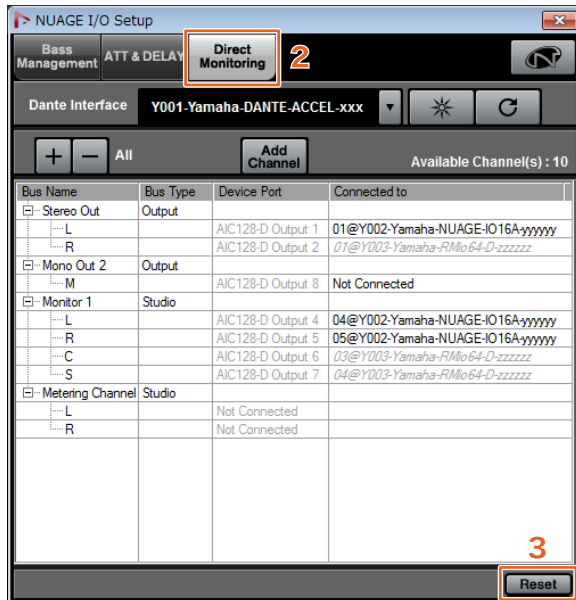

1. From the Nuendo or Cubase menu, click “Devices,” then “NUAGE I/O Setup.”
2. Click the “Direct Monitoring” tab.
3. Click “Reset.”

The direct monitoring settings are initialized, and the buses are automatically set using the following priorities.

Priority 1	Control Room bus
Priority 2	Output bus

Added functions in NUAGE V1.6

Added Support for Cubase Pro 8 (Nuage Master, Nuage Fader)	81
Updated Direct Monitoring Window in Nuage I/O Setup (Nuage I/O)	83
Added Stereo Panner Switching Function (Nuage Fader)	83
Added More Parameters to Channel Strip Section (Nuage Fader)	84
Added Support for Switching Parameters in Channel Setting Mode (Nuage Fader)	84
Added Key Function (Shortcut) for Dividing Events into Selected Ranges (Nuage Master) ...	84
Added Collective Bypass Function for Inserts (Nuage Fader)	85
Added Collective Bypass Function for Dynamics (Nuage Master)	85
Added Support for Switching between Multiple Avid Pro Tools (NUAGE Workgroup Manager)	85
Added Support for RMio64-D (NUAGE Workgroup Manager)	86
Changed Display on the Marker Jump Pop-Up Window into the List Display (Nuage Master)	87
Added a Function for Project Cursor Positioning (Nuage Master)	87
Added Enable/Disable Selection for [Jog wheel] during Project Playback (Nuage Master)	88

Added Support for Cubase Pro 8 (Nuage Master, Nuage Fader)

Cubase Pro 8 is now supported. The following new functions are also supported.

VCA Fader

You can show/hide the VCA Fader with [OTHERS] in the CHANNEL VIEW CONTROL section.

DeEsser

You can now adjust the DeEsser parameters with Nuage Fader and Nuage Master.
(The Nuage Master window is shown below.)




Plug-in Manager

If you create a collection and then select that collection, only the plug-in effects in the selected collection are shown in the list when “Insert” is selected. In the Nuage Master [Multi function display], the display of folder structures is limited to two levels. Plug-in effects that are actually located beyond the second level are all displayed in the second level.

Workspace Extension

The first four workspaces displayed in “Workspace Organizer” can be loaded from the WORKSPACE section in Nuage Fader.

For example, if there are three “Global Workspaces” and two “Project Workspaces,” the three “Global Workspaces” and then one “Project Workspace” are assigned successively to [WORKSPACE 1] to [WORKSPACE 4].

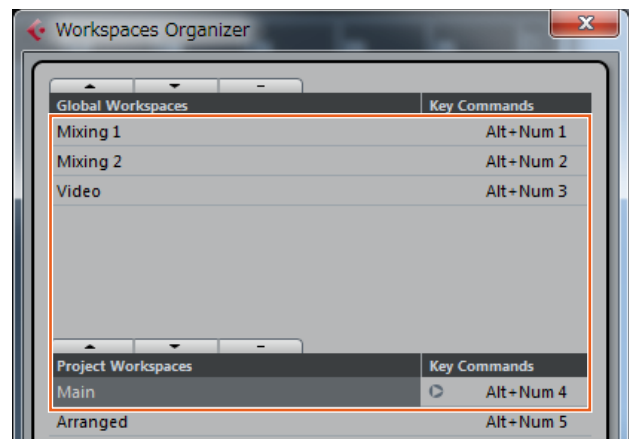

High Cut and Low Cut Filter Slopes

- You can adjust the “High Cut” and “Low Cut” slopes in the Nuage Fader channel strip ([page 84](#)).
- You can adjust the following parameters on the MAIN page of Nuage Master CHANNEL CONTROL.



1 BYP

Turns the input filter “Bypass” on (lit) and off (dim).

2 Preset

Opens the window for selecting input filter presets.

3 Filter Slope Settings


Enables you to select the “High Cut” and “Low Cut” filter slopes.

- The EQ graphs in Nuage Master and Nuage Fader now support filter slopes.

CHANNEL CONTROL – EQ Page



Channel Strip

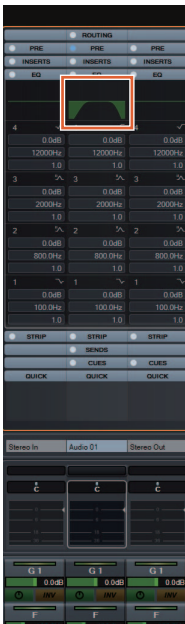


Channel Setting Mode



Recording MIDI Events to the Tracks

You can adjust the following parameters on the INSERT page of Nuage Master CHANNEL CONTROL.

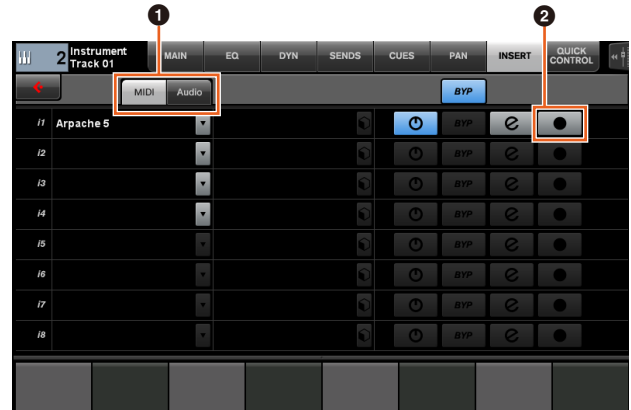

1 MIDI/Audio (Only for Instrument Tracks)

Switches the type of plug-in. To record the MIDI events, select "MIDI."

2 ● (Record Output to Track)

Selects (lit) and deselects (dim) a MIDI track or instrument track as the recording destination for a MIDI event.

Pre-Fader/Post-Fader Switching for MIDI Sends

You can adjust the following parameters on the SENDS page of Nuage Master CHANNEL CONTROL.



PRE


Switches MIDI channels between "Pre-Fader" and "Post-Fader." You can also use [Multi function button B] to switch between "Pre-Fader" and "Post-Fader."

Updated Direct Monitoring Window in Nuage I/O Setup (Nuage I/O)

The connection destinations for output buses that are the targets of direct monitoring are now displayed in the Direct Monitoring window in NUAGE I/O Setup. Available Nuage I/O ports are displayed in the “Connected to” column.

To open the NUAGE I/O Setup window, in the Nuendo menu select “Devices,” then “NUAGE I/O Setup.”

NUAGE I/O Setup – Direct Monitoring Window

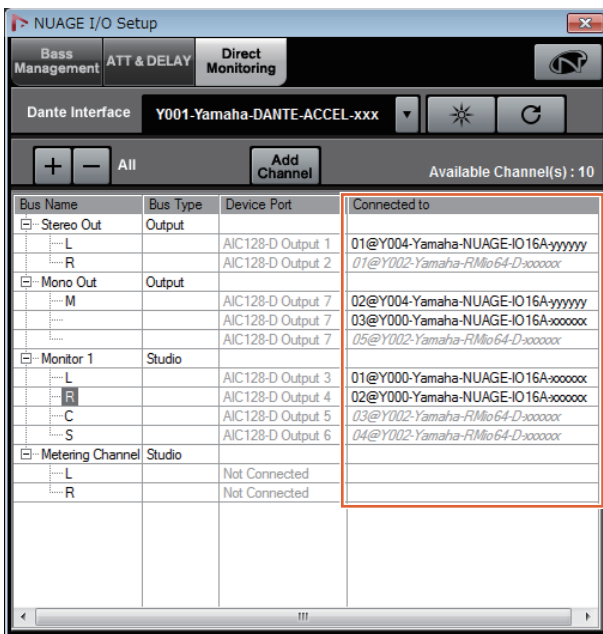

NOTE

- If a single Dante Accelerator output port is connected to multiple Nuage I/O ports, the relevant ports are listed vertically.
- Nuage I/O not included in the NUAGE Workgroup are displayed in gray italics and are not available for direct monitoring.
- An RMio64-D assigned to the same output bus as Nuage I/O will be displayed in gray italics regardless of whether direct monitoring is enabled or disabled. For more information about direct monitoring with the RMio64-D, refer to the RMio64-D Owner's Manual.
- If input from Nuage I/O and input from RMio64-D are mixed and then output for direct monitoring to the same Nuage I/O port, only the input from Nuage I/O is output.


Added Stereo Panner Switching Function (Nuage Fader)

You can now switch between the types of stereo panners in Nuage Fader.


Operation

1. Press [PAN] in the SECTION CONTROL section.
2. (In Channel Strip display only) Press [Sub Parameter 2].
The type of stereo panner is displayed in the label area.
3. Press the corresponding [Multi function knob].
A pop-up menu for selecting a stereo panner is displayed.
4. Turn the [Multi function knob] to select the type of stereo panner.
5. Press the [Multi function knob] once again to confirm the selection.


Channel Strip

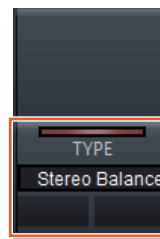

Channel Setting Mode

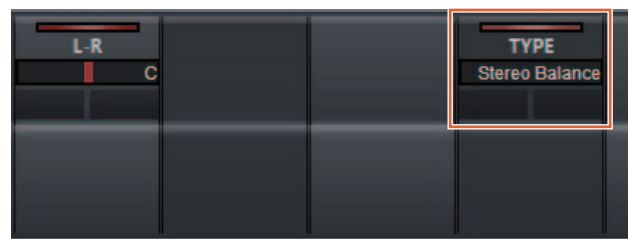

Pop-Up

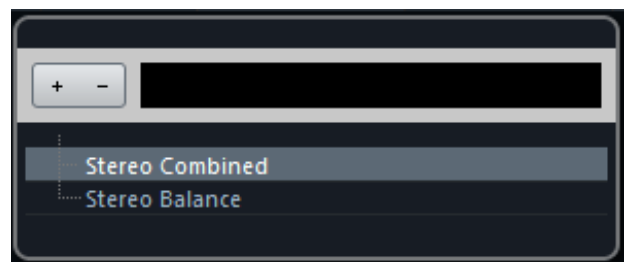


Added More Parameters to Channel Strip Section (Nuage Fader)

You can now adjust HC SLOPE, LC SLOPE, GAIN, ϕ (PHASE), HA HPF, and HA +48V in the channel strip. HA GAIN and HA GC, which were previously assigned to [Sub parameter 2], have been moved to [Sub parameter 4].

Operation


1. Press [PRE] in the SECTION CONTROL section.
2. Press one of the parameters in [Sub parameter 2] to [Sub parameter 5].
The parameters below are displayed in the label area.
3. Adjust the parameter using the corresponding [Multi function knob] or [Multi function button].

Sub parameter 2

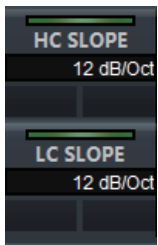


HC SLOPE, LC SLOPE

Sub parameter 3

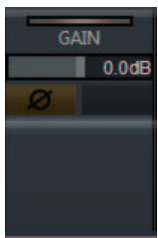

GAIN, ϕ (PHASE)

Sub parameter 4

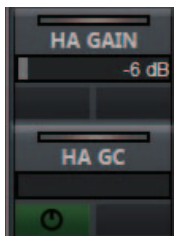

HA GAIN, HA GC
(for Rio3224-D/Rio1608-D remote control)

HA GAIN, HA TRIM
(for AD8HR remote control)

Sub parameter 5



HA HPF, HA +48V
(for HA remote control)

Added Support for Switching Parameters in Channel Setting Mode (Nuage Fader)

You can now switch sub-parameters in the Channel Setting mode to make adjustments to parameters.

NOTE

Only the following two types of "Dynamics" are currently supported:

- DeEsser (Cubase Pro 8 and later)
- Envelope Shaper

Operation

With either DeEsser or Envelope Shaper selected in "Dynamics" in the channel displayed in Channel Setting mode, do the following:

1. Press [DYN] in the SECTION CONTROL section.
2. Press [Sub parameter 2].
The parameter display in the label area is switched.
3. Adjust the parameter using the corresponding [Multi function knob] or [Multi function button].

Added Key Function (Shortcut) for Dividing Events into Selected Ranges (Nuage Master)

You can now use key function (shortcut) in Nuage Master to divide events into selected ranges.

Operation

1. In the Nuendo Project window, use the range selection tool to select the range for dividing a track.
2. Press and hold [SHIFT] in the MODIFIER section while holding down [SPLIT] in the JOG WHEEL section.

The event is divided into the selected ranges.

Added Collective Bypass Function for Inserts (Nuage Fader)

You can now turn bypass on/off for “Inserts” on the selected channels.

Operation

1. Press [INSERT] in the SECTION CONTROL section. “INSERTS” is displayed in the label area.
2. Press [Multi function button A] corresponding to the window to switch bypass on/off for “Inserts.”

Channel Strip



Channel Setting Mode



NOTE

If you press [Sub parameter 1] through [Sub parameter 8] in Channel Setting mode, the window for the “Inserts” assigned to the relevant slot is displayed. Press the same button once again to close the window.

This function is disabled if two channels are displayed in Channel Setting mode.

Added Collective Bypass Function for Dynamics (Nuage Master)

You can now turn bypass on/off for “Dynamics” on the selected channels.

Operation

1. Select the track for turning dynamics on/off.
2. Press [DYNAMICS] in the MULTI FUNCTION DISPLAY section. The CHANNEL CONTROL – DYN page is displayed in the [Multi function display].
3. Touch “BYP” on the screen to turn bypass on/off for “Dynamics.”

CHANNEL CONTROL – DYN Page




Added Support for Switching between Multiple Avid Pro Tools (NUAGE Workgroup Manager)

You can now register two Avid Pro Tools in a Workgroup. (Previously, it was possible to register only one.)

NOTE

For more information about Avid Pro Tools settings, refer to the operation manual for Nuage Master or Nuage Fader.

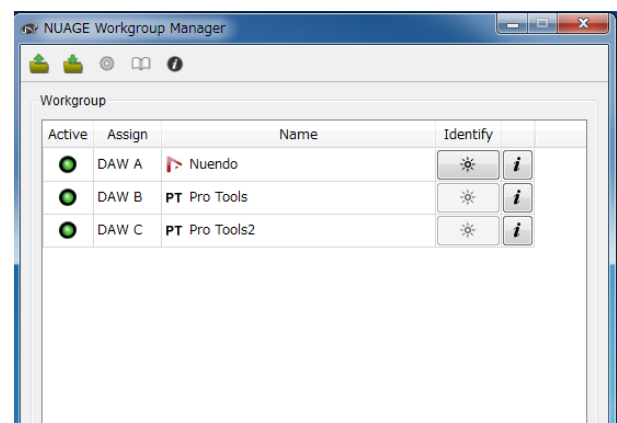


Added Support for RMio64-D (NUAGE Workgroup Manager)

You can now control the RMio64-D Dante/MADI conversion audio interface remotely from NUAGE Workgroup Manager.

NOTE

- For remote control operation, the target RMio64-D must be active in NUAGE Workgroup.
- Modifications to parameters are applied to the RMio64-D unit as soon as they are changed.
- A total of eight Nuage I/O and RMio64-D units can be registered in a Workgroup.

RMio64-D – Property Window

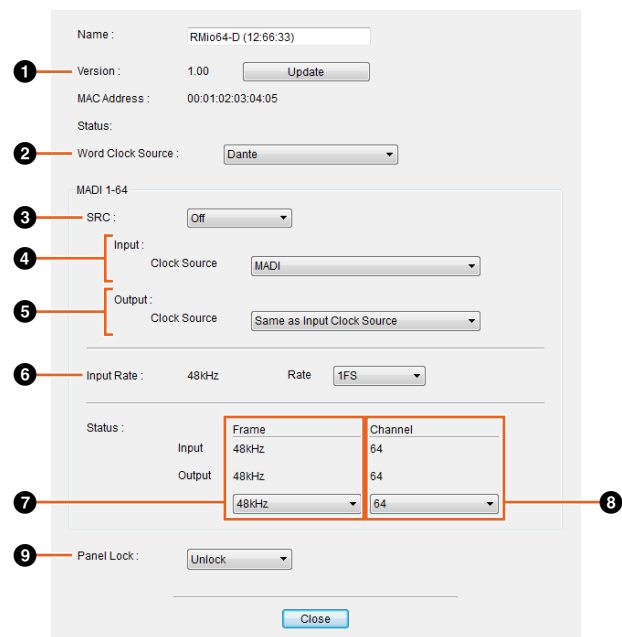

The parameters that can be controlled are as follows:

1 Version

Displays the firmware version of the RMio64-D unit. You can update the firmware by clicking “Update.”

2 Word Clock Source

Enables you to select the word clock source for the RMio64-D (from Dante/WCLK IN/MADI).

3 SRC

Enables you to turn MADI SRC (Sampling Rate Converter) on/off.

4 Input Clock Source

Enables you to select the word clock source for SRC input (from MADI/WCLK IN for SRC).

5 Output Clock Source

Enables you to select the MADI output signal when SRC is on as the word clock source.

Same as Input Clock Source	Syncs the MADI output signal with the MADI input signal.
----------------------------	--

Same as Word Clock Source	Syncs the MADI output signal with the RMio64-D clock.
---------------------------	---

6 Input Rate

Enables you to select from 1Fs (1x)/2Fs (2x)/4Fs (4x) according to the MADI input frequency. For example, if the MADI input signal is 192 kHz (4x 48 kHz), select “4Fs.”

7 MADI Output Frame

Enables you to select the frame frequency for the MADI output signal. It is possible for the selected value to differ from the actual frequency. For example, when the setting is “96kHz” and the actual frequency is “48kHz,” for example, “96kHz >> 48kHz” is displayed.

Same as Input	Outputs the same frame frequency as the MADI input signal.
---------------	--

48kHz	Outputs at 44.1 kHz or 48 kHz.
-------	--------------------------------

96kHz	Outputs at 88.2 kHz or 96 kHz.
-------	--------------------------------

8 MADI Output Channel

Enables you to select the number of channels for the MADI output signal. It is possible for the selected value to differ from the actual number of channels. When the setting is “64” and the actual number of channels is “56,” for example, “64 >> 56” is displayed.

Same as Input	Outputs the same number of channels as the MADI input signal.
---------------	---

64	Outputs on 64 channels.
----	-------------------------

56	Outputs on 56 channels.
----	-------------------------

9 Panel Lock

Unlocks/locks panel operation for the RMio64-D unit.

MADI Output Signal when SRC is On

Input Clock Source	Output Clock Source	MADI Output Signal
MADI	Same as Input Clock Source	Synced with MADI Input Signal
MADI	Same as Word Clock Source	Synced with RMio64-D clock
WCLK IN for SRC	Same as Input Clock Source	Synced with word clock input from WCLK IN for SRC
WCLK IN for SRC	Same as Word Clock Source	Synced with RMio64-D clock

Changed Display on the Marker Jump Pop-Up Window into the List Display (Nuage Master)


The pop-up display for the Marker Jump function and Cycle Marker jump function has been changed to a list display. Nearby markers are displayed in relation to the entered "Marker ID."

Operation


1. Press [MARKER] in the NUMERIC PAD section.
2. Press one of the following keys: [0] through [9], [BACK SPACE], [CLEAR], [PREV -], [NEXT +], [CYCLE .], or [ENTER].

The following pop-up is displayed in the [Multi function display].

Marker Pop-Up

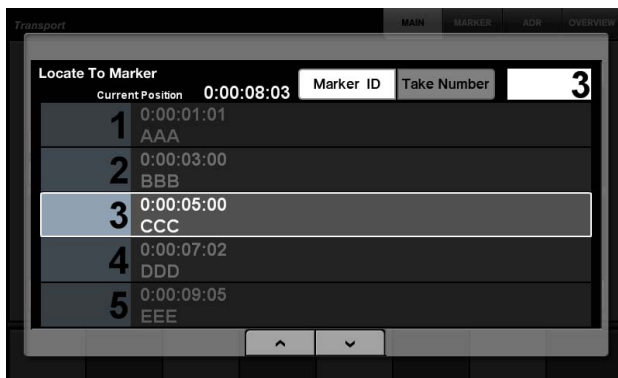

Cycle Marker Pop-Up

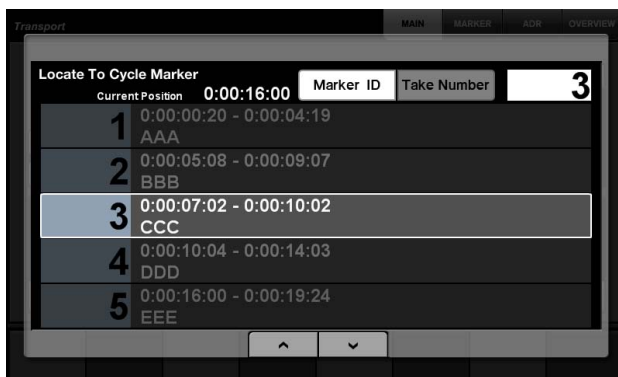

NOTE

- You can use at the bottom of the window to scroll through the window.
- Since Cubase does not have an ADR function, Marker ID/Take Number are not displayed in the window.

Added a Function for Project Cursor Positioning (Nuage Master)

You can now enter values in units of hours, minutes, and seconds to position the "Project Cursor" on the TRANSPORT page.

Settings

Switch the input method in "Numeric Pad Input" on SETUP Page – PAGE 3.

SETUP Page – PAGE 3



Left Enter values in units of hours, minutes, and seconds.

Right Conventional method (text input)

NOTE

If you change this setting, the input method in the Locate function is also changed.

Operation

1. Press [Display access] in the TRANSPORT section.
2. Press [PARAM] in the NUMERIC PAD section.
3. Touch "Time Display" on the screen.
4. Use the keys in the NUMERIC PAD section to enter the position of the Project cursor.

TRANSPORT – MAIN Page



Added Enable/Disable Selection for [Jog wheel] during Project Playback (Nuage Master)

You can now disable [Jog wheel] operation during Project playback. Doing so will prevent unintended operation of the Project cursor during playback.

Settings

Switch the setting by using the “JOG Operation during Playback” control on SETUP Page – PAGE 3.

SETUP Page – PAGE 3



-
- | | |
|-----|---|
| On | Enables [Jog wheel] operation during Project playback. |
| Off | Disables [Jog wheel] operation during Project playback. |
-


Added functions in NUAGE V1.5

Added support for remote operation of R series devices (Dante supported I/O rack) (Nuage Fader)	90
Added quick control setting screen (Nuage Master)	90
Added support for VST instruments control (Nuage Master)	91
Added screen scrolling by dragging (Nuage Master)	91
Added support for track visibility configuration function (Nuage Master)	92
Added super fine mode (Nuage Master, Nuage Fader)	92
Added support for send panning (Nuage Master)	92
Added support for new Nuendo 6.5 plug-in (Nuage Master, Nuage Fader)	93
Added support for additional Nuendo 6.5 ADR functions (Nuage Master)	93
Added direct monitoring settings (Nuage I/O)	93
Added selection function for Ethernet port to use with Avid Pro Tools (NUAGE PT Bridge) ...	94
Added other various functions (Nuage Master)	95

Added support for remote operation of R series devices (Dante supported I/O rack) (Nuage Fader)

The HA gain of R series devices (Rio3224-D, Ri8-D, etc.) can now be controlled.

- Press [PRE] in the SECTION CONTROL section, and then press [Sub parameter 2] to use a [Multi function knob] to control the “HA GAIN” and “HA GC” on the input channel where the R series device is connected.
- Press [e] (edit) on the input channel where the R series device is connected, and then press [PRE] in the SECTION CONTROL section to use a [Multi function knob] to control the “HA GAIN”, “HA GC”, “HA HPF”, and “HA +48V” on the channel where [e] was pressed.

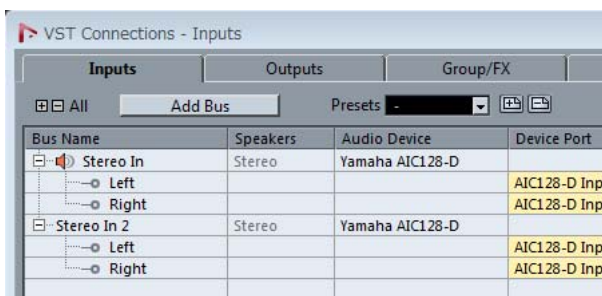

If an input bus with multiple channels (such as stereo or surround channels) has been assigned, the parameters for the bus channel appearing first in Nuendo’s “VST Connections” (“Left” for a stereo channel) are shown. The values that have been set with Nuage Fader are applied to all channels on that bus. (The settings for “Left” (channel) are also applied to “Right” (channel), even though that channel does not appear on the screen.) If the values for all channels on a bus are not the same, an asterisk (*) is added after the parameter. (“HA GAIN*”, for example)

Operation	Function
“HA GAIN”	Adjusts the gain.
“HA GC”	Turns the gain compensation on and off.
“HA HPF”	Turns the high pass filter on and off. You can also adjust the filter frequency (20 – 600 Hz).
“HA +48V”	Turns +48 V phantom power on and off. To turn on phantom power, press and hold down [Multi function button A].


R series settings

In the Nuendo menu, select “Devices” → “NUAGE HA Remote Setup” to open the settings screen and configure the Dante Accelerator you will use.

Added quick control setting screen (Nuage Master)

The parameters for “Quick Controls” assigned to a channel can now be edited on the [Multi Function Display].

CHANNEL CONTROL – QUICK CONTROL Page

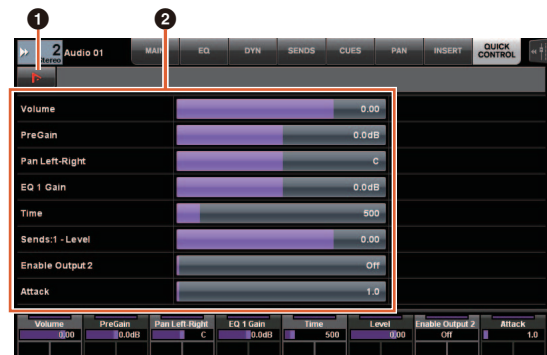

1 (Nuendo)

Opens the Nuendo “Channel Settings” screen. Click again to close the screen.

2 Parameters

Shows the parameters for “Quick Controls” assigned to the selected channel. The values for each parameter can be changed by dragging on the screen or using the corresponding [Multi function knob].

Added support for VST instruments control (Nuage Master)

You can control VST instruments on instrument tracks on the CHANNEL CONTROL page.

CHANNEL CONTROL – MAIN Page



1 Instrument

Shows the instrument selection screen.


2 Ch (Channel)

Shows the MIDI channel selection screen.

3 e (Edit)

Shows the INST page (see below).

CHANNEL CONTROL – INST Page

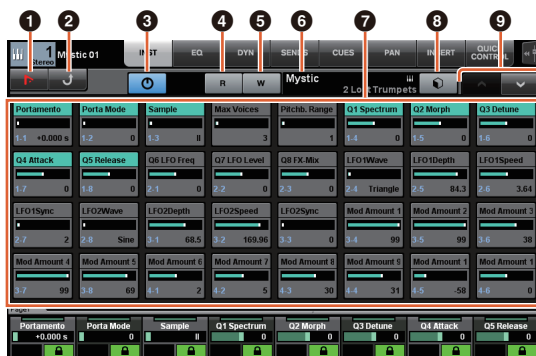

1 (Nuendo)

Opens the “VST Instruments” screen. Click again to close the screen.

2 Return

Returns to the MAIN page.

3 On/Off

Turns the VST instrument on (lit) and off (dark).

4 R (Read)

Turns “Read Automation” on (lit) and off (dark).

5 W (Write)

Turns “Write Automation” on (lit) and off (dark).

6 VST instrument name/library name

Shows the selected instrument and library.

7 Parameters

Touch a parameter to control it with a [Multi function knob]. Press [Multi function button B] to lock the value for the parameter. Press the button once again to unlock the value.

8 Library

Shows the library selection screen.

9 Up/Down

Scrolls through the parameters.

Added screen scrolling by dragging (Nuage Master)

If a list does not fit on the [Multi Function Display], you can now drag to scroll the screen.

When a screen that can be scrolled is displayed, press [CTRL] in the MODIFIER section and an arrow will appear on the screen.


Drag in the direction of the arrow to scroll the screen.



Added support for track visibility configuration function (Nuage Master)

You can now use the “track visibility control” function of Nuendo 6.5. This can greatly improve work efficiency on large-scale projects.

TRACK LIST Page – Track Visibility View

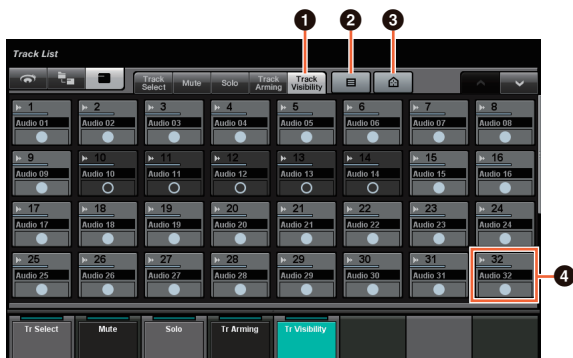

1 Track Visibility

Switches to the Track Visibility view.

2 Filter Track Types

Use filters to select only the track types you want to display.

3 Track Visibility Agents

Shows the command list for the track visibility configuration function.

4 Track

Shows (light color) or hides (dark color) tracks. Hidden tracks cannot be operated in the views on the TRACK LIST page.

Added super fine mode (Nuage Master, Nuage Fader)

Super fine mode allows finer adjustments of the parameters on the CHANNEL STRIP.

If you press [SHIFT] in the MODIFIER SECTION while pressing a [Multi function knob] (fine mode), super fine mode is enabled as long as [SHIFT] is pressed.

In super fine mode, you can make finer adjustments (using a [Multi function knob]) than when in fine mode. When [SHIFT] is released, you return to fine mode.

Added support for send panning (Nuage Master)

Channel “Sends” can now be panned.

CHANNEL CONTROL – SENDS Page




1 LP (Link Panners)

Turns “Link Panners” on (lit) and off (dark).

2 SENDS PAN

Shows the SENDS PAN page (see below) for the corresponding slot.

CHANNEL CONTROL – SENDS PAN Page

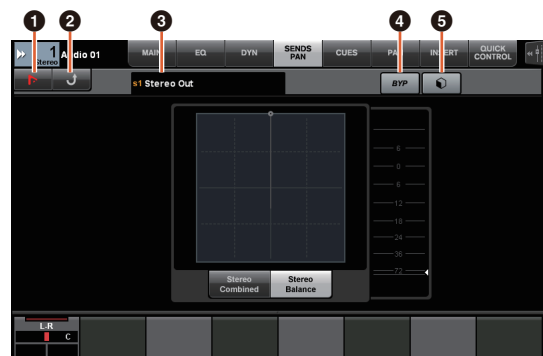

1 (Nuendo)

Opens the Nuendo “Channel Settings” screen. Click again to close the screen.

2 Return

Returns to the SENDS page.

3 Output destination

Shows the slot number and output destination.

4 BYP (Bypass)

Turns the “Bypass” on (lit) and off (dark).

5 Library

Shows the library selection screen.

Added support for new Nuendo 6.5 plug-in (Nuage Master, Nuage Fader)

You can now select [DYN] in the SECTION CONTROL section to control the parameters of the new Nuendo 6.5 plug-in (Magneto II).

You can also now control the Noise Gate parameters. (The screen shown below is from Nuage Master.)



Added support for additional Nuendo 6.5 ADR functions (Nuage Master)

Support has been added for the improved ADR functions in Nuendo 6.5.

TRANSPORT – ADR Sub Page



1 Free Run

Turns Free Run mode on and off.

For ADR on the User Assignable tab, U8 is fixed to Free Run mode.

In addition, the following functions have been added to the initial settings for the UserAssign button.

2 U3: Mute Guide CR (Control Room Guide Track On/Off)

3 U7: ADR Status (ADR Status Indicator On/Off)

TRANSPORT Section

In ADR mode, the functions of the buttons in the TRANSPORT section change.

[PREROLL]

Turns Pre Roll on and off in Free Run mode.

This button does not function in any mode other than Free Run.

[POSTROLL]

Turns Free Run mode on and off.

Added direct monitoring settings (Nuage I/O)


You can now select an output for direct monitoring in NUAGE I/O Setup.

To open the NUAGE I/O Setup screen, in the Nuendo menu select “Devices” → “NUAGE I/O Setup”.

NOTE

- A maximum of 16 channels can be selected for direct monitoring. You cannot select a bus that has more than 16 channels already assigned.
- Only one monitor bus for the Control Room in Nuendo can be selected for direct monitoring.

NUAGE I/O Setup – Direct Monitoring Screen

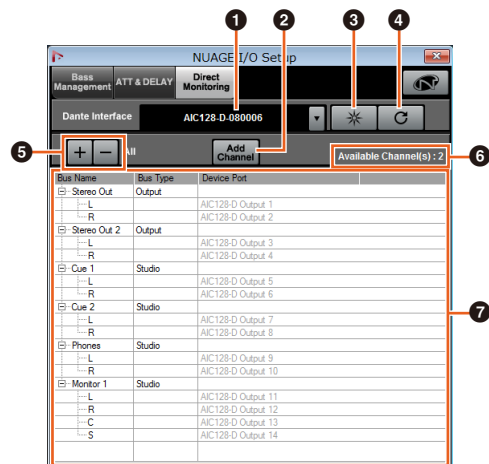

1 Dante Interface

Specifies the Dante Accelerator used by the DAW.

2 Add Channel

Adds an output bus for direct monitoring.

③ Identify

Searches for the Dante Accelerator specified with “Dante Interface”. When “Identify” is clicked, all LEDs for the specified Dante Accelerator flash for a few seconds simultaneously, and then stops automatically.

④ Refresh

Refreshes the direct monitoring channel list.

⑤ +/- (Show/Hide Channel)

Shows (+) or hides (-) the channels assigned to the bus.

⑥ Number of channels available for direct monitoring

Shows the number of channels available for direct monitoring.

⑦ Direct monitoring channel list

Shows the “Bus Name”, “Bus Type”, and “Device Port” of buses selected for direct monitoring.

“Bus Type” shows if the channel selected for direct monitoring is assigned to Output or Studio (Control Room). You can remove a bus by selecting it under “Bus Name”, right clicking, and then selecting [Delete] from the context menu.

NOTE

See the following website for more information and cautions to observe when using direct monitoring.

<http://www.yamahaproaudio.com/>

Added selection function for Ethernet port to use with Avid Pro Tools (NUAGE PT Bridge)


To use the Nuage controller as a control surface for Avid Pro Tools, you must first configure NUAGE PT Bridge.

In previous versions, the Ethernet port connection function for NUAGE PT Bridge was always selected automatically. In some cases, this resulted in wireless LAN being selected.

In this version, manual selection has been added so that it is easier to select the Ethernet port on the computer.

To select the Ethernet port, on the computer select [System Preferences] → [NUAGE PT Bridge].

Network Screen

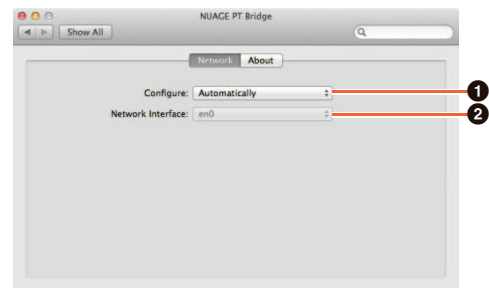

① Configure


Set “Network Interface” to either Automatically or Manually.

② Network Interface

Select the port for connecting NUAGE series devices. This option becomes available when “Configure” is set to “Manually”.

About Screen

Shows the information for NUAGE PT Bridge.

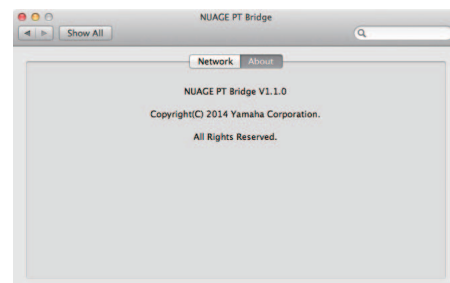

Added other various functions (Nuage Master)

SETUP Page

SETUP page is divided into three pages since the number of configurable settings has been increased.

PAGE 1



PAGE 2



For the buttons used to adjust the pressing time for Smart Switch Delay, the [TALK BACK] button and other buttons can now be configured separately.

In addition, you can now select “Momentary” for configurable parameters. When set to Momentary, the parameter is on as long as the button is pressed, regardless of the pressing time.

1 Talk Back

Switches the behavior of [TALK BACK] in the COMMUNICATION section.

2 Others

Switches the behavior of [SHUTTLE], [SCROLL], [SELECT], [ZOOM], [MOVE], or [VOLUME].

PAGE 3



3 MUTE Button Behavior

Switches the behavior of [MUTE] on the channel strip.

When set to Continuous, pressing and holding [MUTE] on one channel while pressing [MUTE] on another channel will simultaneously turn on and off all “mute” functions for every channel between those two channels.

When set to Toggle, “mute” is turned on and off only for the channel on which [MUTE] is pressed.

■ Notes regarding the information in this manual

- The illustrations and images in this manual are provided to explain the operations and functions of this device. Details might vary depending on the actual specifications of your device.
- The company names and product names used in this manual are trademarks and/or registered trademarks of each company.
- In the interest of product improvement, the specifications and design of this unit are subject to change without notice.

Added functions in NUAGE V1.2

Added support for remote operation of AD8HR remote preamp from Nuage Master (Nuage Master)	97
Improved the EQ Band Curve display (Nuage Master)	97
Added support for marker colors in Nuendo (Nuage Master)	97
Improved parameter indications on the Multi Function Display (Nuage Master)	97
Improved pan control operations from the channel strip (Nuage Fader)	98

Added support for remote operation of AD8HR remote preamp from Nuage Master (Nuage Master)

The AD8HR can be controlled also from the Nuage Master. For details on connecting to the AD8HR and making necessary settings, refer to the “NUAGE V1.1 Supplementary Manual.”

CHANNEL CONTROL – MAIN Page



Operation	Function
HA GAIN	Adjusts the gain.
HA TRIM	Adjusts the gain trim. To adjust the gain trim, press [Multi function button A] to unlock the parameter.
HA HPF	Turns the High Pass Filter on and off. You can also adjust the cut-off frequency [20 – 600 Hz].
HA +48V	Turns +48 V phantom power on and off. To turn on phantom power, hold down the [Multi function button A] for longer than two seconds.

Improved the EQ Band Curve display (Nuage Master)

The EQ band curve and the EQ band parameters currently being operated are displayed on the EQ Graph in the EQ page.


CHANNEL CONTROL – EQ Page



Added support for marker colors in Nuendo (Nuage Master)

Marker colors set on the Nuendo are reflected in the MARKER Page.

TRANSPORT – MARKER Page

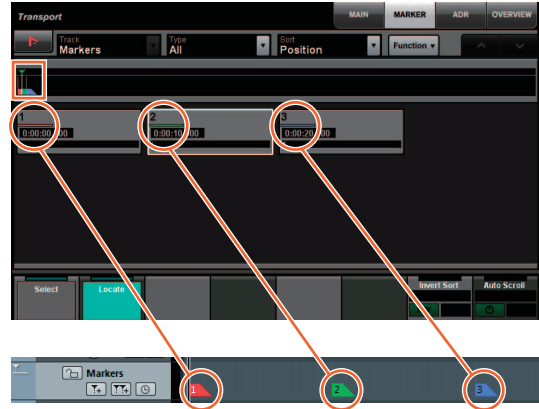

Nuendo — Marker track

Improved parameter indications on the Multi Function Display (Nuage Master)


The border of the parameter currently being operated by the [Multi function knob] is highlighted.




Improved pan control operations from the channel strip (Nuage Fader)

The pan parameters which were not able to be conventionally operated from the channel strips can be controlled by changing the sub parameters.


SECTION CONTROL Section

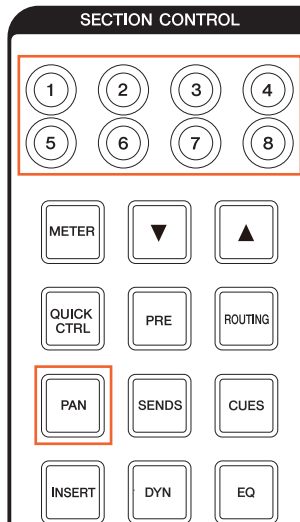

The Surround Panner

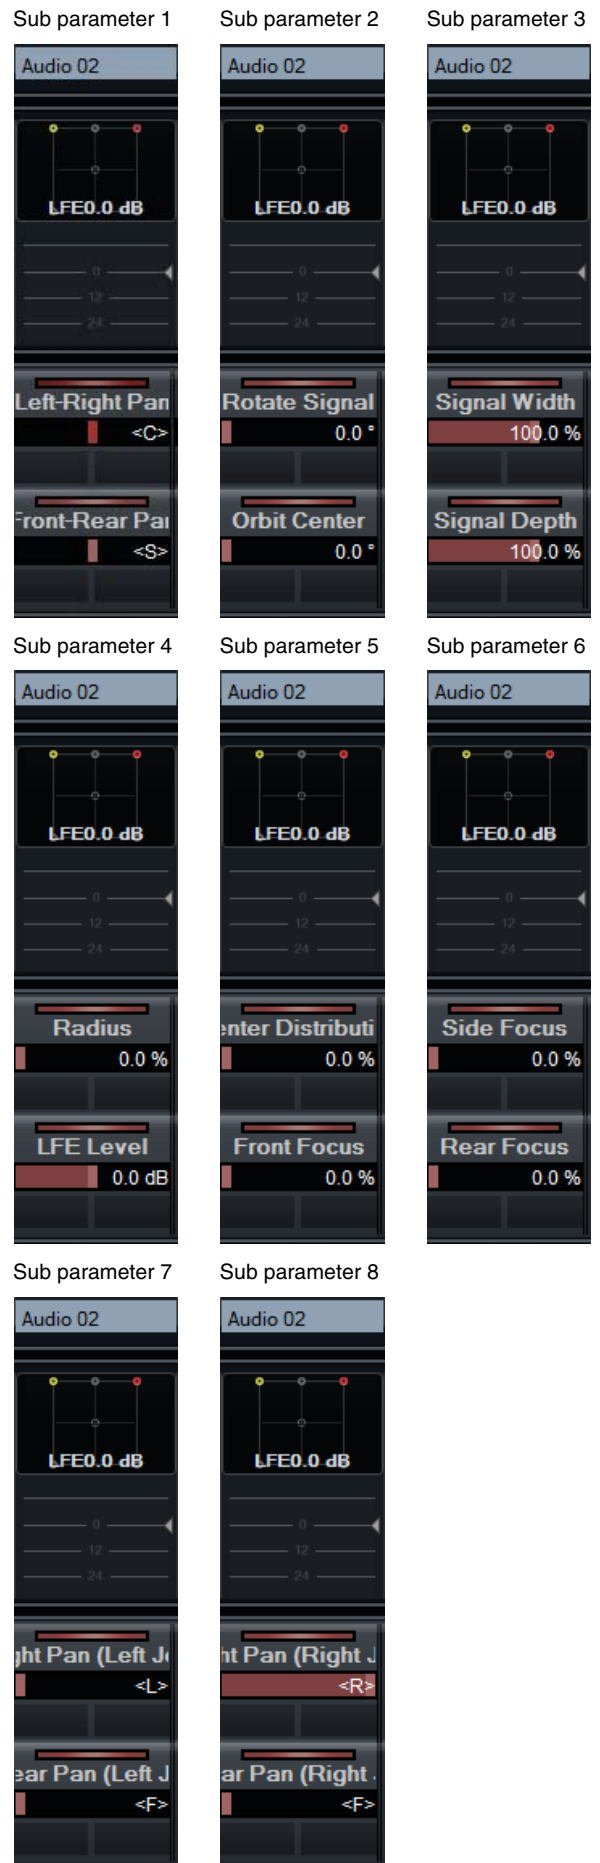

The Stereo Combined Panner

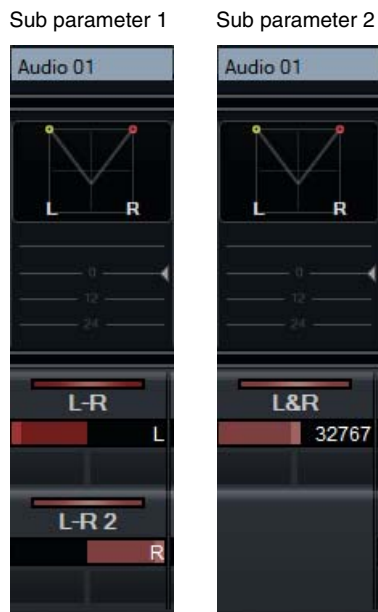

Added functions in NUAGE V1.1


Added the ADR mode (Nuage Master)	100
Added the functions for configuring the buttons in the USER ASSIGNABLE section (Nuage Master, Nuage Fader)	101
Added support for remote operation of the AD8HR remote preamp (Nuage Fader)	102
Added the display in the [Channel name display] (Nuage Fader)	104
Added display channels on the LCD (Nuage Fader)	104
Added some track select operations (Nuage Master)	105
Added some Zoom In and Zoom Out operations (Nuage Master)	106
Added some editing operations (Nuage Master)	107
Added other various functions (Nuage Master)	107

Added the ADR mode (Nuage Master)

Added the ADR mode corresponding to the ADR function of Nuendo 6.

TRANSPORT Section

Press [Display access] repeatedly to display an “ADR page” (shown on the right), and then touch “Transport Switch” in the [Multi function Display] to select the ADR mode. The [Display access] indication flashes while the ADR mode is active. To cancel the ADR mode, touch “Transport Switch” again.

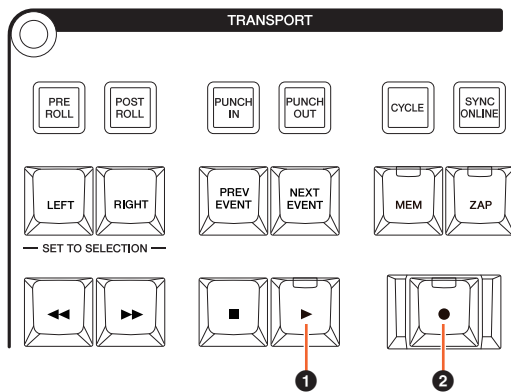

1 [▶] (Rehearse)

Plays back the take, according to the “ADR Setup” options in Nuendo.

If you simultaneously hold down [■] and press [▶], the take is played back as “Review.”

The button indicator flashes continuously during “Review.”

2 [●] (Record)

Plays back the take, according to the “ADR Setup” options in Nuendo, and the overdubbing performance by the artist is recorded.

During “Rehearse,” “Record,” and “Review” playback, the [Jog wheel] cannot be used.

ADR Page



1 Nuendo

Opens the Marker Window in the Nuendo window.

2 User Assign

Turns the function assignments for ADR on (lit) and off.

Turns on this icon, and functions for ADR are assigned to the [U1] – [U12] buttons in the USER ASSIGNABLE section.

Turns off this icon, and the functions return to their previous assignments.

The function assignments can be changed in the “User Assignable” window of “NUAGE MASTER Setup.”

3 U1 – U12

Displays the function assignments for ADR. By touching these buttons, you can execute the function assignments.

4 Time Display [PARAM]

Displays and sets the Project Cursor position.

5 Marker Information

Displays the Marker information.


6 Pre-Roll / Post-Roll

Displays “Pre-roll” and “Post-roll” information.

7 CUE 1 – CUE 4


Selects the “CUE” that you want to control with the [Multi function knob].

NUMERIC PAD Section

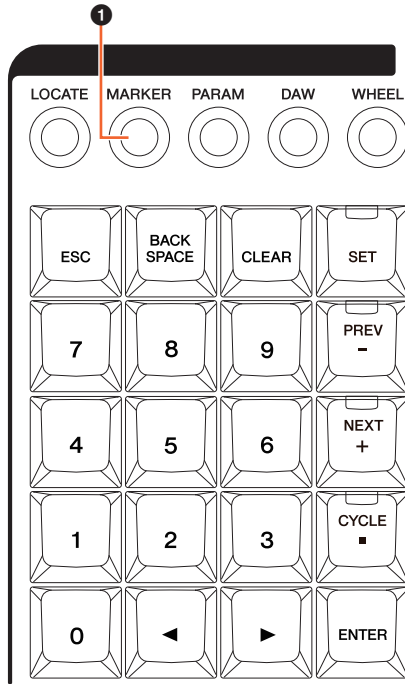

1 [MARKER]


Selects the Marker designation. Pressing the button toggles between “MARKER ID” and “Take Number” (for ADR) while the pop-up window for the Marker Jump function or Cycle Marker Jump function is shown on the [Multi function display]. This button flashes before inputting “Take Number.”

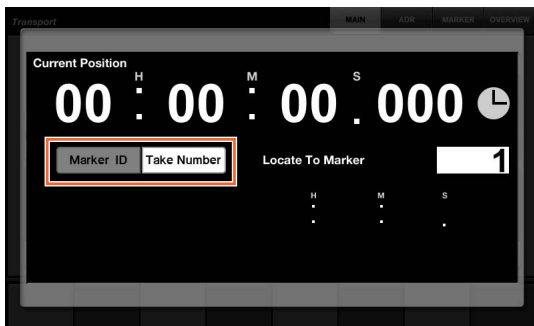

Added the functions for configuring the buttons in the USER ASSIGNABLE section (Nuage Master, Nuage Fader)

The function assignments can be saved, and the saved assignments can be recalled. The functions can be assigned to each Nuage Fader.

USER ASSIGNABLE Page (Nuage Master)

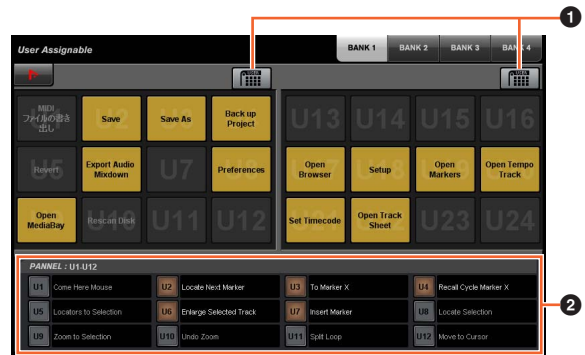

1 User Assign

Turns the assigned functions on (lit) and off.

If the left icon is turned on, functions assigned to U1 – U12 on the display are assigned to the [U1] – [U12] buttons. If the right icon is turned on, functions assigned to U13 – U24 on the display are assigned to the [U1] – [U12] buttons.


If this icon is turned off, the functions return to their previous assignments.

2 PANEL: U1 – U12

Displays the function assignments of the [U1] – [U12] buttons in the USER ASSIGNABLE section.

NUAGE MASTER Setup

To open this window, click the Nuendo menu “Devices” → “NUAGE MASTER Setup.”

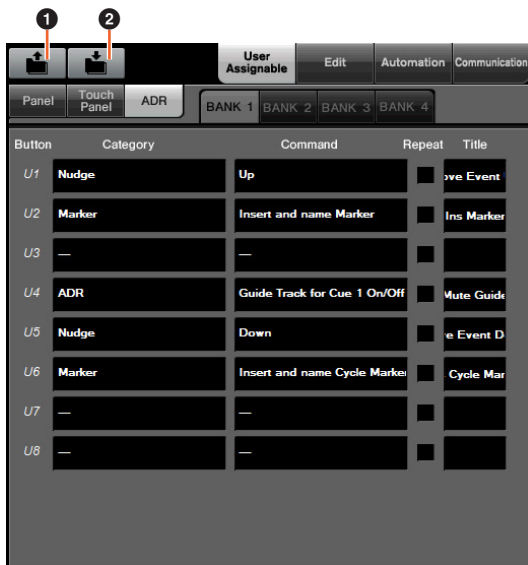

1 Open


Recalls the function assignments of Nuage Master.

2 Save

Saves the function assignments of Nuage Master. The function assignment settings are saved as XML format (.xml).

NUAGE FADER Setup

To open this window, click the Nuendo menu “Devices” → “NUAGE FADER Setup.”

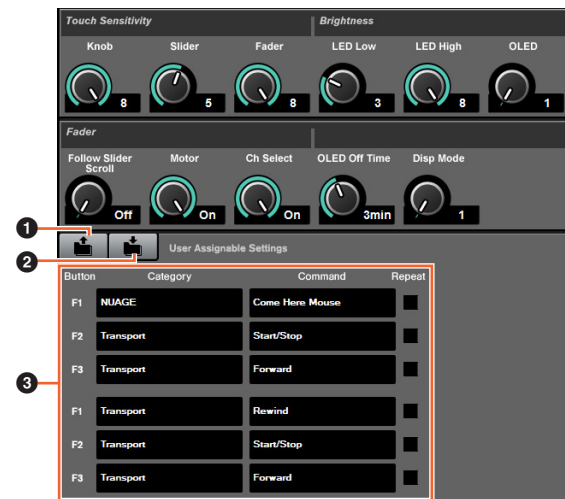

1 Open

Recalls the function assignments of Nuage Fader.

2 Save

Saves the function assignments of Nuage Fader. The function assignment settings are saved as XML format (.xml).

3 User Assignable Settings


Assign the functions for each Nuage Fader.

Added support for remote operation of the AD8HR remote preamp (Nuage Fader)

Overview

The gains of the AD8HR connected to the Nuage I/O can be controlled.

- Press and release [PRE] on the SECTION CONTROL section, and then press [Sub parameter 2]. This lets you control the “HA GAIN” and “HA TRIM” of the input channels connected to the AD8HR with the [Multi function knob].
- Press and release the [e] (edit) button on the CHANNEL STRIP section of the input channel connected to the AD8HR, and then press [PRE] in the SECTION CONTROL section. This lets you control the “HA GAIN,” “HA TRIM,” “HA HPF,” and “HA +48V” of the channels connected to the AD8HR with the [Multi function knob].

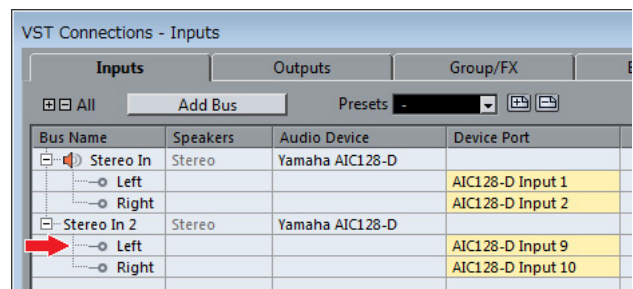

When you assign an input bus which contains multiple channels, such as stereo or surround, to an input channel to control the AD8HR parameters, the parameters of the channel listed on the top of the bus configuration (e.g., “Left” in the case of stereo) displayed in the “VST Connections” window of the Nuendo are displayed.

When the parameters of all channels contained in the same bus are not set to the same value, “*” is added to the end of parameter name (e.g., “HA GAIN*”).


Operation	Function
HA GAIN	Adjusts the gain.
HA TRIM	Adjusts the gain trim. To adjust the gain trim, press [Multi function button A] to unlock the parameter.
HA HPF	Turns the High Pass Filter on and off. You can also adjust the cut-off frequency [20 – 600 Hz].

Operation	Function
HA +48V	Turns +48 V phantom power on and off. To turn on phantom power, hold down the [Multi function button A] for longer than two seconds.

To use this function, make sure to perform the following:

- Hardware connections
- Setting up the serial port
- Setting up the Nuage I/O

Hardware connections

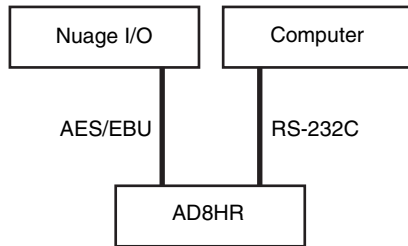

Connect the AD8HR and Nuage I/O by AES/EBU, and connect the AD8HR and a computer by the RS-232C (cross cable).

Use a USB to Serial converter if there is no serial port in your computer.

Setting up the serial port


Make the following serial port settings on your computer:

Parameter	Value
Bits per second:	38400
Data bits:	8
Parity:	None
Stop bits:	1
Flow control:	None

Instructions for making serial port settings are depend on your particular computer (in Windows 7, for example, right-click an applicable serial port on the “Device Manager” to open the properties). Refer to the manual of your computer for details.

Setting up the Nuage I/O

Open the “Nuage I/O Properties” from the NUAGE Workgroup Manager, and then set the “ID” number of the AD8HR.

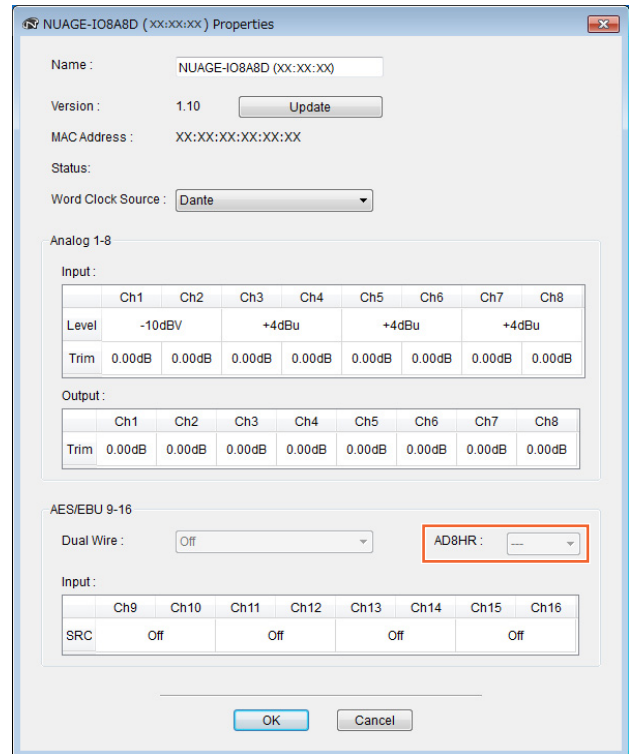

The AD8HR can also be set up in NUAGE HA Remote Setup. To open NUAGE HA Remote Setup, click the Nuendo menu “Devices” → “NUAGE HA Remote Setup.”


Added the display in the [Channel name display] (Nuage Fader)

The whole name of the channel strip can be scrolled and displayed, and the display format can be changed.

When there is a long undisplayed portion of a channel strip name, the whole name of the selected channel strip can be scrolled and displayed only once if the channel strip is selected or the channel is scrolled using the [Touch slider bar].

NUAGE FADER Setup

To open this window, click the Nuendo menu “Devices” → “NUAGE FADER Setup.”

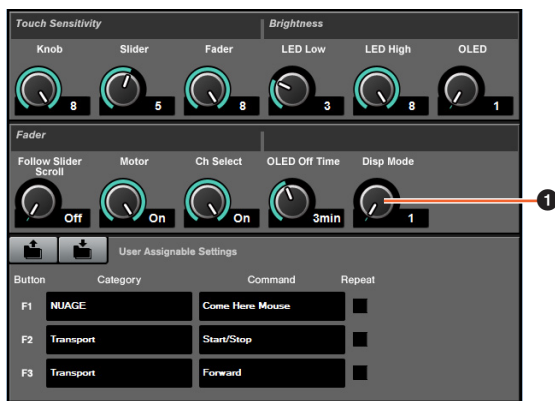

1 Disp Mode

Selects the display format of a [Channel name display].




“Disp Mode” can also be set up in the “SETUP page” of Nuage Master ([page 107](#)).

Added display channels on the LCD (Nuage Fader)

The previous view can be called up after using the Agent function ([SEL CH], etc.), and you can scroll through and display the selected channels when the desired channel is not shown on the exterior of LCD. Also, you can select whether to display a channel from the left of the end of the console(s), or to display from the right of the end of the console(s).

CHANNEL VIEW CONTROL Section

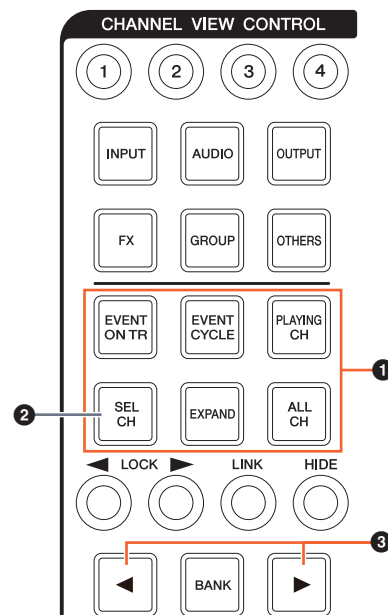

1 [EVENT ON TR] / [EVENT CYCLE] / [PLAYING CH] / [SEL CH] / [EXPAND] / [ALL CH]

If the same button is pressed once again while displaying the channel corresponding to each button, the display will return to the previous view.

However, while the Project Cursor is moving, even if you press [EVENT CYCLE] or [PLAYING CH], the display does not return, but an agent function is performed again instead.

If you press one of these buttons to return while holding down [ALT], the leftmost channel is displayed there even after returning. This function is convenient when you are looking for a specific channel using an agent function.

2 [SEL CH]


If you press [SEL CH] while holding down [ALT], the selected channel is displayed when the channel is not displayed on the exterior of LCD.

③ [◀] / [▶] (left/right)

If you use the following functions when the channels displayed are fewer than the number of faders of the Nuage Fader (e.g., when you are using the Agent function, etc.), you can operate adjacent channels.

Operation	Function
Simultaneously holding down [SHIFT] and pressing [◀]	Displays channels from the left end of the console(s).
Simultaneously holding down [SHIFT] and pressing [▶]	Displays channels from the right end of the console(s).
Simultaneously holding down [ALT] and pressing [▶]	Selects the Free Scroll mode. In the Free Scroll mode, the channel which was fixed to the left end or the right end can also be moved by the [Touch slider bar].
Simultaneously holding down [ALT] and pressing [◀]	Cancels the Free Scroll mode.

MODIFIER Section




The size of the “Mixer” window on the LCD can be changed by simultaneously holding down [SHIFT], [CTRL], and [ALT], and using the [Multi function knob].

Operation	Function
SCRN LEFT	Adjusts the left position of a “Mixer” window.
METER HEIGHT	Adjusts the height of a meter.
SCRN RIGHT	Adjusts the right position of a “Mixer” window.

Added some track select operations (Nuage Master)

Tracks can be selected by the NUMERIC PAD, and multiple tracks can be selected.

NUMERIC PAD Section

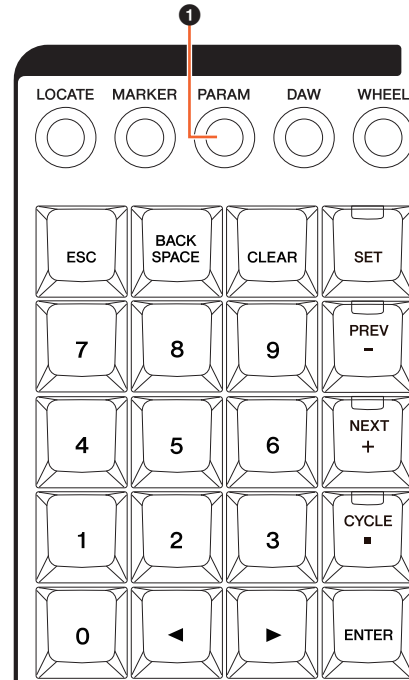


① [PARAM]

Added Track Select to the function switched in Parameter mode.

Select Track function

In the Select Track function, you can select tracks by inputting the track number. To input the track number, press any one of the buttons in NUMERIC PAD section (other than [ESC]) to call up a pop-up window on the [Multi function display].

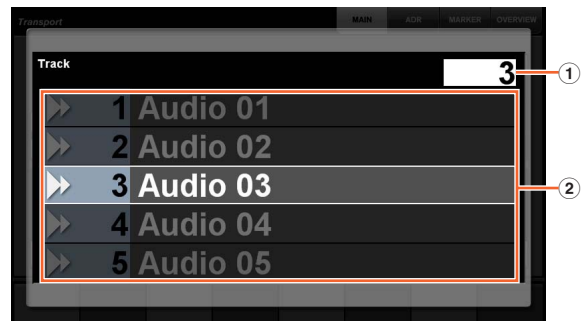

① Track

Inputs the track number.


② Track List

Displays the track list. Selected candidate tracks are highlighted.

When the Select Track pop-up window is shown, the [input keys] have the following functions.

[Input keys]	Function
[0] – [9]	Inputs the track number to the input position.
[BACK SPACE]	Deletes the number at the input position.
[CLEAR]	Deletes all input numbers.
[SET]	Selects the Set mode (the button lights).
[PREV -]	Selects the previous track number.
[NEXT +]	Selects the next number.
[CYCLE .]	To select the additional track, input the number continuously after pressing this button.
[ESC]	Cancels the input then closes the pop-up window.
[ENTER]	Determines the input then closes the pop-up window.

GENERAL CONTROL Section

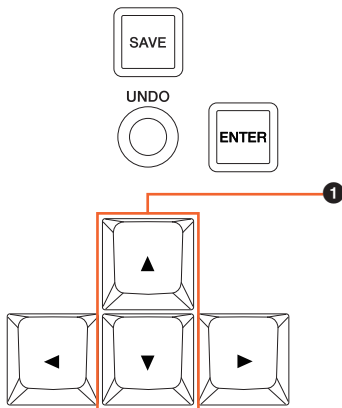


1 [▲]/[▼] (up/down)

To select multiple tracks, simultaneously hold down [SHIFT] and press [▲] or [▼].

Added some Zoom In and Zoom Out operations (Nuage Master)

Some Zoom-related operations were added.

JOG WHEEL Section

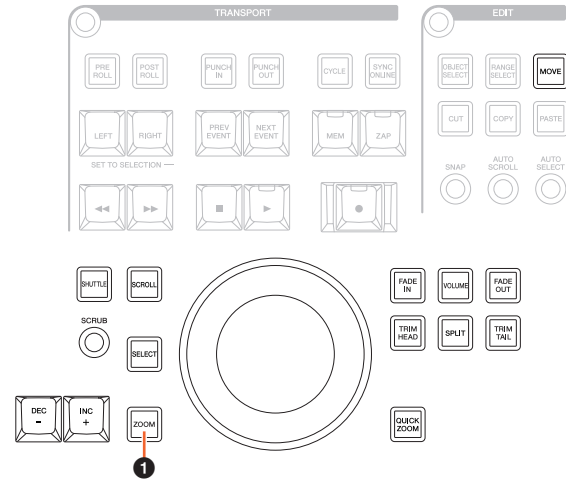


1 [ZOOM]

If you turn the [JOG WHEEL] while holding down [SHIFT] and [ALT], you can zoom in/out of waveform displays.

If you turn the [JOG WHEEL] while holding down [CTRL] and [ALT], the selected track height changes.

GENERAL CONTROL Section

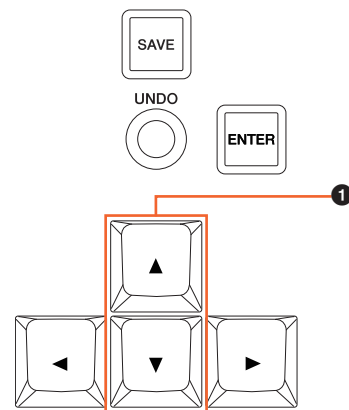

1 [▲]/[▼] (up/down)


If you press [▲] while holding down [CTRL], the selected track height becomes narrow.

If you press [▼] while holding down [CTRL], the selected track height becomes large.

Added some editing operations (Nuage Master)

The waveform offset can be changed, and the cut/copied event(s) can be pasted maintaining the position relative to the Project Cursor.

EDIT Section

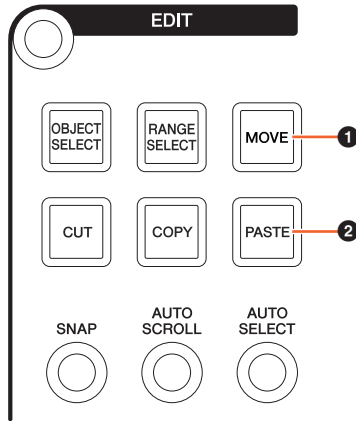

1 [MOVE]

When the Object Selection Tool is selected, if you turn the [JOG WHEEL] while holding down [SHIFT] and [ALT], the waveform offset of the selected track can be changed.

2 [PASTE]

When the Object Selection Tool is selected, if you press [PASTE] while holding down [SHIFT], the cut/copied event(s) can be pasted maintaining the position relative to the Project Cursor.

Added other various functions (Nuage Master)

SETUP Page



1 Disp Mode

Selects the display format of a [Channel name display].

2 Numeric Pad Input

Selects the input format when you set the Project Cursor position in the Locate function. If you set this to “Right,” you can input the Project Cursor position as a text.

DYN Page



1 Title Bar

Turns the “Bypass” switch that you touch on (lit) and off.

2 Parameters

Displays each processor's parameters. The parameters that you touched can be controlled with the [Multi function knob].

If you press the rightmost [Multi function knob] when “Comp” is selected, the related parameters are displayed in graph form. To return to the previous view, press the [Multi function knob] again.

TRANSPORT Page

MAIN Page



1 Lock/Unlock

Lock (lit) or unlock “CLICK” and “TEMPO.”

If you lock these parameters, they cannot be controlled.

Yamaha Pro Audio global website
<https://www.yamaha.com/proaudio/>
Yamaha Downloads
<http://download.yamaha.com/>

Manual Development Group
© 2013 Yamaha Corporation

Published 03/2018 MW-C2