

Audio Everywhere

FROM LISTEN
TECHNOLOGIES

MX5-1 INITIAL INSTALLATION AND SETUP

Figure 1



Figure 2



Figure 3



1. Connect the AE server to the local area network (LAN) via the ethernet port on the back of the server. The LAN should have at least one wireless access point (WAP) and a router, wireless router or a DHCP server. An ethernet cable has not been provided to make this connection.
2. Connect the audio sources to the AE server. This requires a RCA connection to the server. One six-foot cable has been provided for each channel. Custom cables with RCA jacks may be used as well.
3. Connect the power cable to the AE server. Use only the 5V DC power supply provided with the server. Use of other power supplies may cause damage to the server.

Figure 4

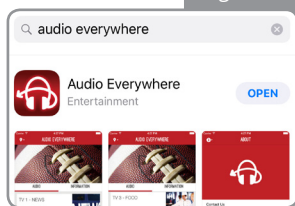


Figure 5


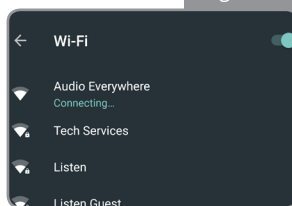


Figure 6

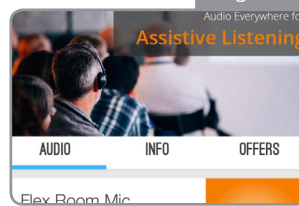

4. Download the Audio Everywhere app from the App Store or Google Play.
5. Connect the smart phone or tablet to the Wi-Fi network. Make sure that the AE server and smart device are connected to the same Wi-Fi network.
6. Launch the Audio Everywhere app from the smart phone or tablet. The app will auto connect and the screen in figure 6 will be showing.
7. Select the audio source/channel to stream. The audio should now be heard through the smart device speakers or attached headphones.

CLOUD SERVICE REGISTRATION AND LOGIN

The Cloud Server offers in-app marketing features including banner ads, documents and promotional videos, web-based remote setup and maintenance, and advanced customization.

1. Create an account for the cloud server by sending an email to support@listentech.com with the following information:

Last Name	Company Name
First Name	Venue Type
Phone	Address
E-mail	AE Server S/N

The AE server S/N is found on the bottom of the server and starts with "AEL4-...".
See figure 7

2. An e-mail message will be sent with the login credentials to <http://services.audioeverywhere.com> and a request to change the password. See figure 8
3. Type in services.audioeverywhere.com into your web browser and hit enter. The login screen will be shown. See figure 9
4. Type in your login credentials (e-mail and password) and click on "Sign in". The Cloud Service main dashboard landing page will be shown. See figure 10

For detailed information on and use of the Cloud Service, please refer to the Audio Everywhere Cloud Services User Manual located on listentech.com under Products/WiFi/Audio Everywhere/Servers. Click on any server and then click on "Support Info". A link to the manual will be shown.

Figure 7



Figure 8

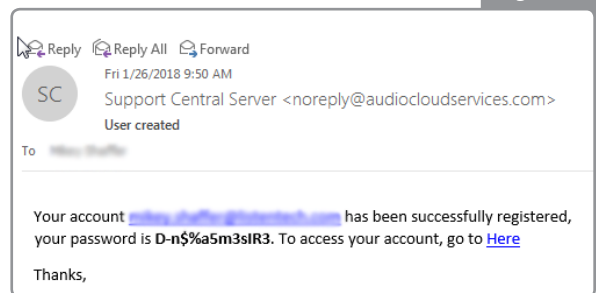


Figure 9

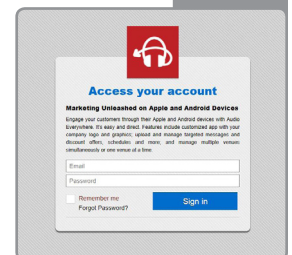


Figure 10

